


Designed for DIY...

Our Enjoy Roller Blinds are designed to be installed by you, without specialist fitters, even if you don't have much DIY experience.


Please read each page of this guide carefully during installation, following along one step at a time.

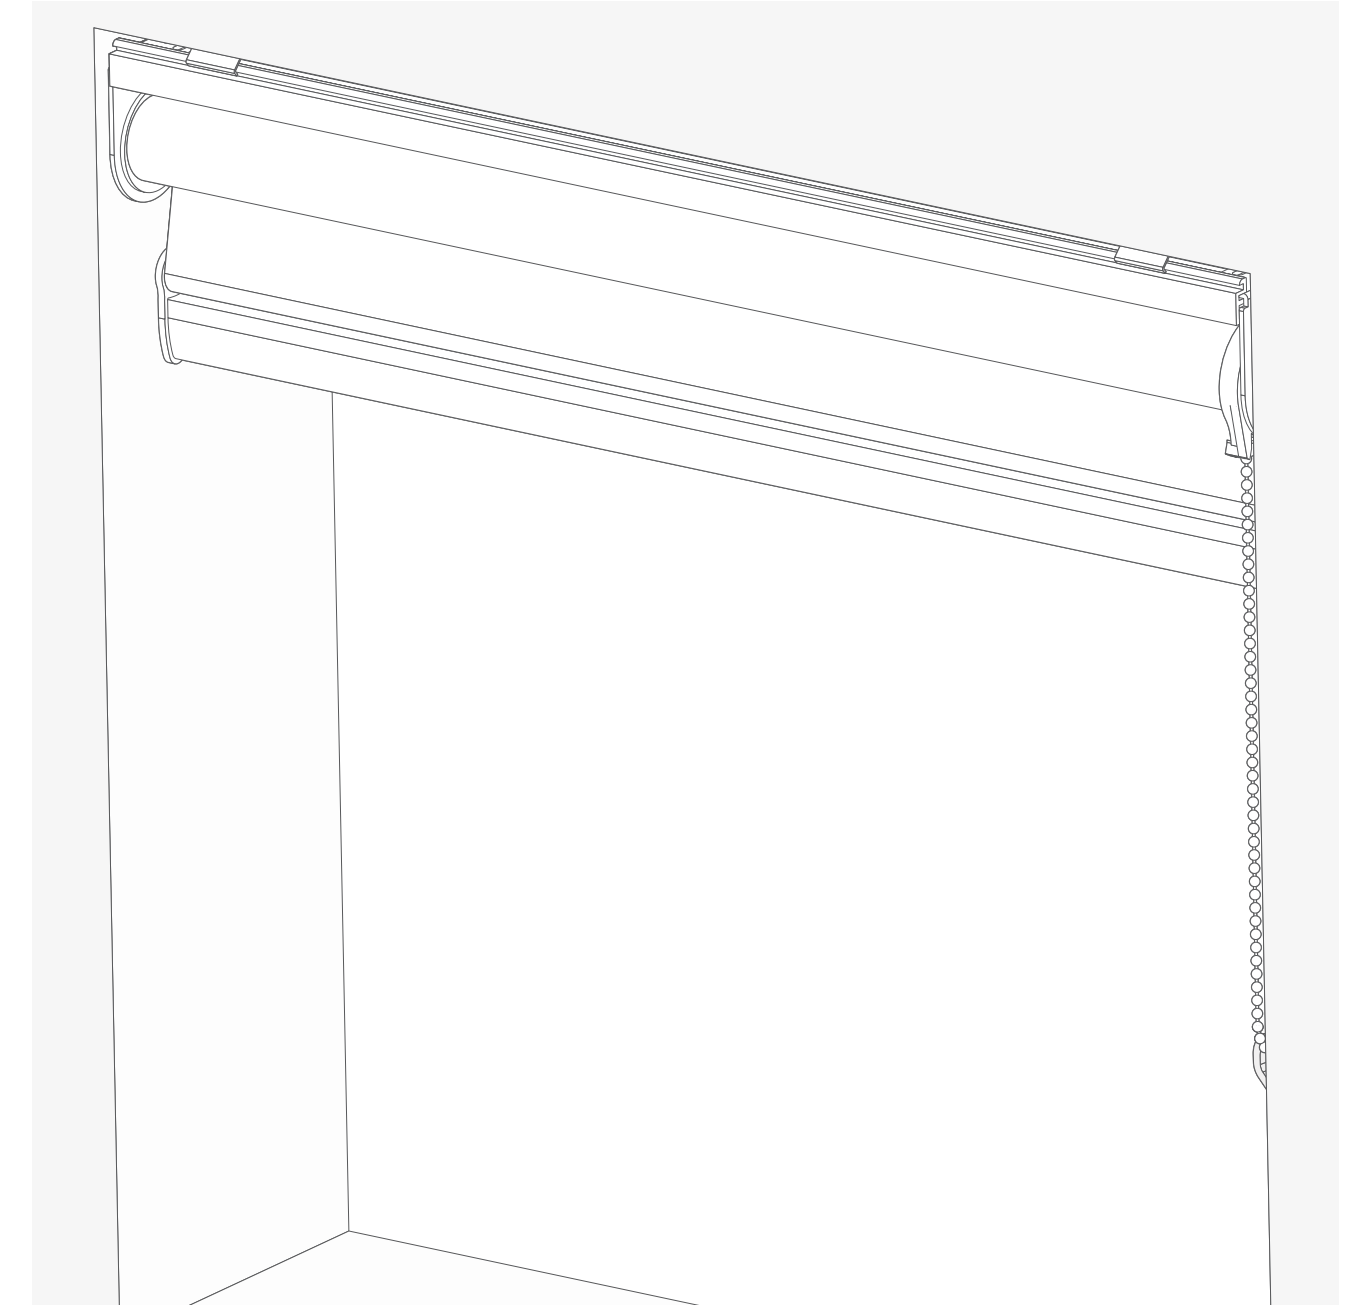

Tools required for this install:

- Handheld drill
- 4mm masonry drill bit
- Phillips screwdriver / Phillips driver bit
- Mallet / hammer
- Pen / pencil


Parts contained in your order:

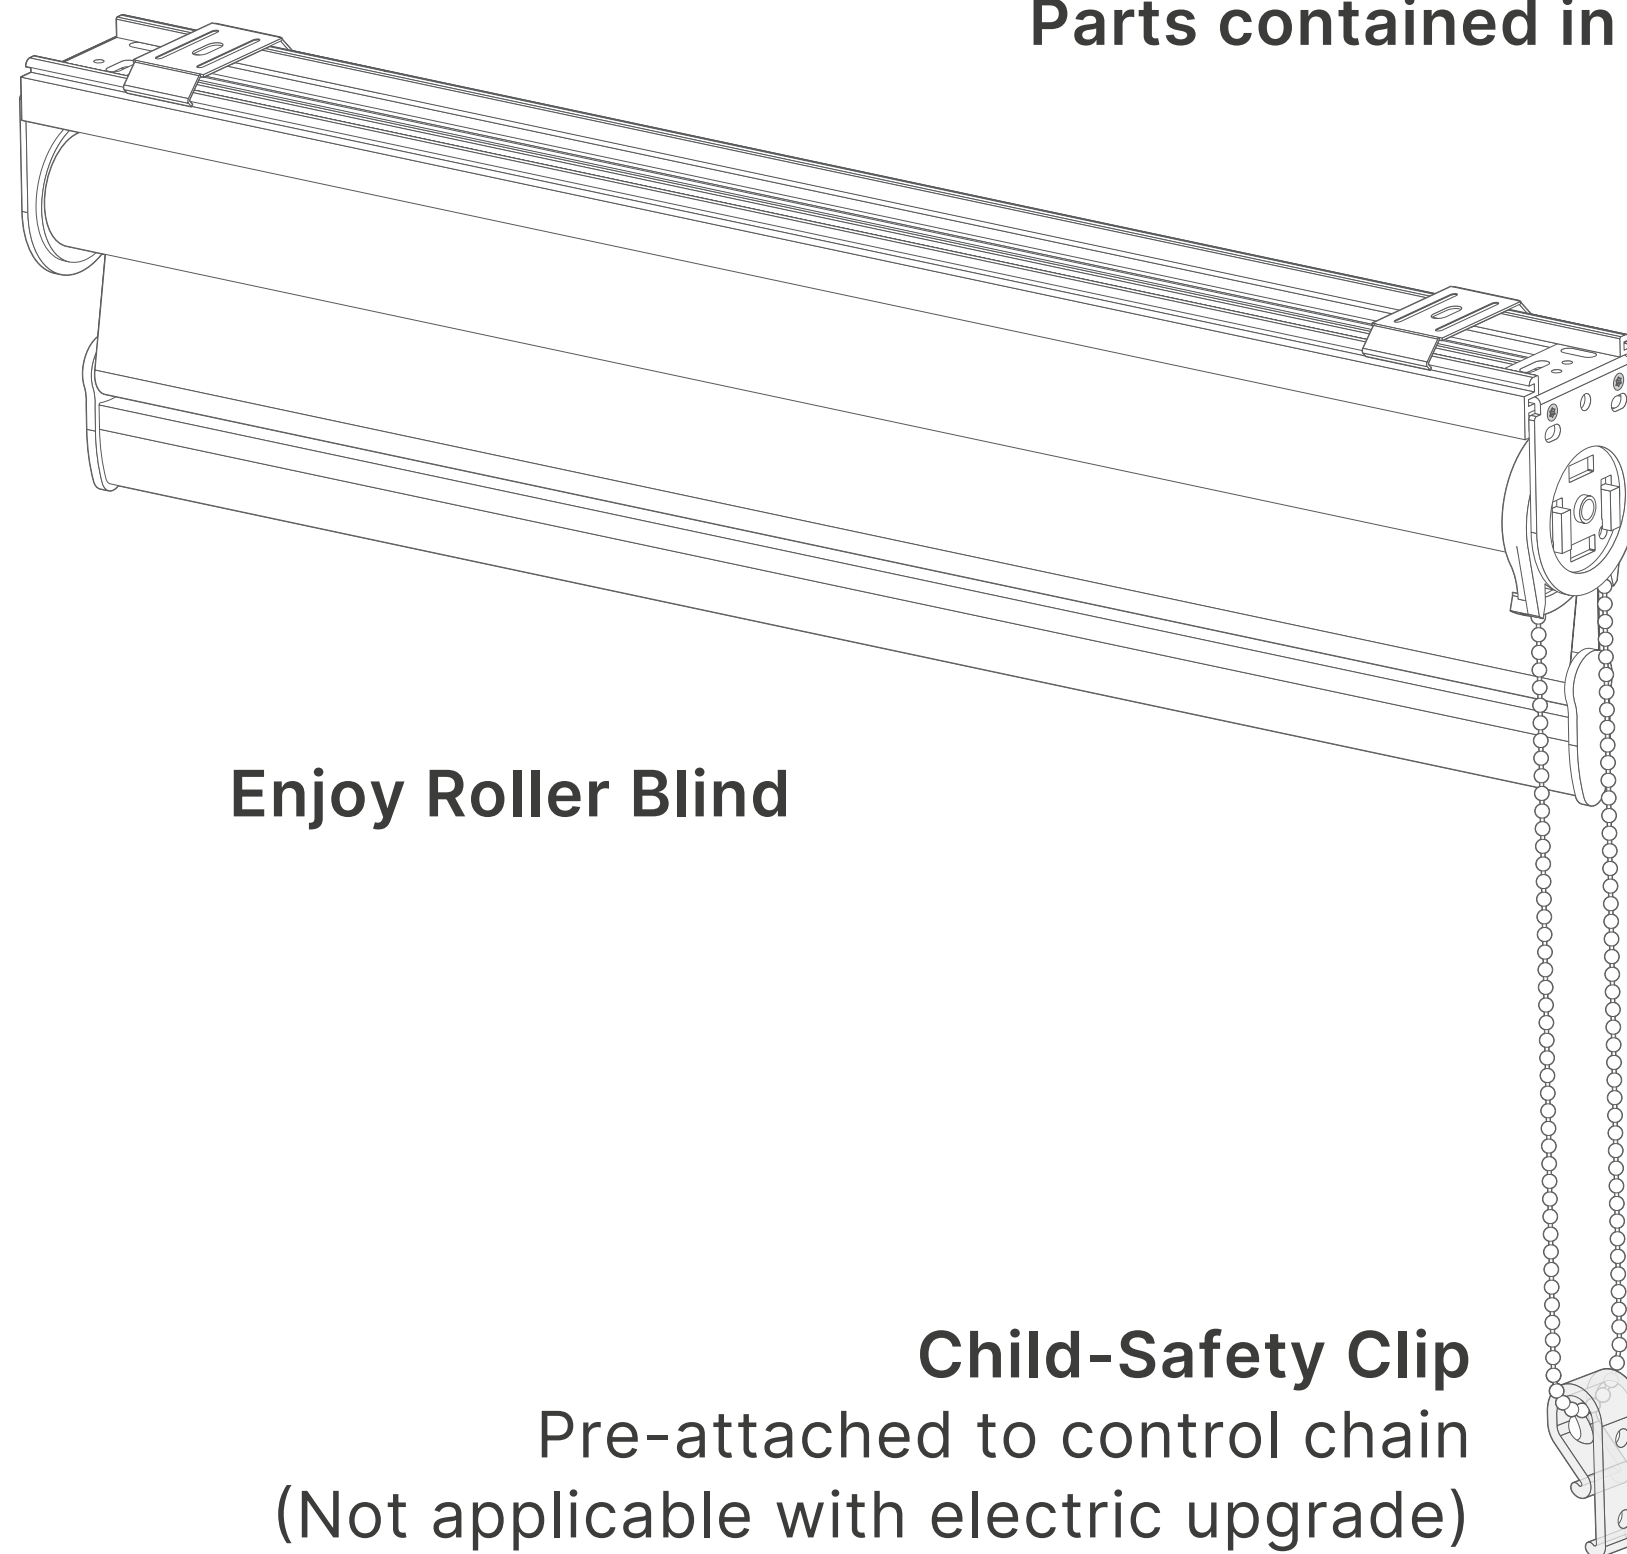

Enjoy Roller Blind


Child-Safety Clip

Pre-attached to control chain
(Not applicable with electric upgrade)

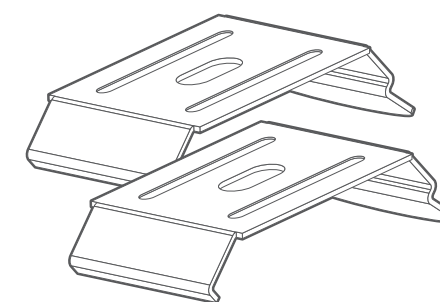

Mounting brackets

Multiple per blind,
based on width

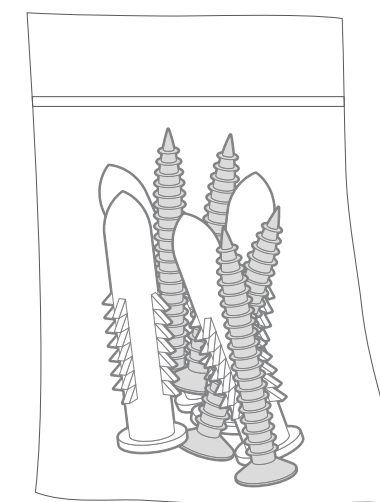


Screws & wall plugs

x1 per mounting bracket

Additional parts for electric upgrade

If you didn't upgrade to electric, please skip to page 5


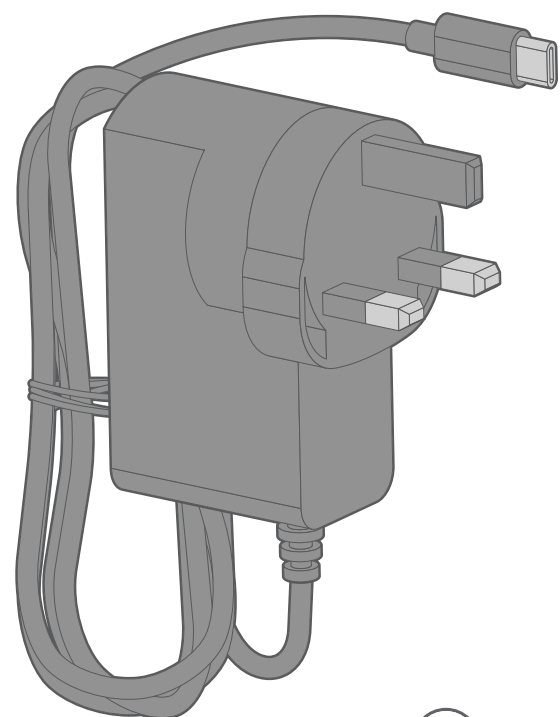


USB-C Plug-In Charger
As standard




SmartView ID Tag
(Electric upgrade only)

USB-C Solar Charger
Upgrade only

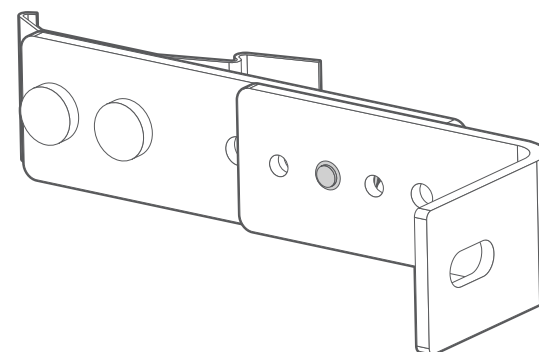
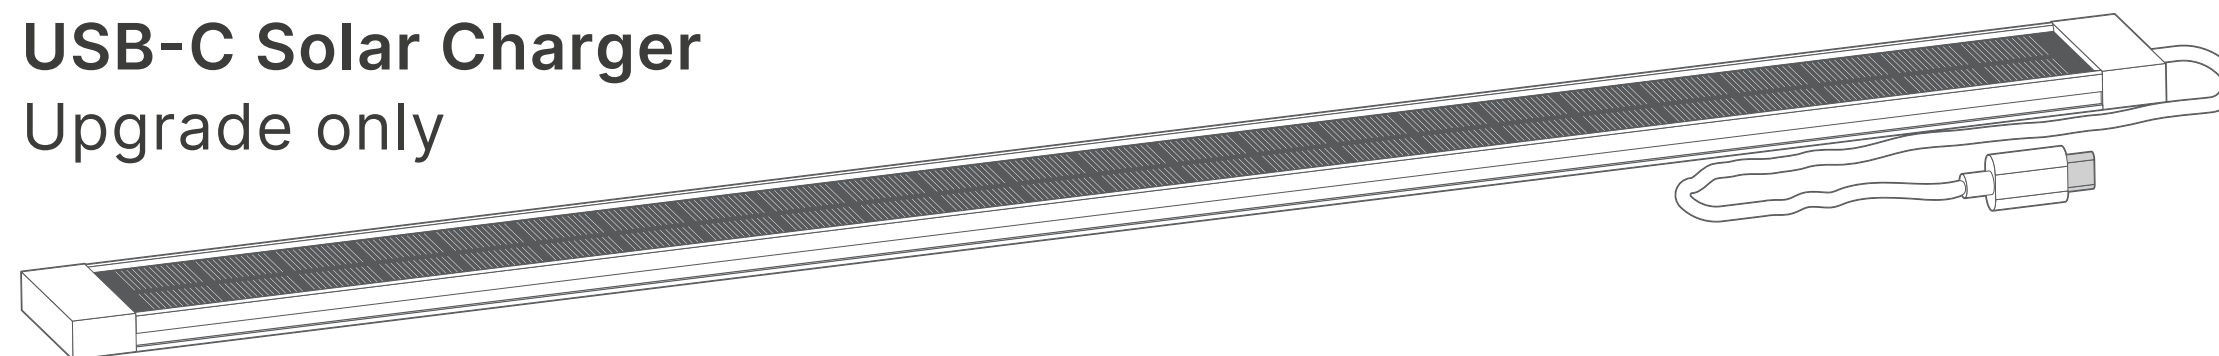


Solar Charger Mounting Brackets
x2 Per Solar Charger

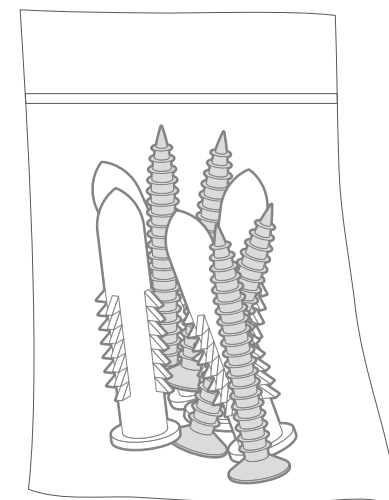

Screws & wall plugs
x2 per mounting bracket

Parts & tools required for this section:

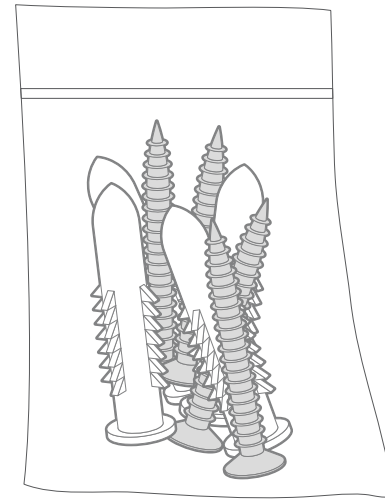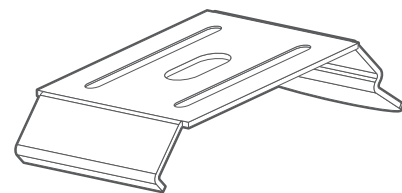


Parts

- Mounting brackets
- Screws & wall plugs

Tools

- Handheld drill
- 4mm masonry drill bit
- Phillips screwdriver / Phillips driver bit
- Mallet / hammer
- Pen/pencil


First, choose the method you'll be using to install your brackets:

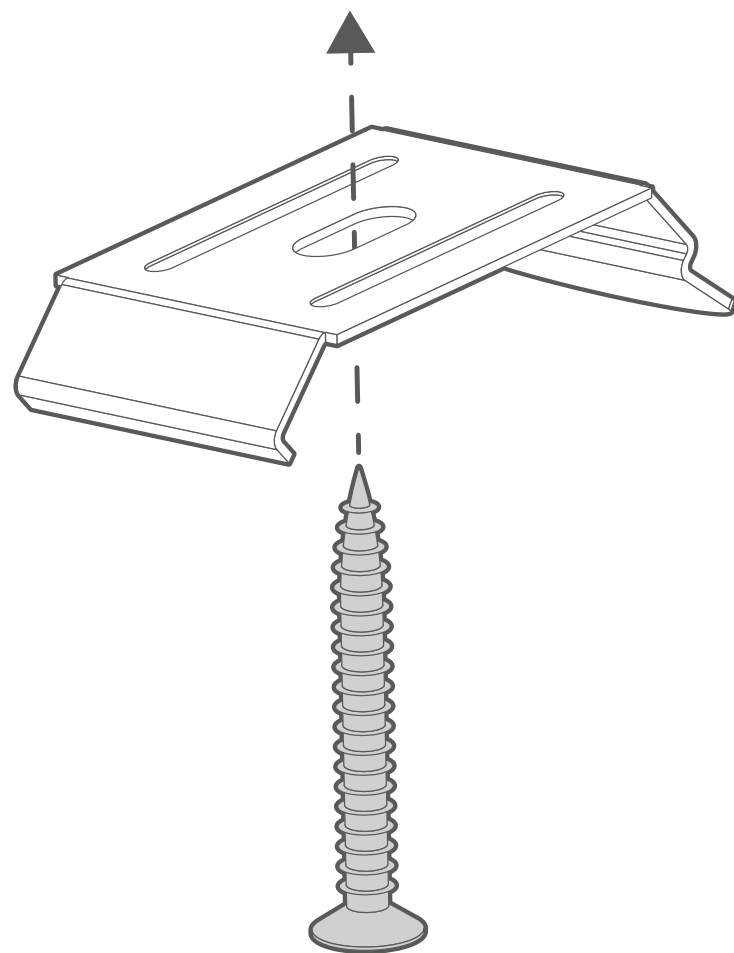

Top-fixing

Fitting inside the recess

The brackets can be screwed to the top of the recess, or to the wall at each side.


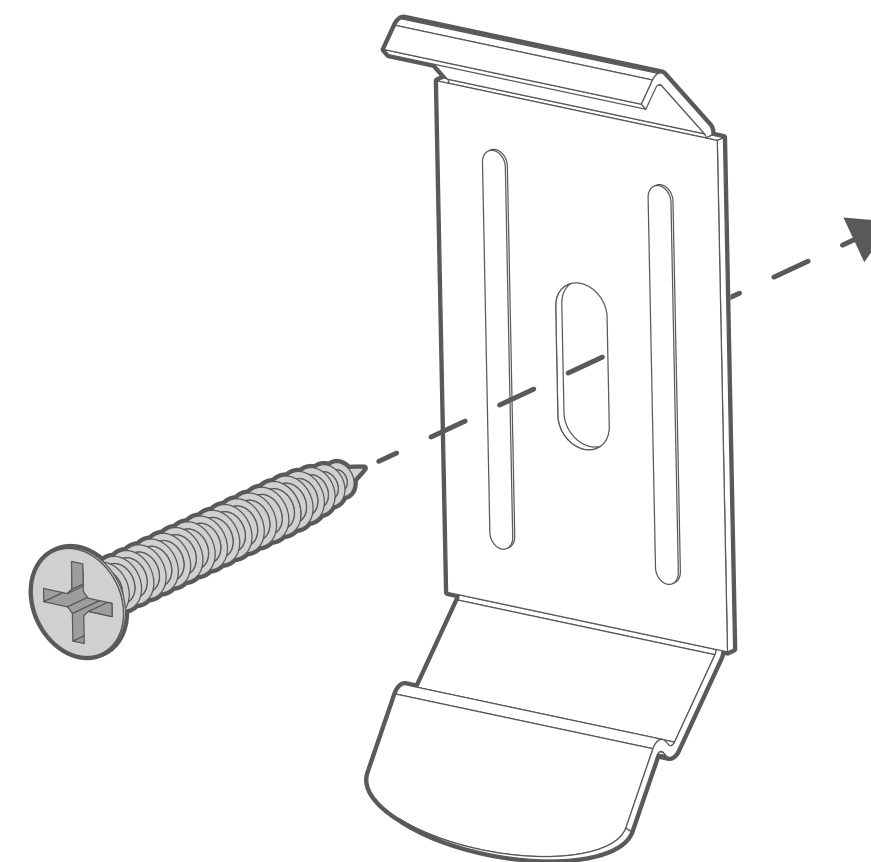


Face-fixing

Fitting outside the recess

The brackets can be screwed to the wall above the recess.

Top-fixing the brackets:

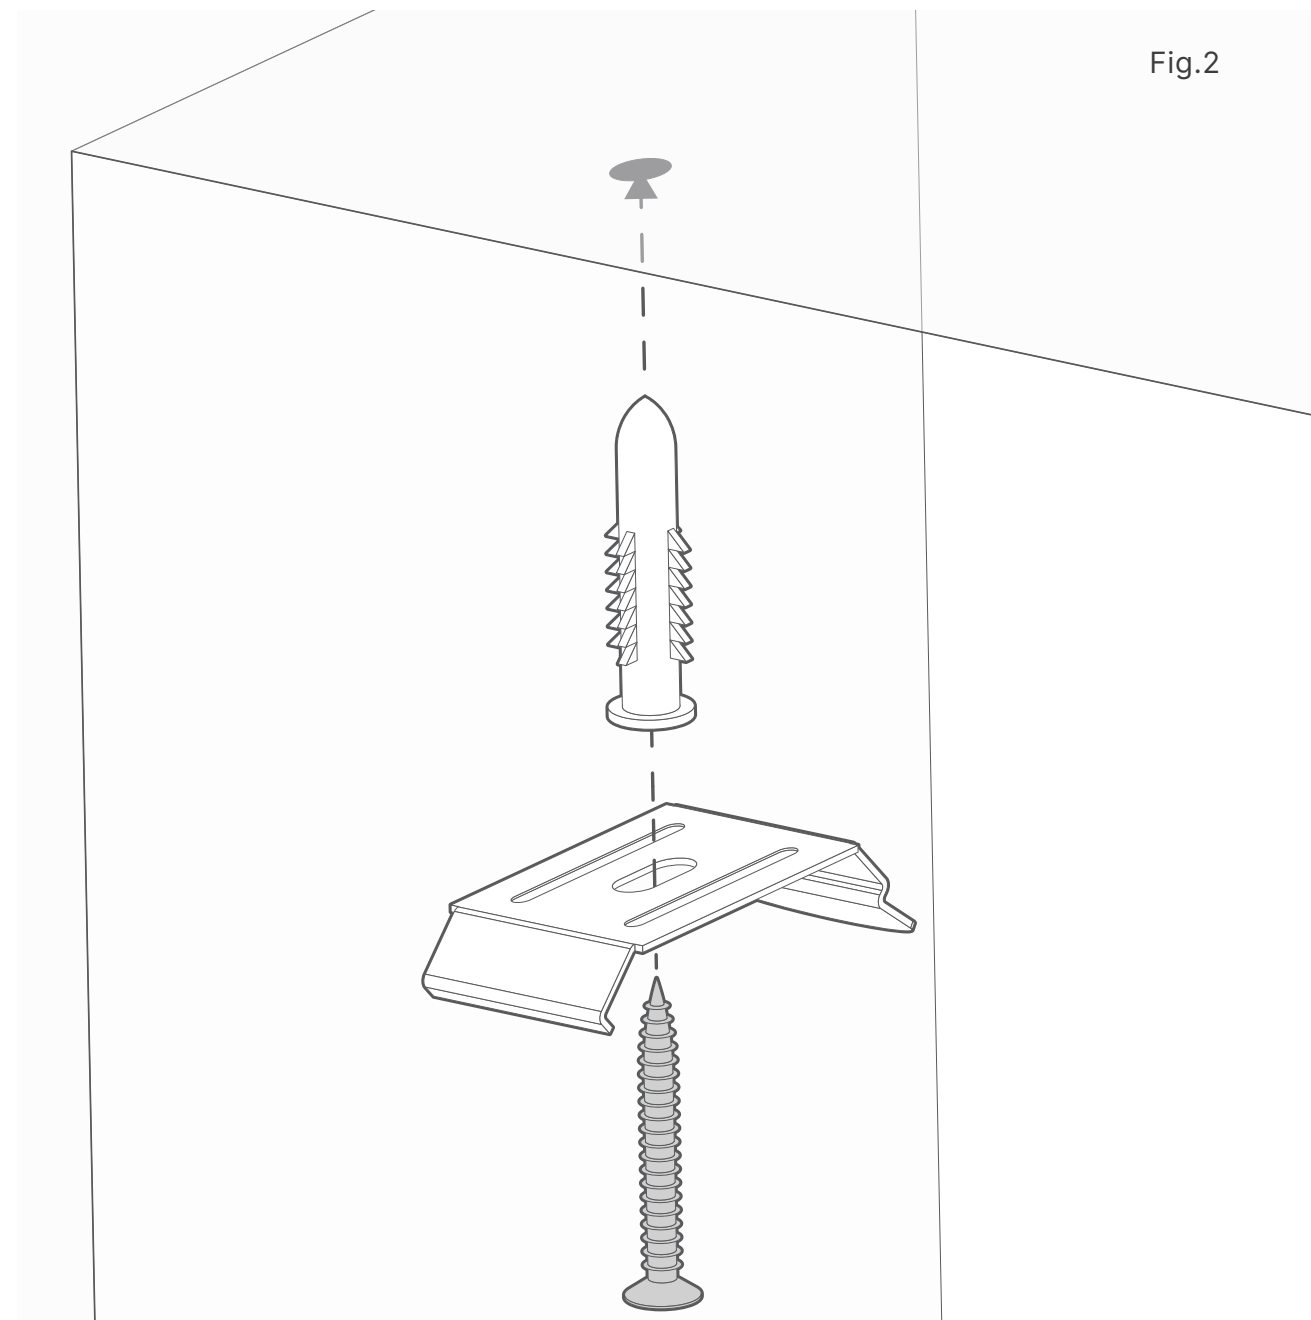
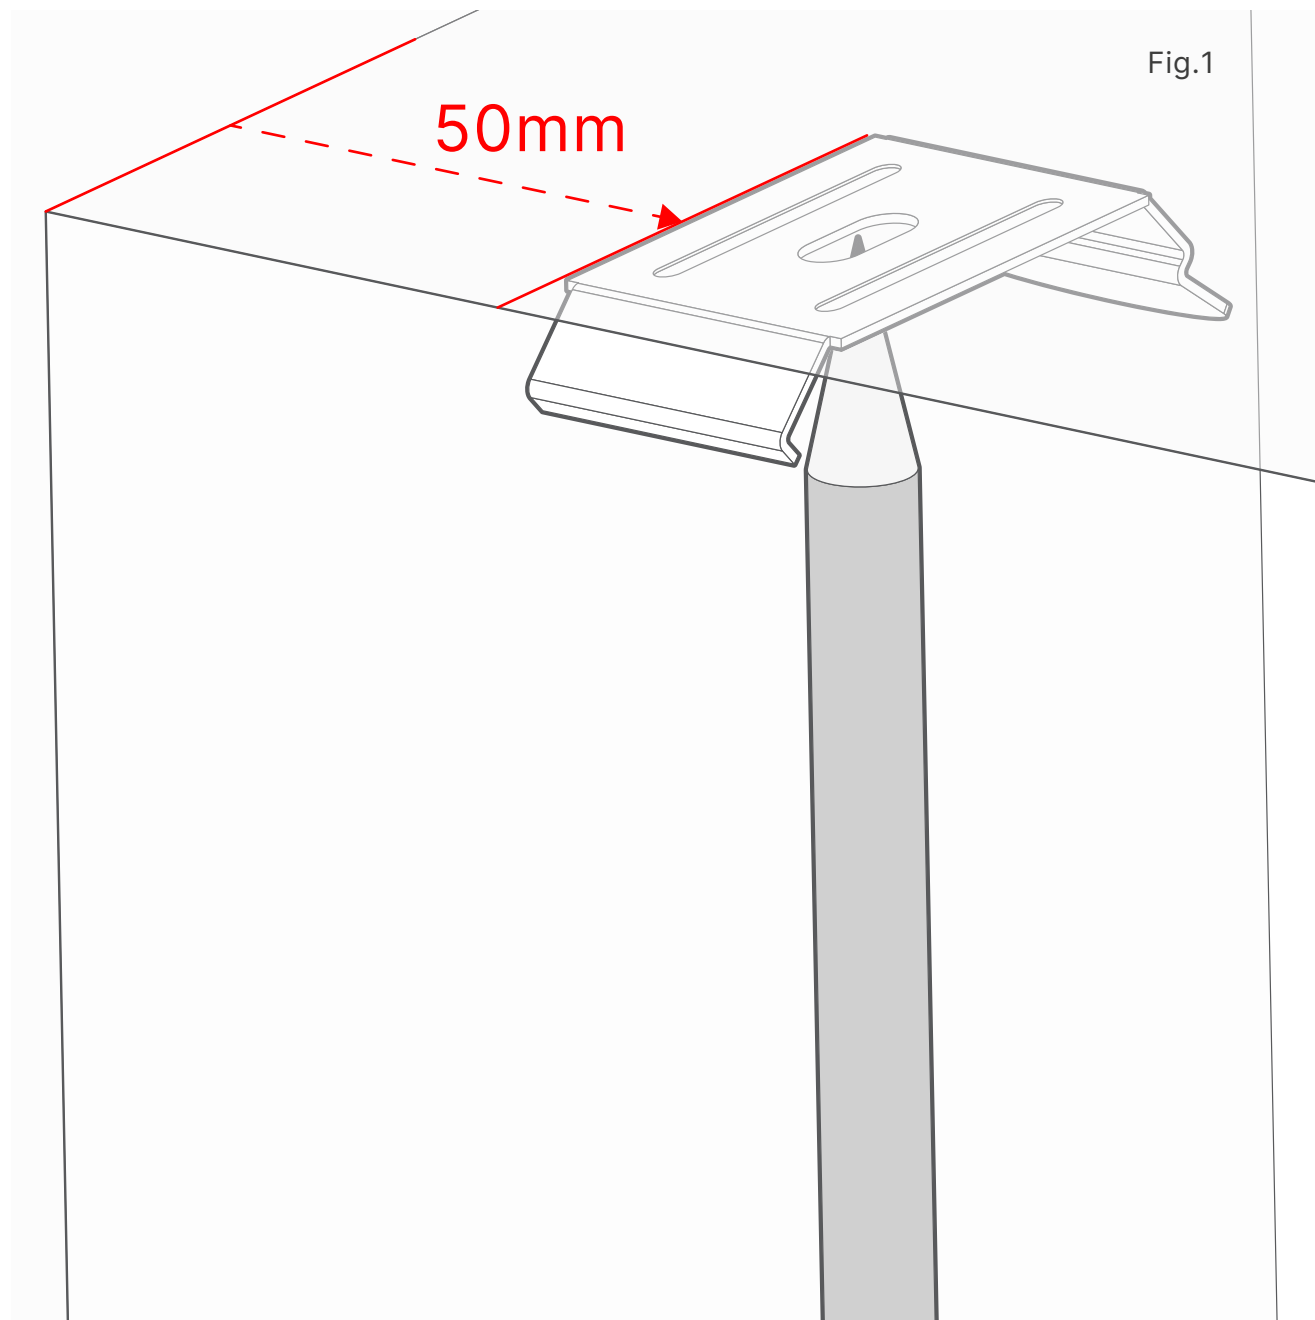


Hold the brackets in position up against the top of the recess and mark the locations of the screw holes on each bracket with a pen or pencil (Fig.1).

The far left and right brackets should be positioned around 50mm in from the sides of the recess, with any others spaced evenly between.

Drill a hole at each mark, then use the screws and wall plugs provided to secure the brackets in place (Fig.2).

Face-fixing the brackets:

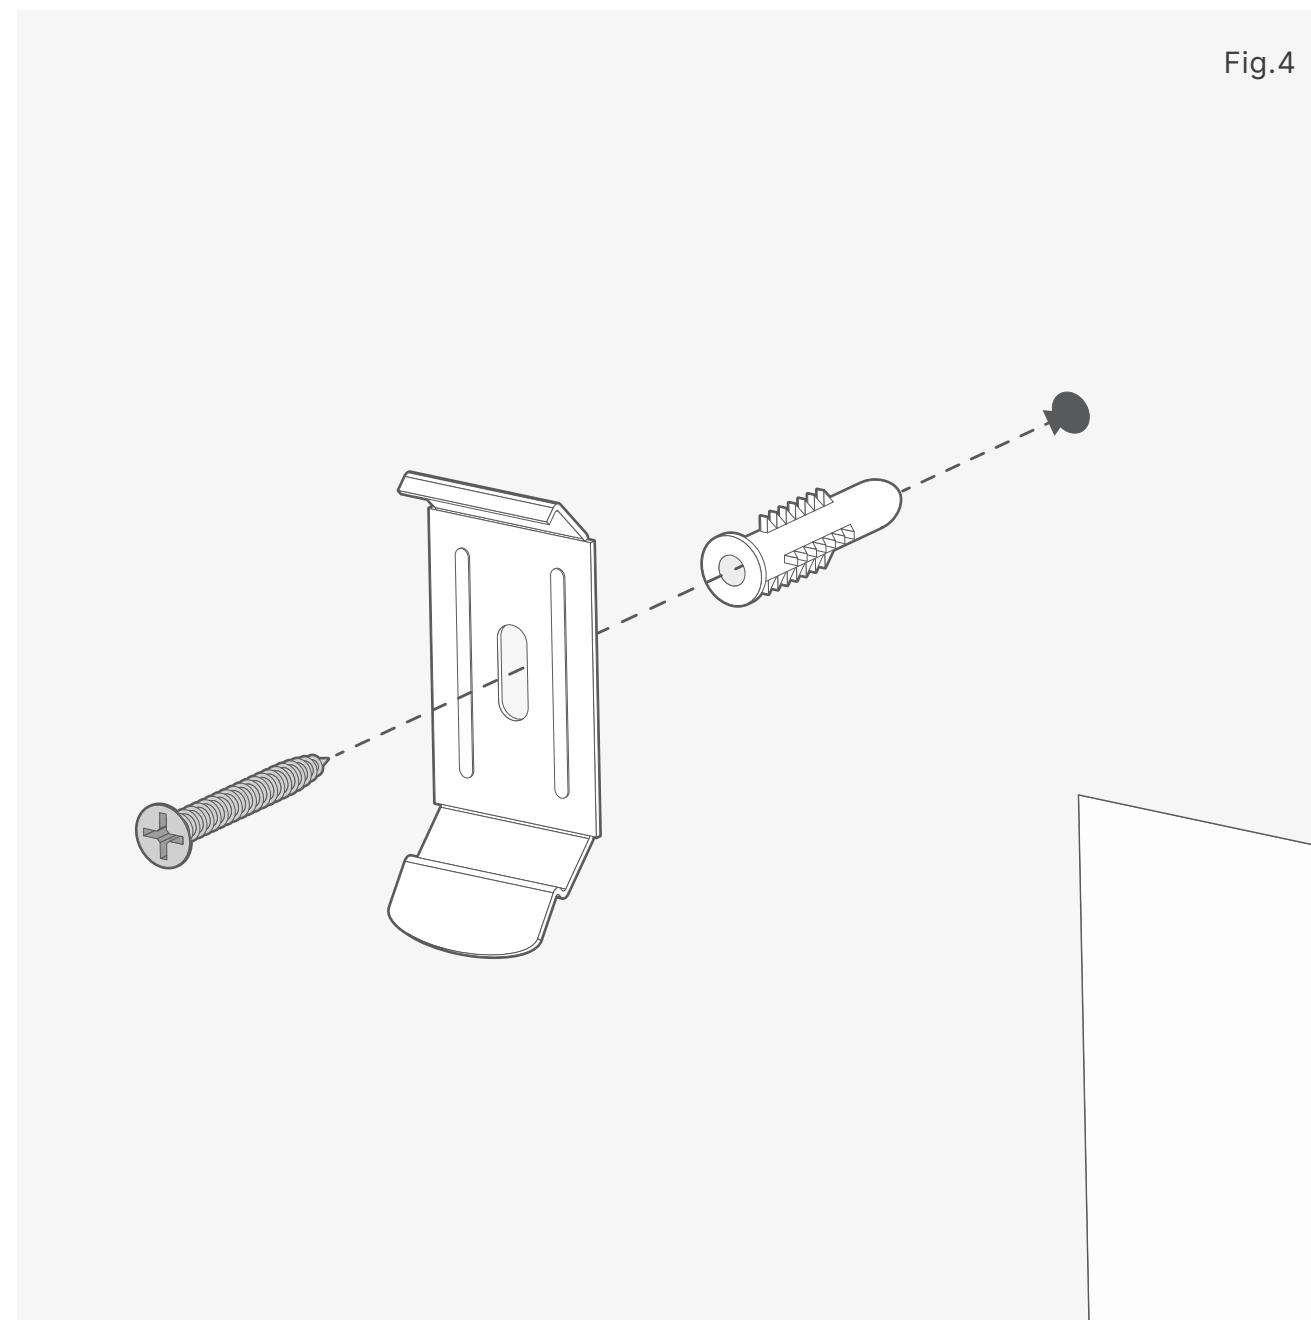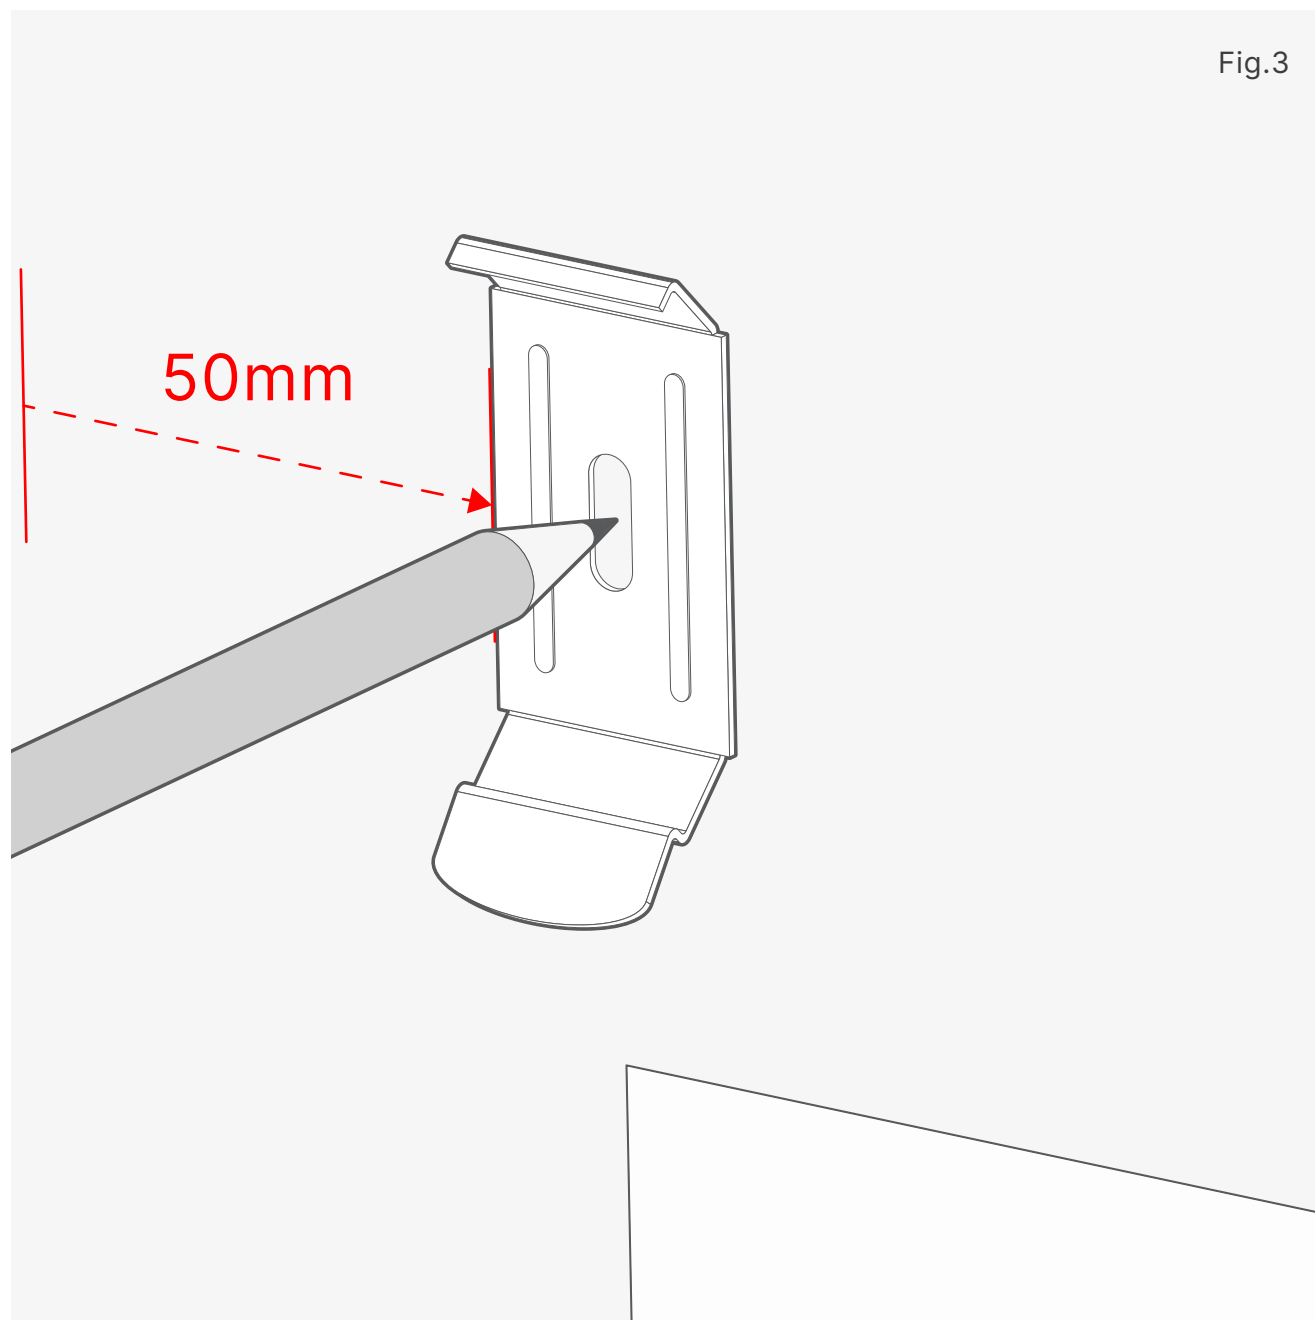


Hold the brackets in position up against the wall and mark the locations of the screw holes on each bracket with a pen or pencil (Fig.3). The bracket locations should match the top corners of where you took your measurements originally, minus around 50mm.

Drill a hole at each mark, then use the screws and wall plugs provided to secure the brackets in place (Fig.4).

Note: when positioning the brackets, take a moment to make sure that they're level, and that they're an equal distance each side from the edge of the recess.

Top-fixed brackets:

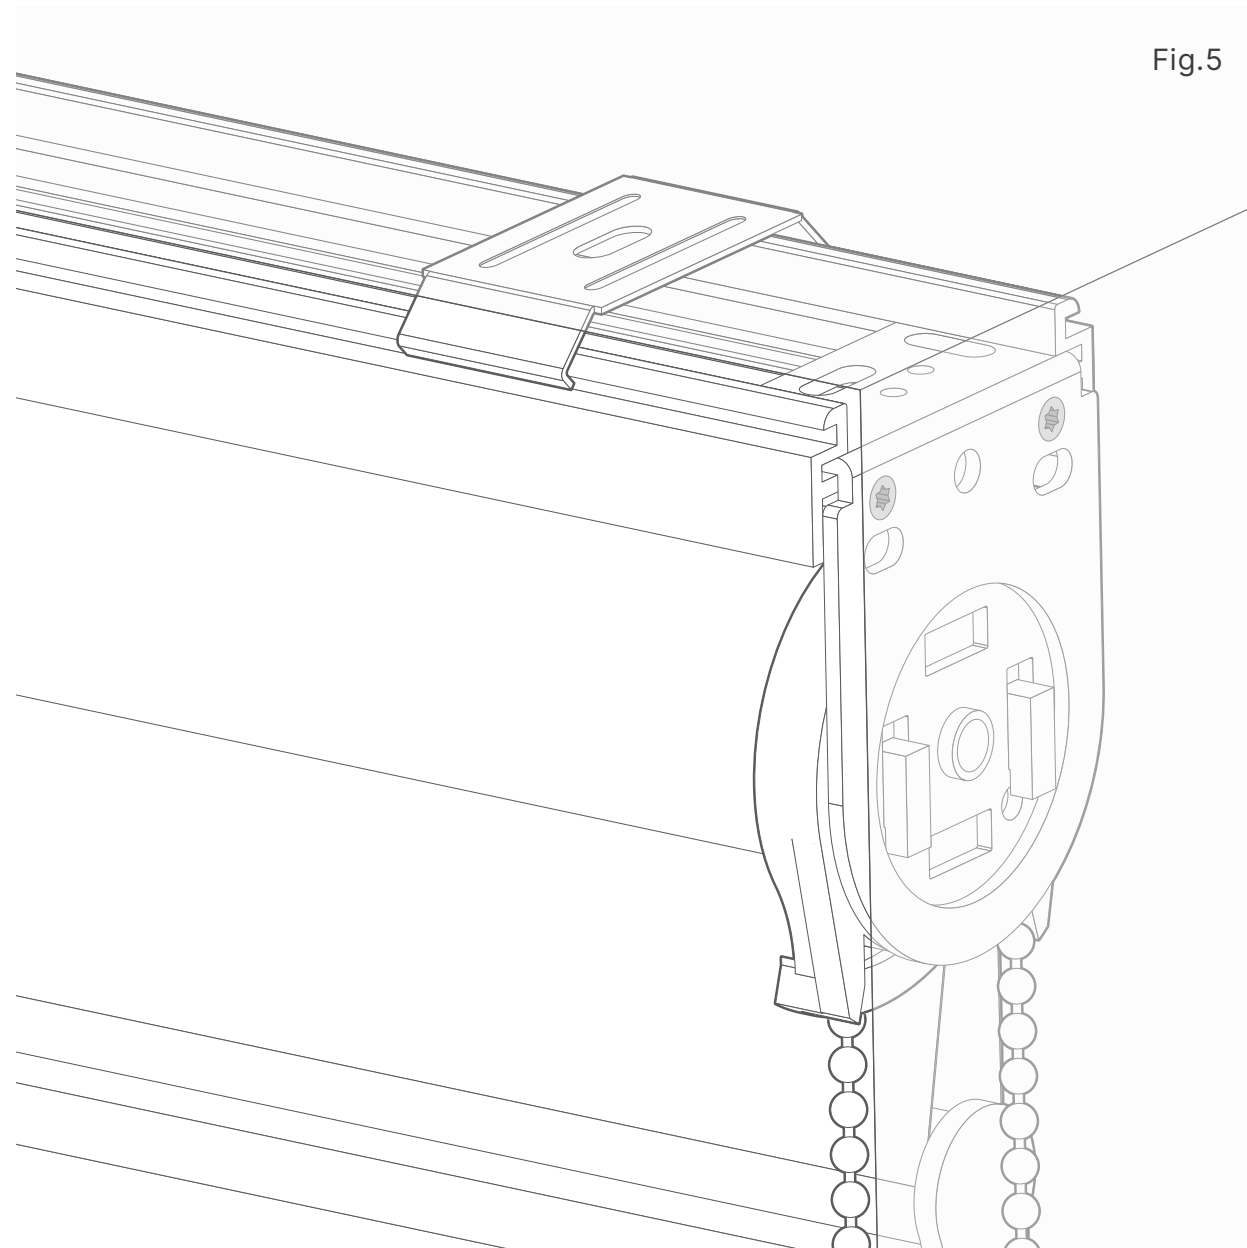

Side-view



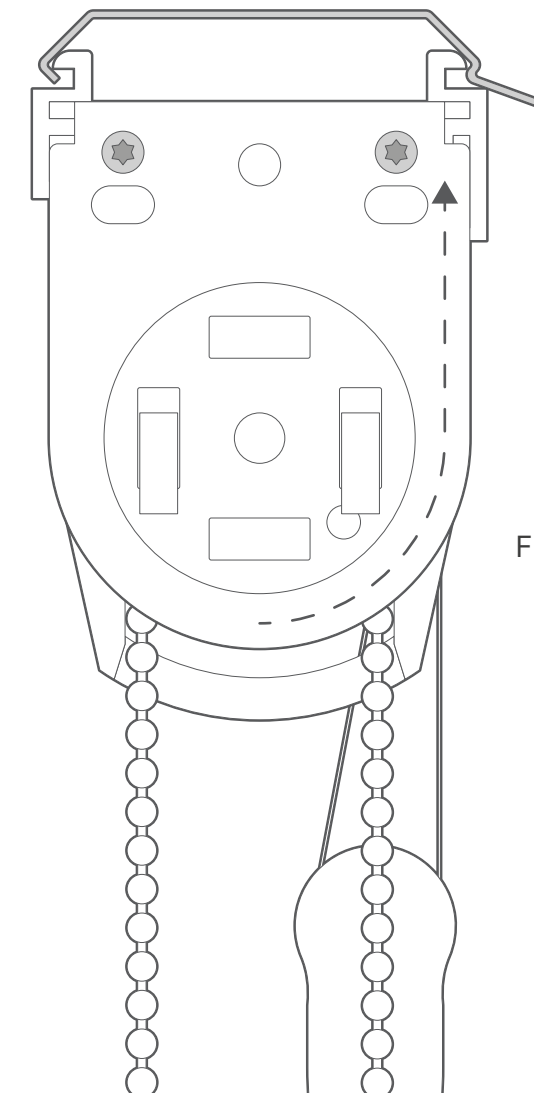


Fig.5 shows the blind installed into a top-fixed bracket.

Hold the blind up to the brackets, tilted slightly back, and rest the front lip along the top of the headrail in the front hook of the bracket (Fig.6).

Raise the back of the blind and push the headrail up until it snaps into the back hook of the bracket (Fig.7).

Face-fixed brackets:

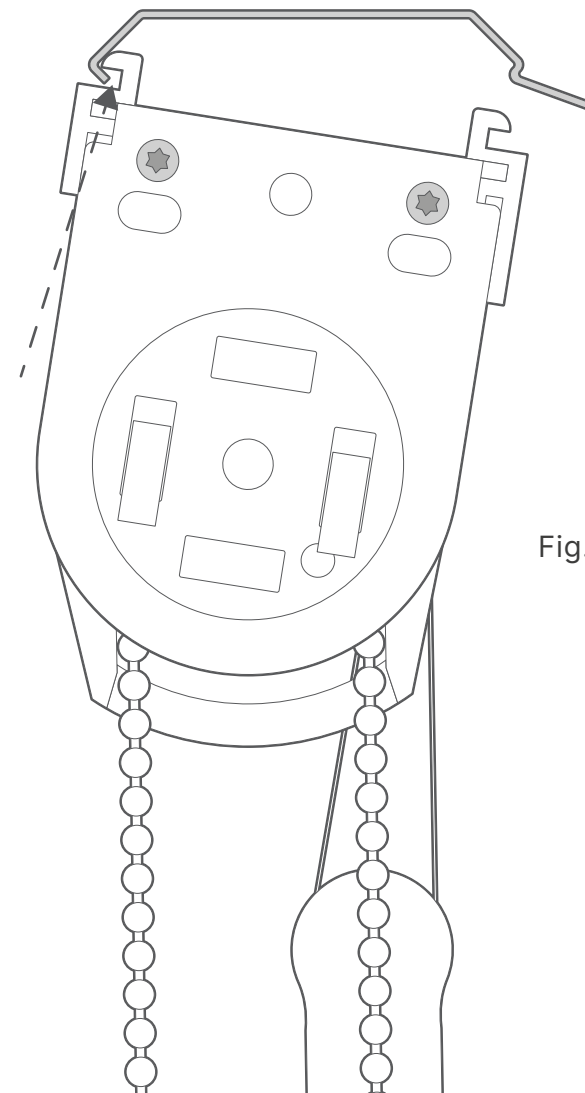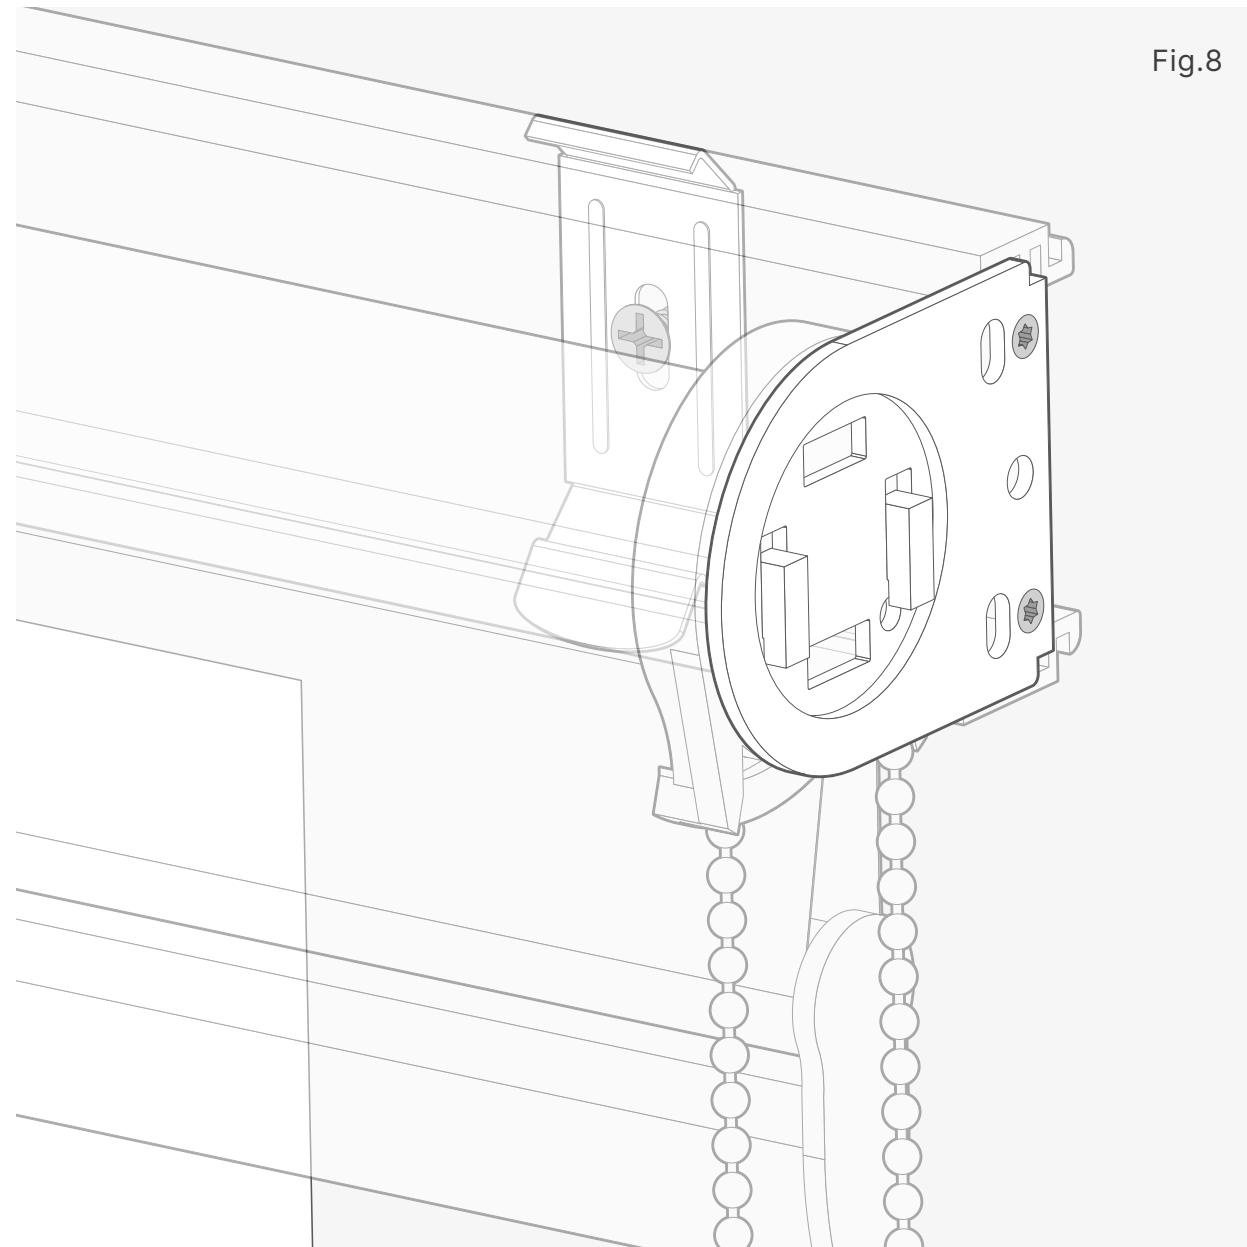

Side-view


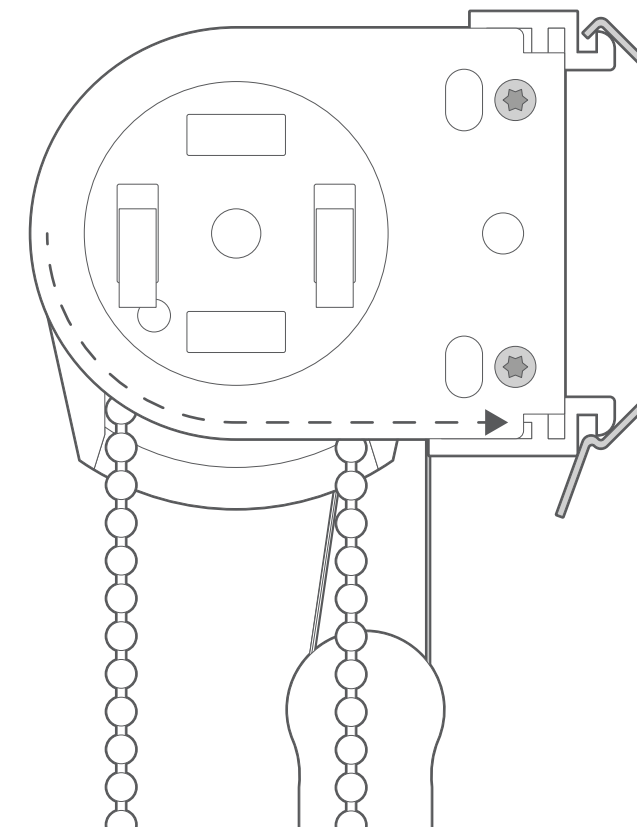


Fig.8 shows the blind installed into a face-fixed bracket.

Hold the blind up to the brackets, the top of the headrail facing the wall and tilted slightly back, and rest the front lip along the top of the headrail in the top hook of the bracket (Fig.9).

Push the blind back against the bracket until it snaps into place (Fig.10).

If you chose our SmartView electric upgrade when you ordered, please skip to section 5.

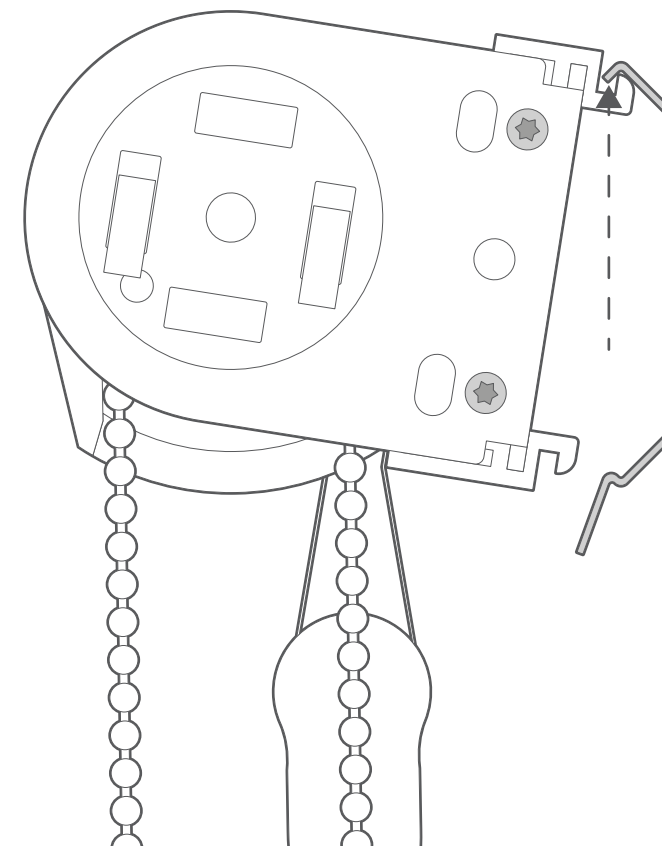


Young children can be strangled by loops in pull cords, chains, tapes and inner cords that operate the product.

To avoid strangulation and entanglement, keep cords out of the reach of young children. Cords may become wrapped around a child's neck.

Move beds, cots and furniture away from window covering cords.


Do not tie cords together. Make sure cords do not twist and create a loop.

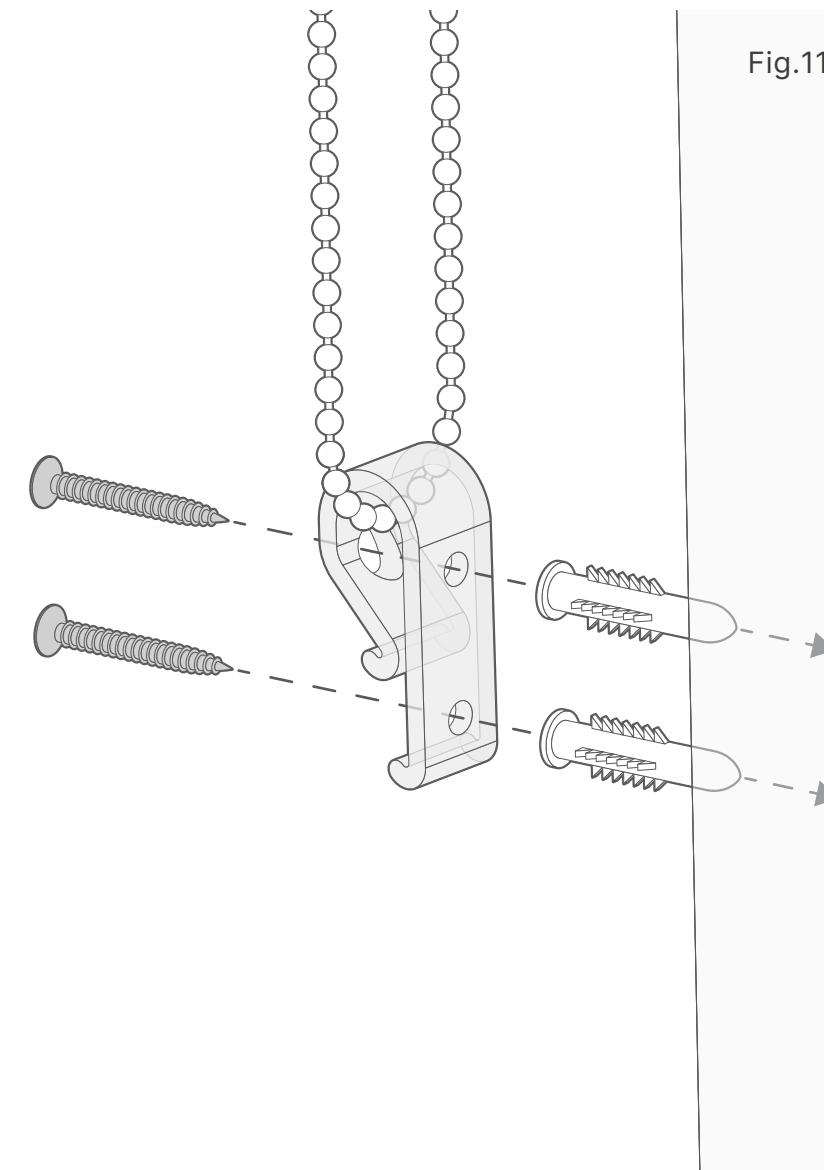

A child safety clip is provided, which is clipped onto the control cord already.


Holding the cord taut, mark the position of the clip on the wall with a pen or pencil, then drill your screw holes and use the fixings provided to secure the clip in place (Fig.11).

And that's it! Your beautiful new blind is installed and ready to enjoy...

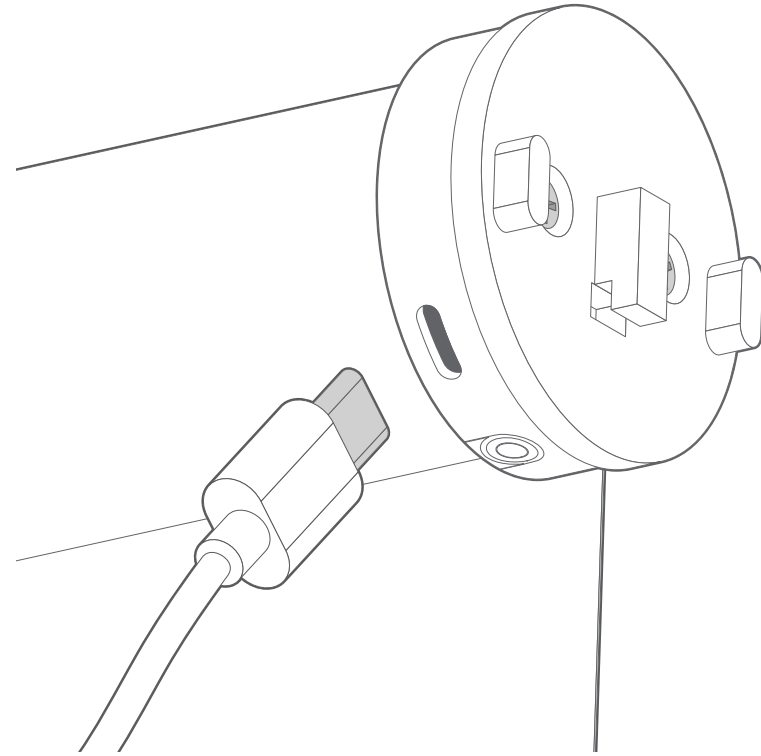


Once your blinds are installed we recommend plugging in the motor for each, to allow it to fully charge before use. Plug the charging cable (included) into the motor charging port and allow to charge until the LED on the charger plug turns green. Do not over-charge, as this can damage the battery.


If you chose our solar charging upgrade, please continue to the next page of this guide.

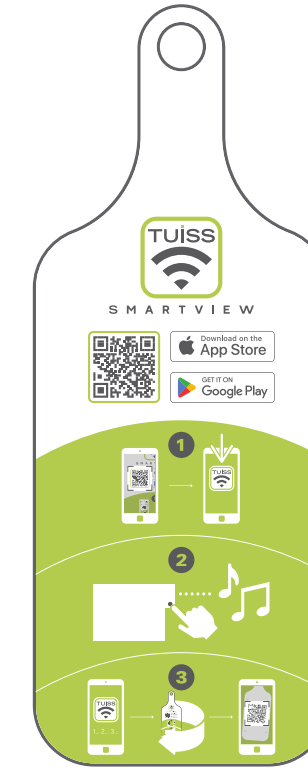


On the front of the swing tag that comes with each blind, you'll find a handy QR code you can scan with your phone. Scan this to download the SmartView app - you'll be setting up your blinds in moments!

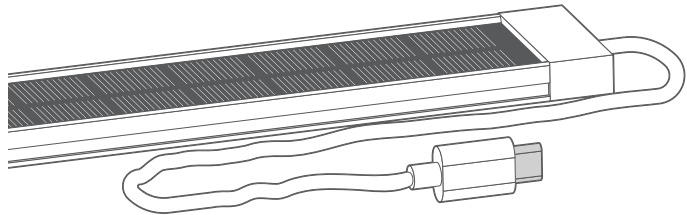

USB-C Solar Charger
Upgrade only

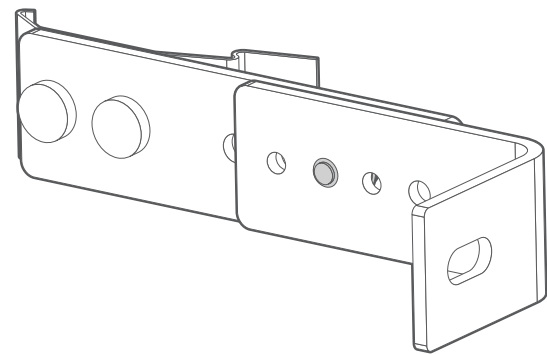

**Solar Charger
Mounting Brackets**
x2 Per Solar Charger

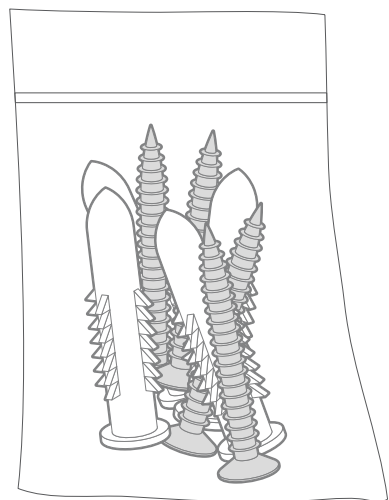

Screws & wall plugs
x1 per mounting bracket

Parts & tools required for this section:


Parts

- Mounting brackets
- Screws & wall plugs

Tools


- Handheld drill
- 4mm masonry drill bit
- Phillips screwdriver / Phillips driver bit
- Mallet / hammer
- Pen/pencil

First, choose your fixing method:

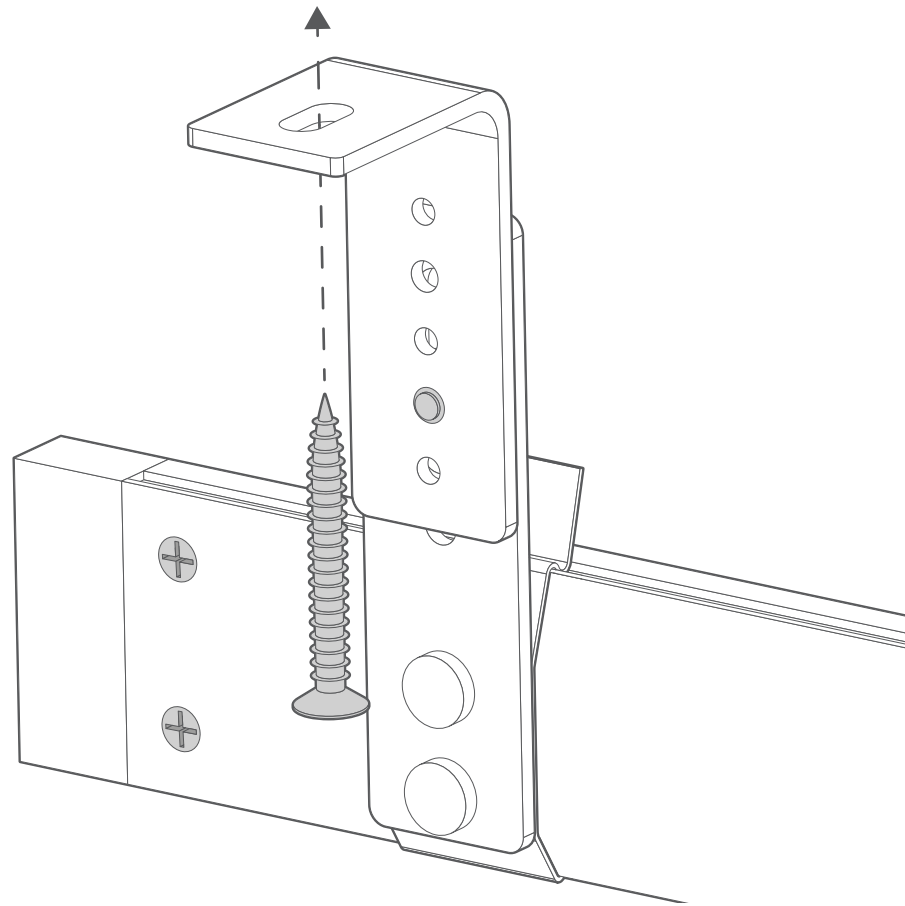

Top-fixing



Screw the charger's mounting brackets directly into the top of the recess. The charger will rest horizontally across the top of the window.

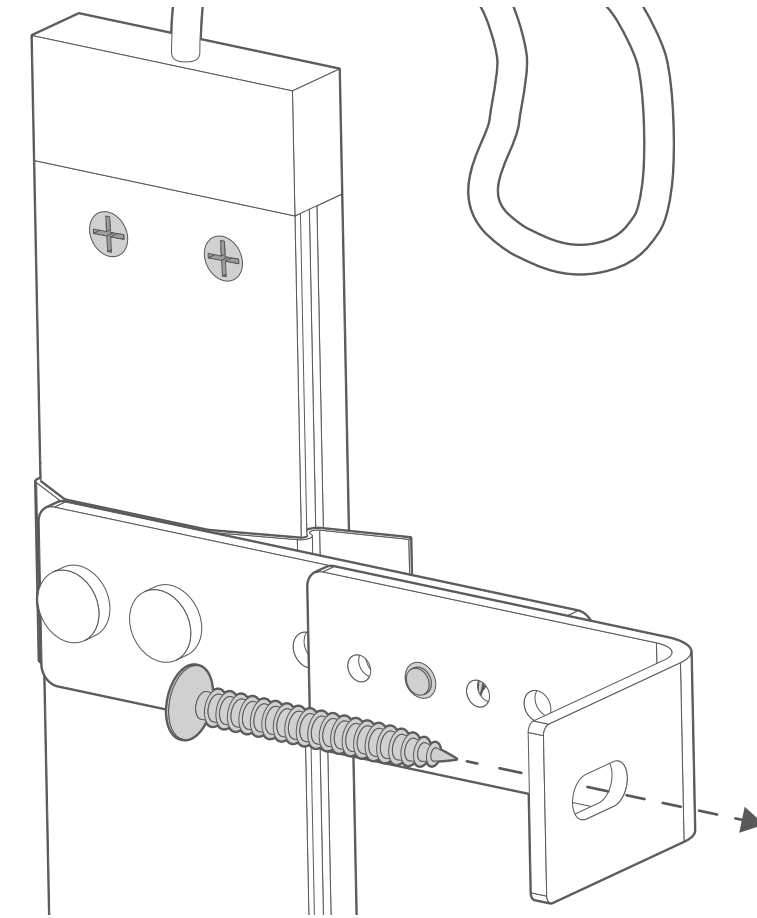

Side-fixing

Screw the mounting brackets into the side wall of the recess, so that the charger rests vertically at the side of the blind. Make sure that the brackets are installed on the side closest to the blind's motor in this case.



Top-fixing the brackets:

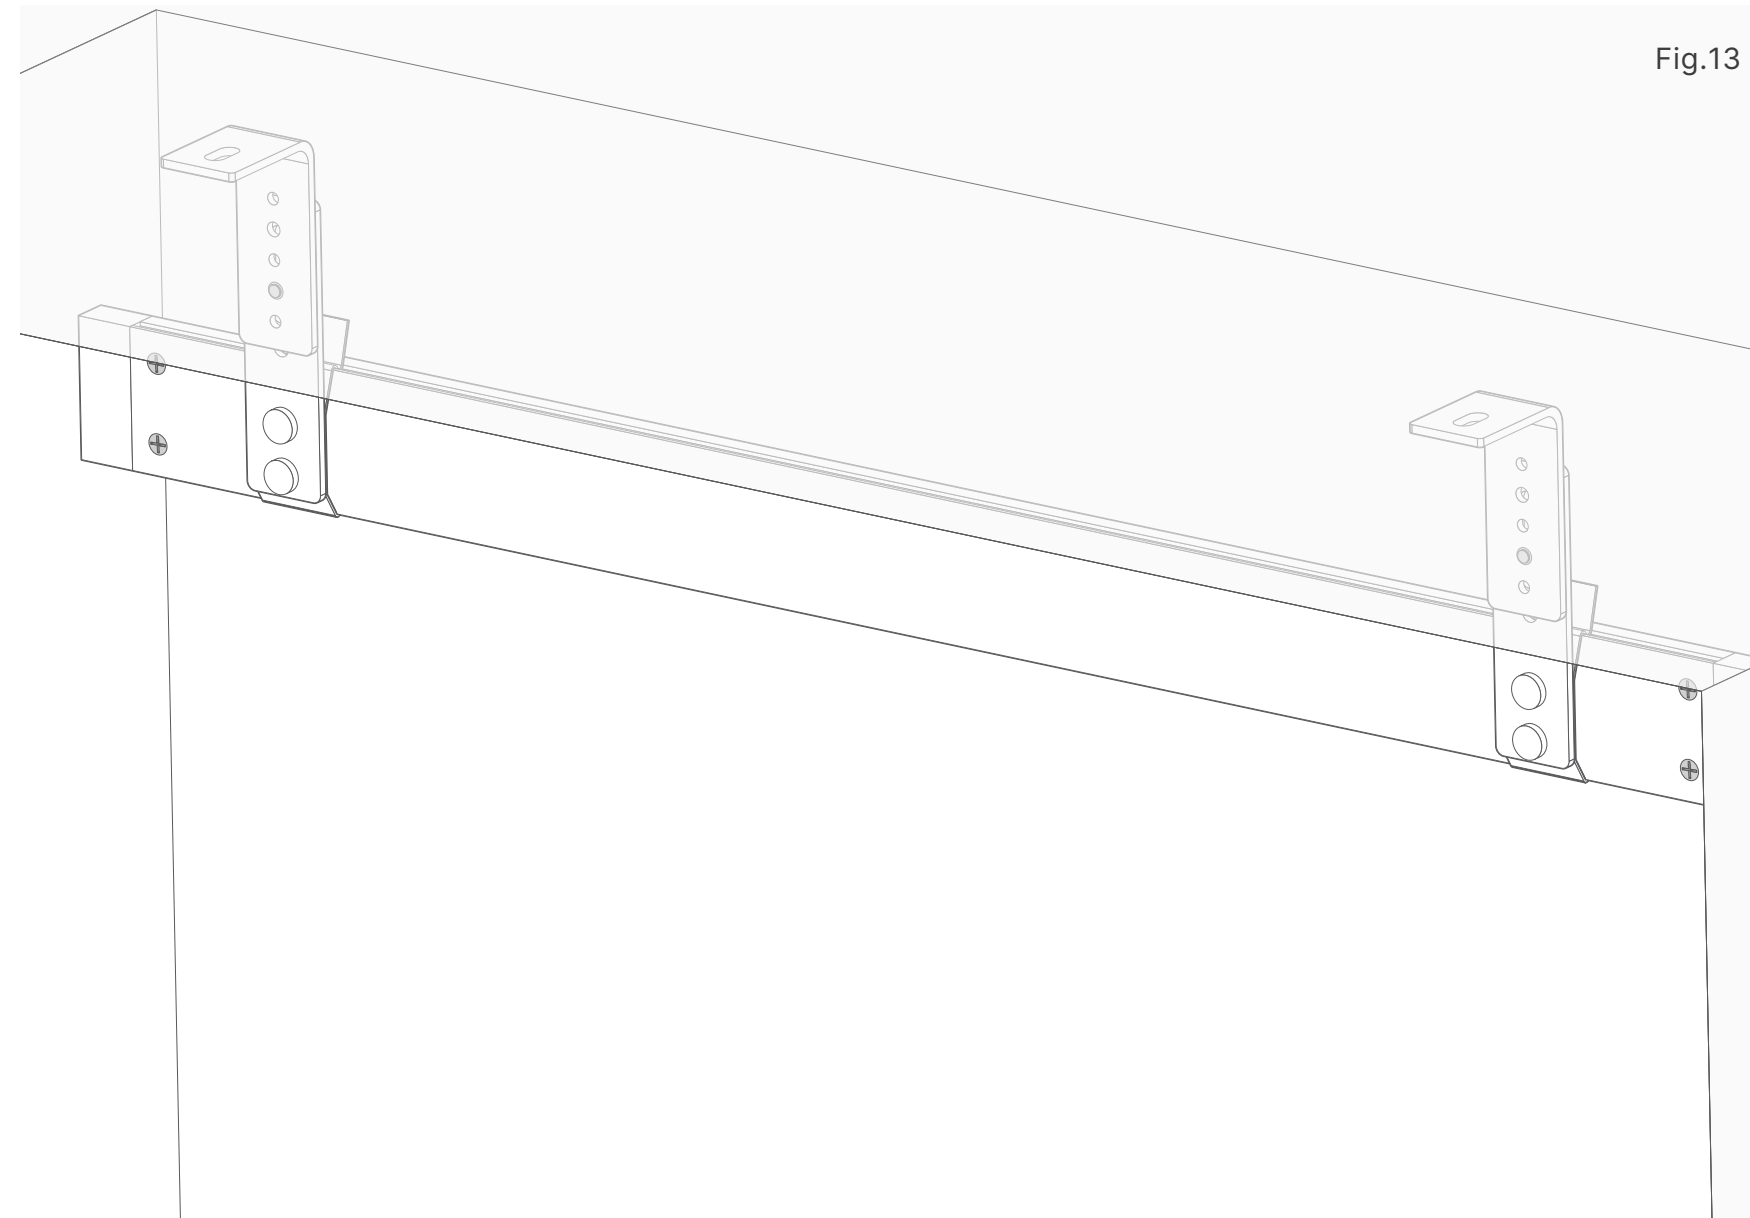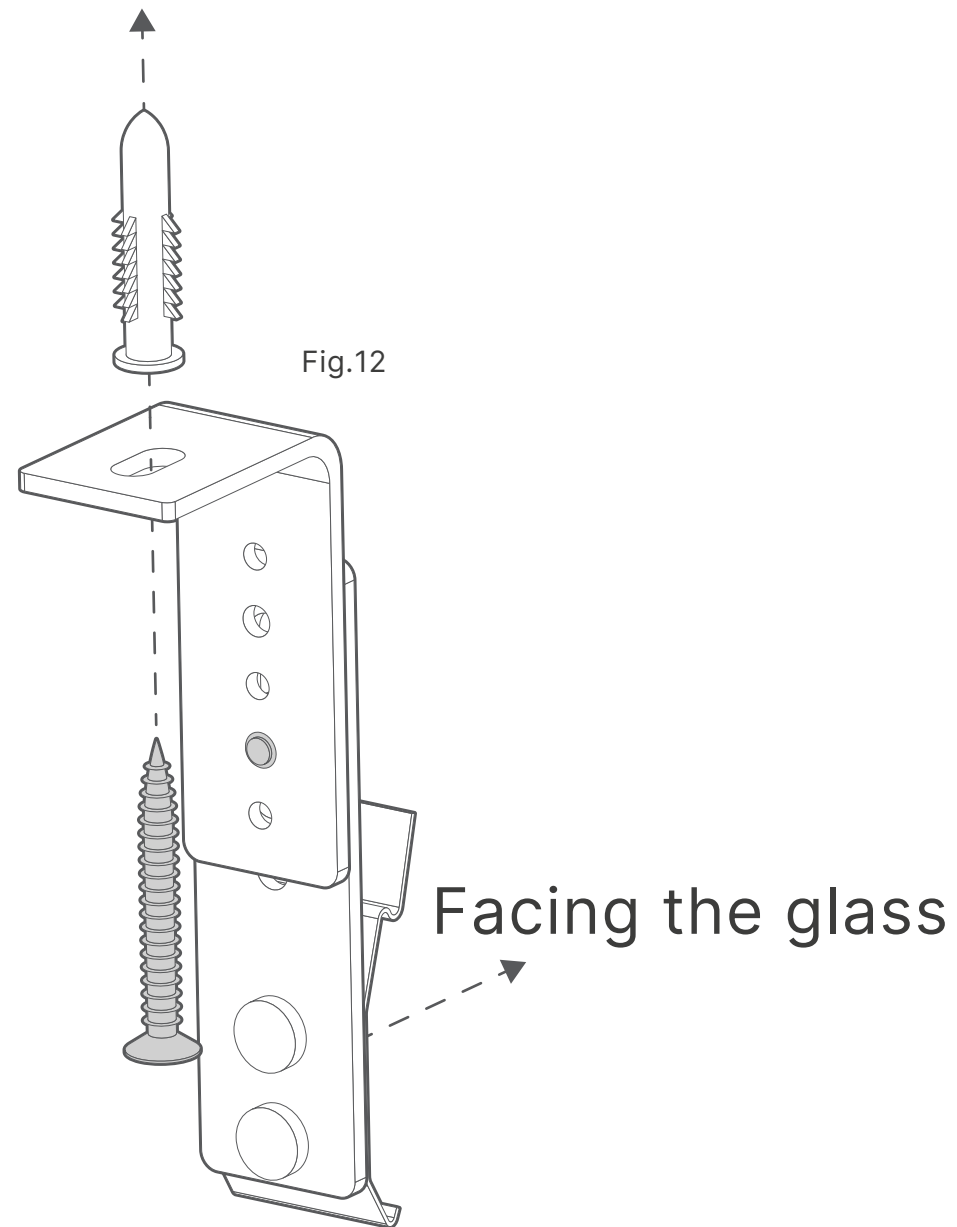

Hold the brackets up to the top of the recess and mark the screw hole in each with a pen or pencil. Use the fixings provided to secure the brackets in place. Make sure that the 'open' face of the brackets is facing the window (Fig.12).

The solar panel will clip into the open face of the brackets. The black panel on the charger should be facing the glass (Fig.13).


Face-fixing the brackets:

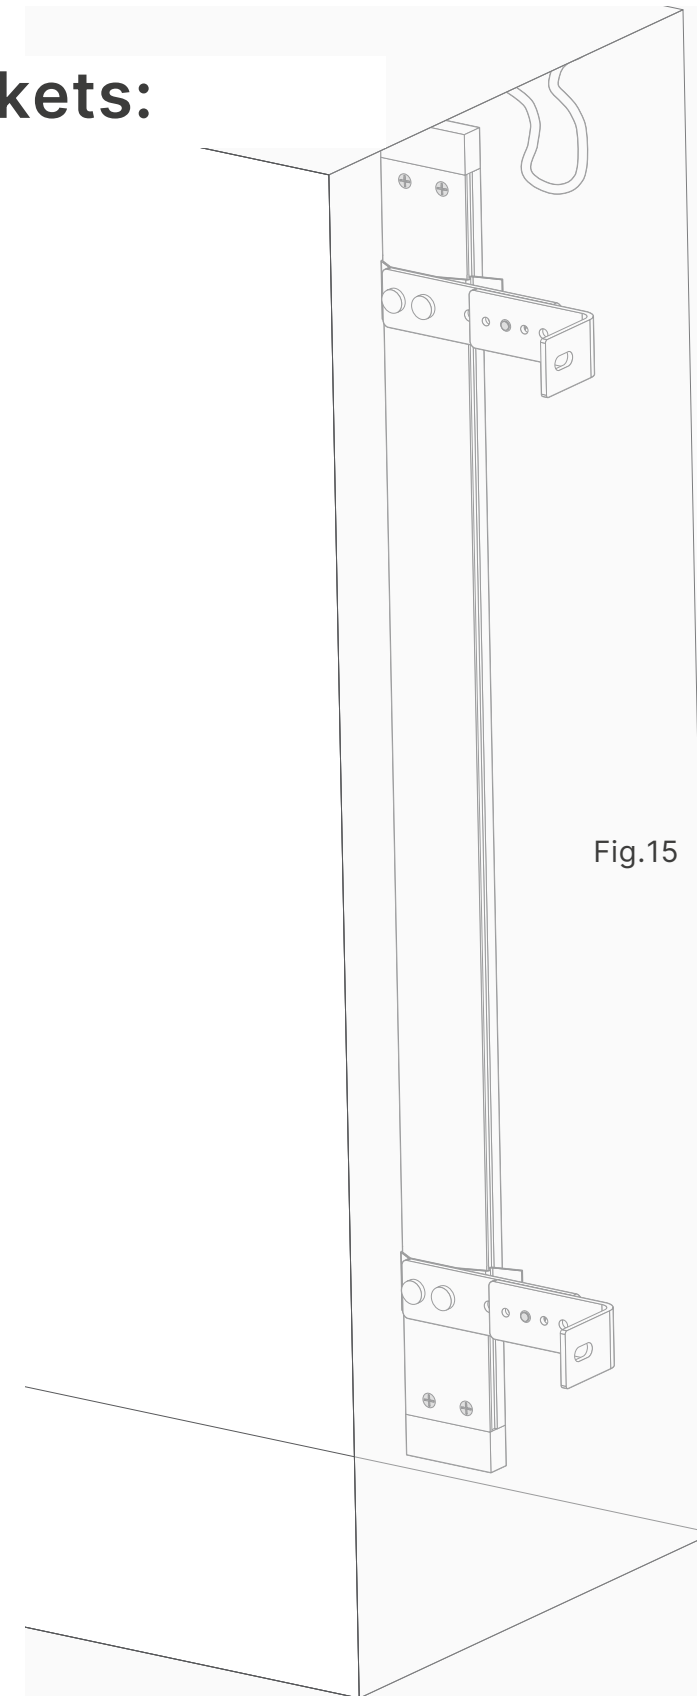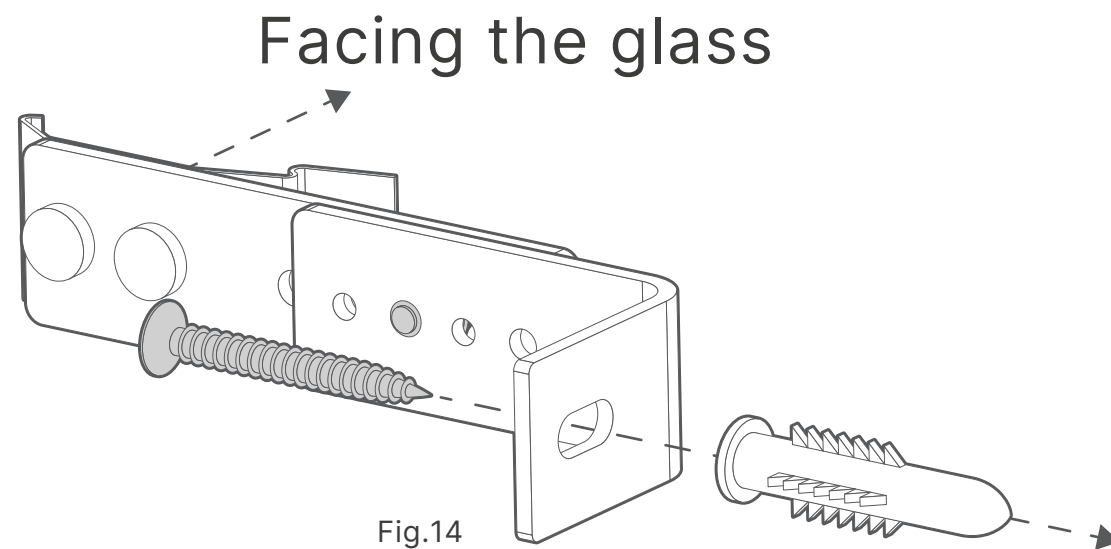

Hold the brackets up to the side of the recess and mark the screw hole in each with a pen or pencil. Use the fixings provided to secure the brackets in place. Make sure that the 'open' face of the brackets is facing the window (Fig.14).

Make sure that you fit the brackets on the same side of the window as the blind's motor, as the solar charger cable may not reach otherwise.

The solar panel will clip into the open face of the brackets. The black panel on the charger should be facing the glass (Fig.15).

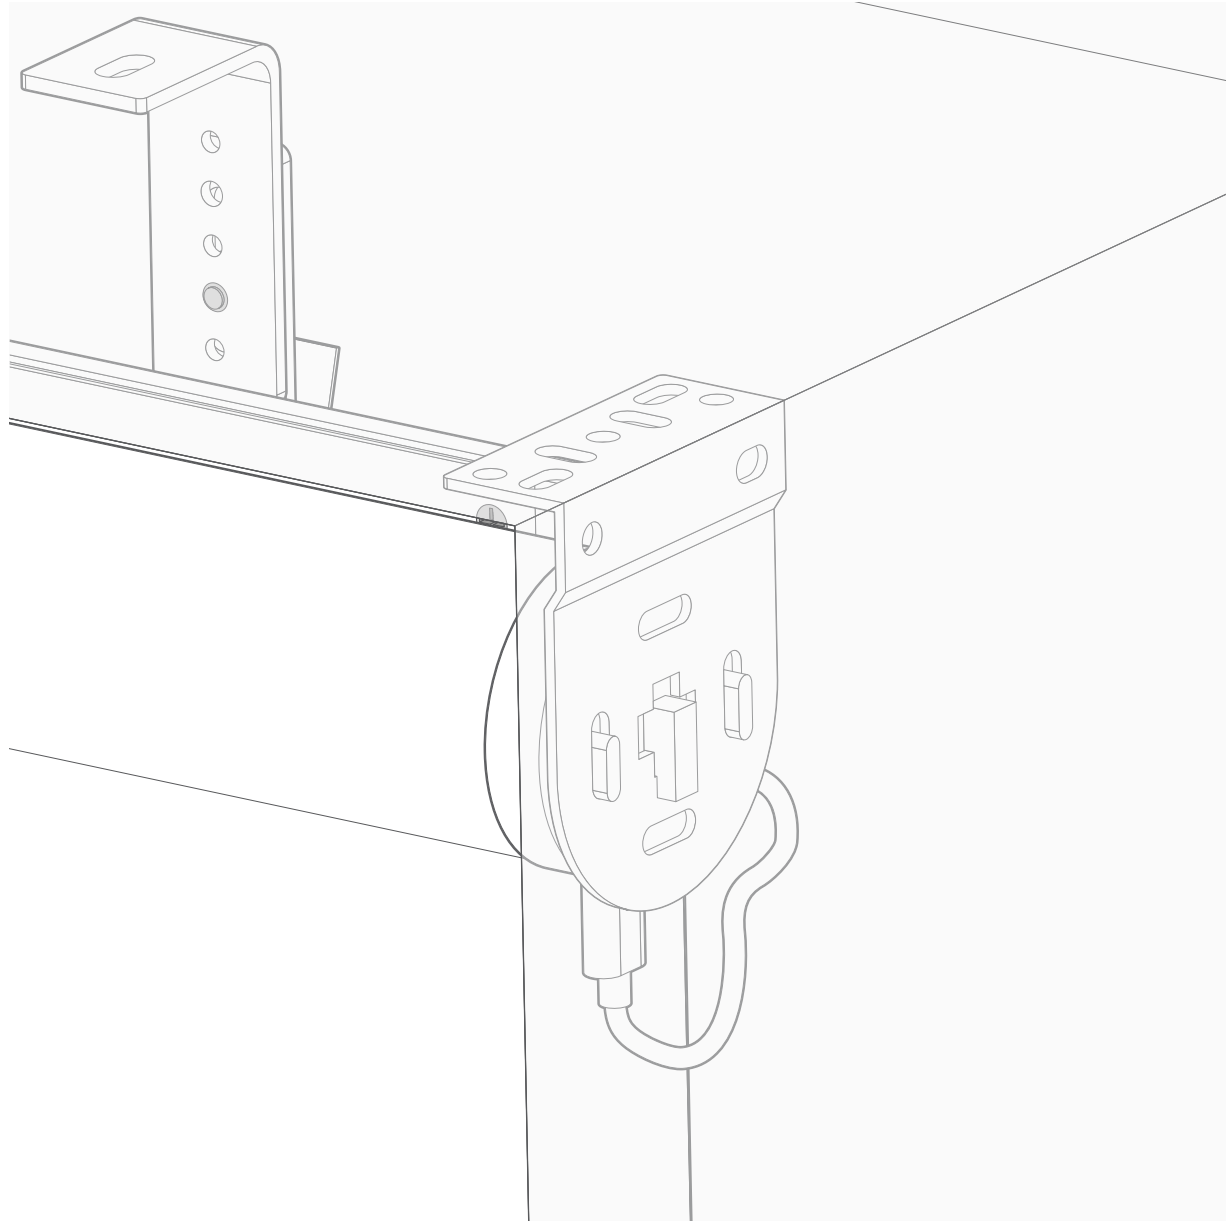

Once the solar charger is installed, it can be plugged into the motor's charging slot and left there permanently, as it will then provide a constant trickle of energy to the motor's battery and keep the charge topped up.

Blinds 2go Ltd is part
of the DTS scheme.



Recycle your electrical and electronic devices free at your local recycling centre. To find your nearest centre, visit the [Recycle More](#) website and type in your postcode.