


Designed for DIY...

Our Soft Raise Roller Blinds are designed for you to install yourself, without specialist tools or fitters, even if you don't have a lot of DIY experience.

There are several methods of installing, based on the specifications you gave us when you ordered, so not all of the sections of this guide will be applicable to your blinds. Each section is clearly labelled to help you navigate.


Please read each applicable page of this guide carefully during installation, following along one step at a time.

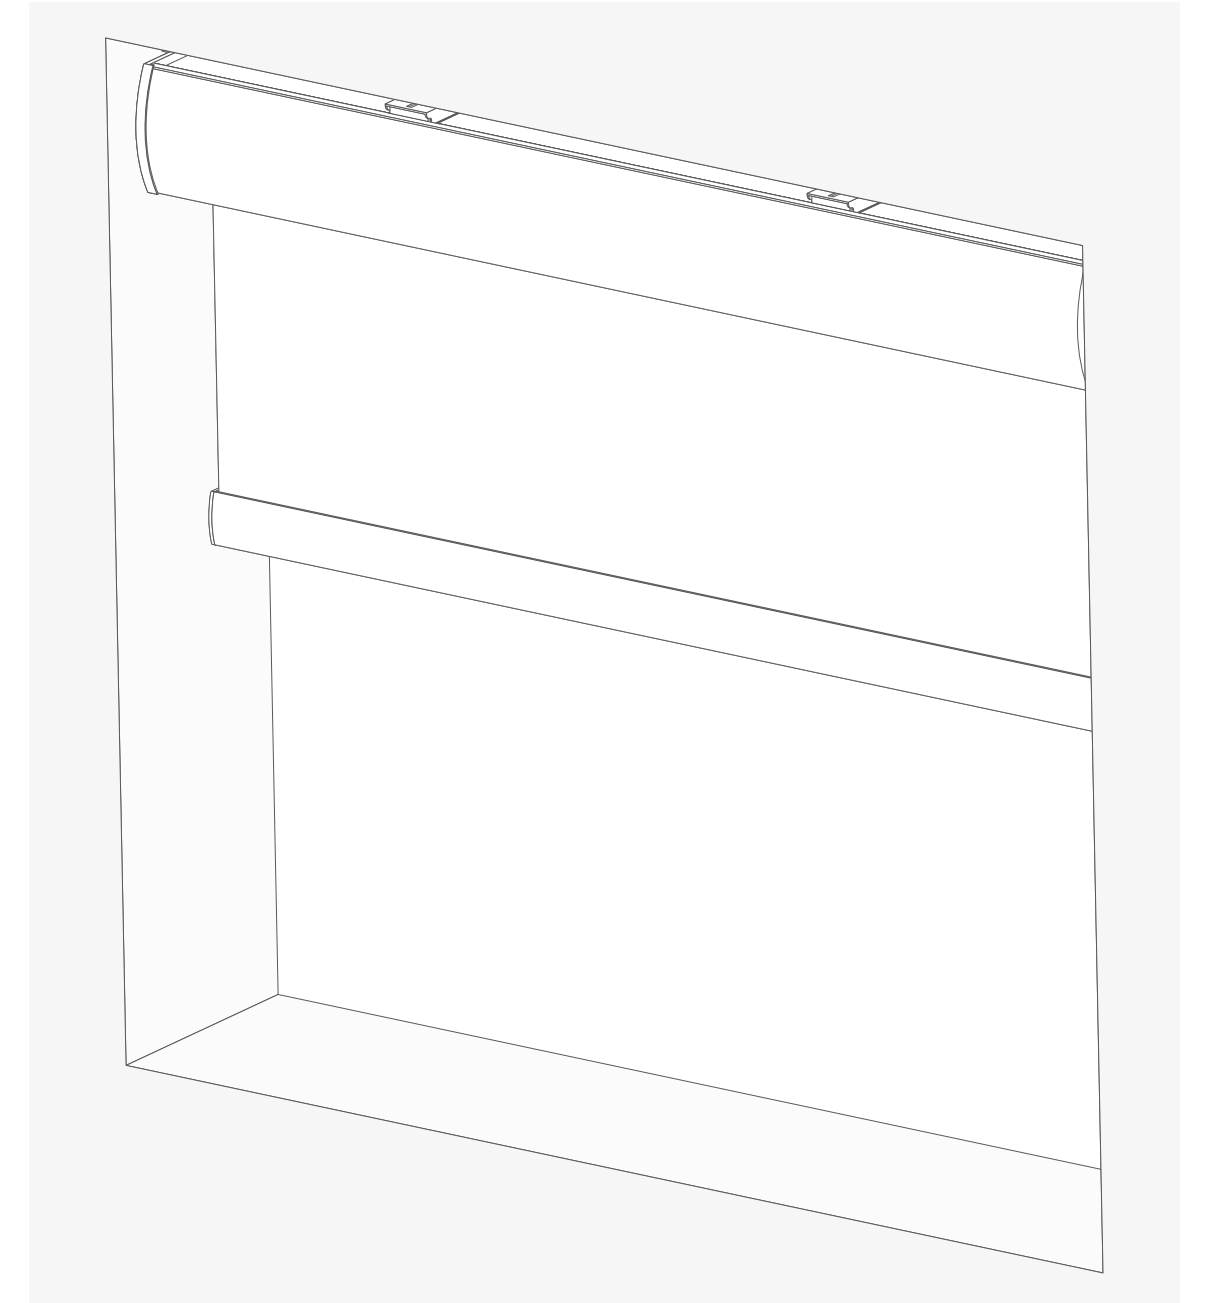


Tools required for this install (not applicable if you upgraded to Click2Go):

- Handheld drill
- 4mm masonry drill bit
- Phillips screwdriver / Phillips driver bit
- Mallet / hammer
- Pen / pencil


Parts contained in your order...

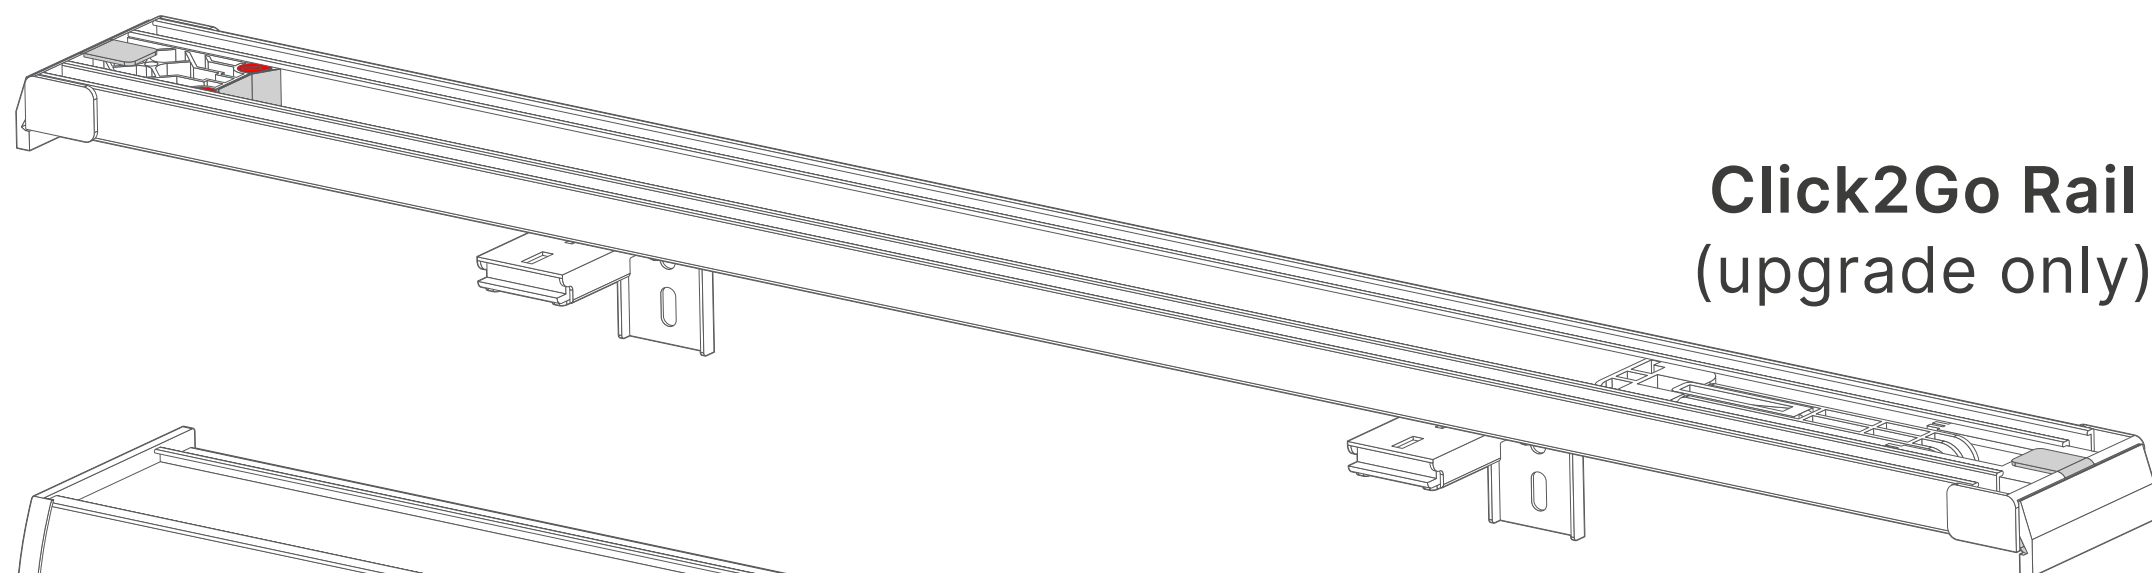


Click2Go Rail
(upgrade only)

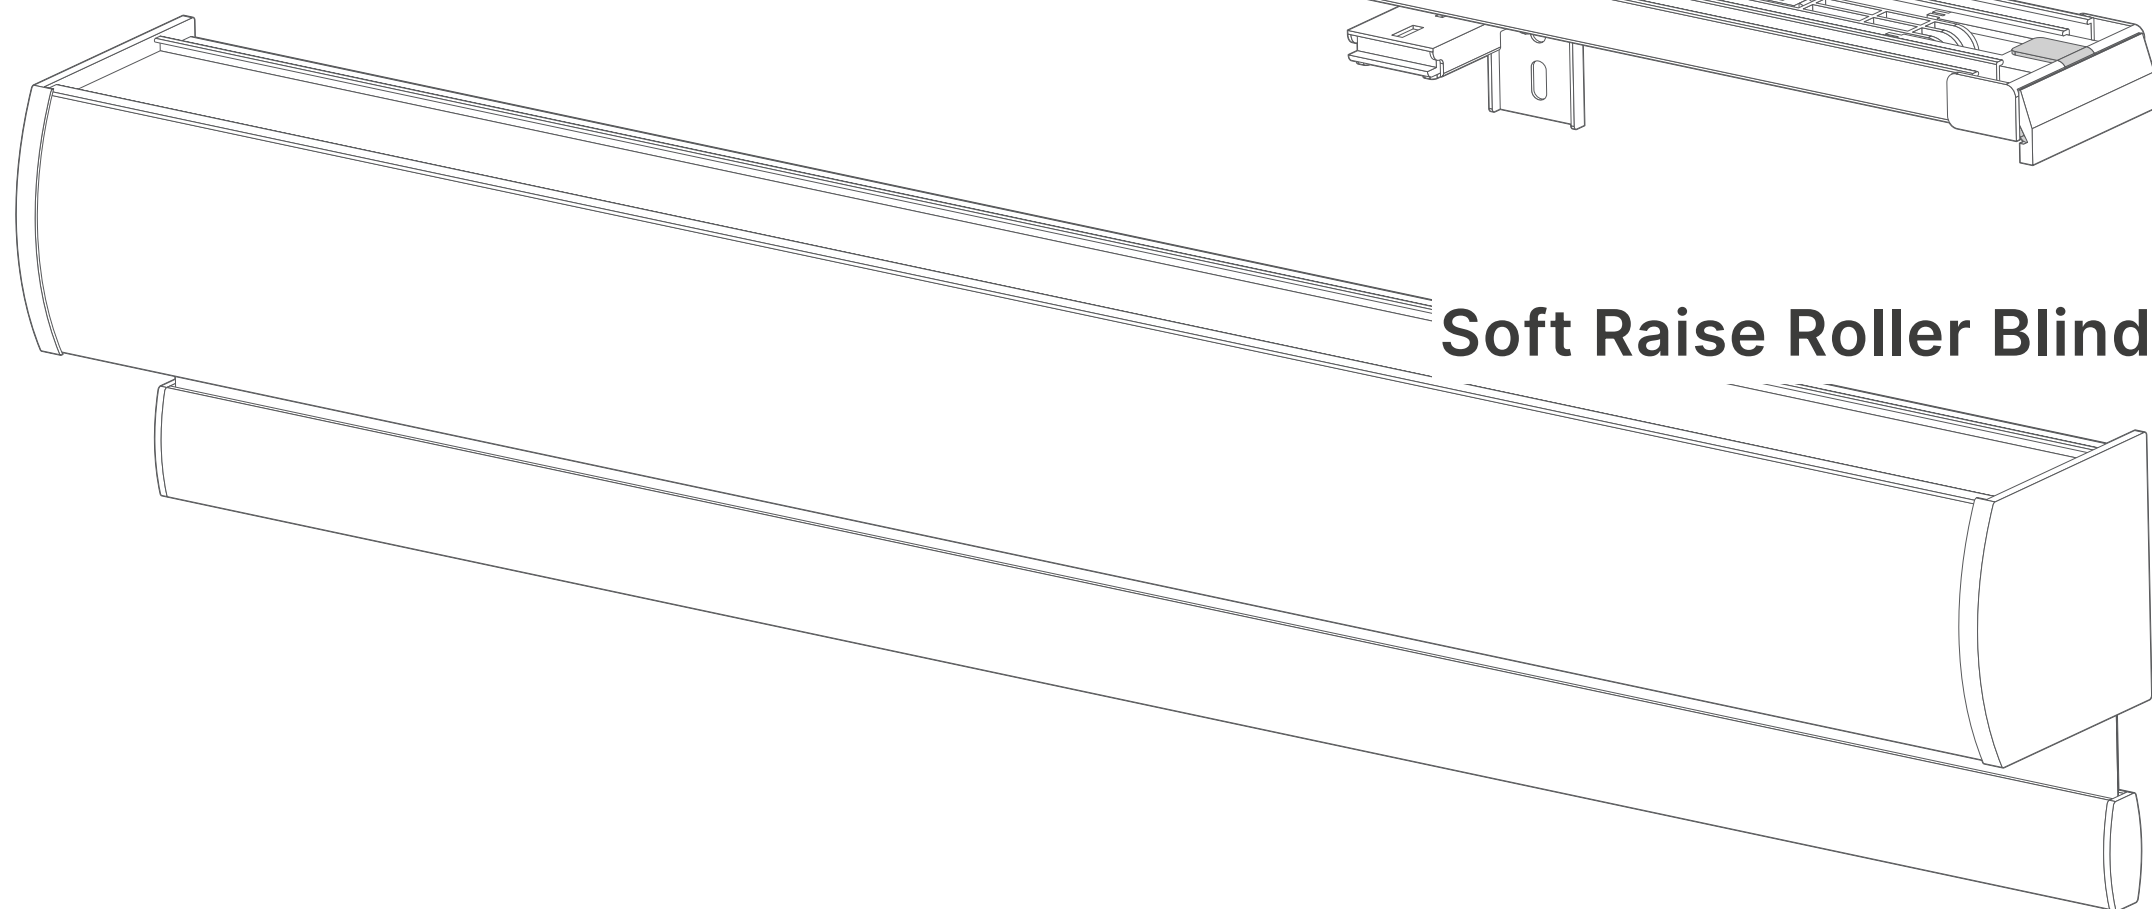

Soft Raise Roller Blind

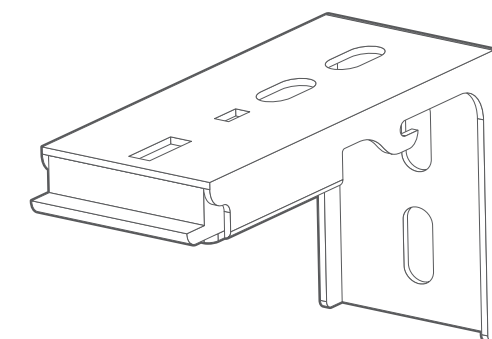


Mounting brackets
(Multiple per blind, based on with)
(Not applicable for Click2Go upgrade)

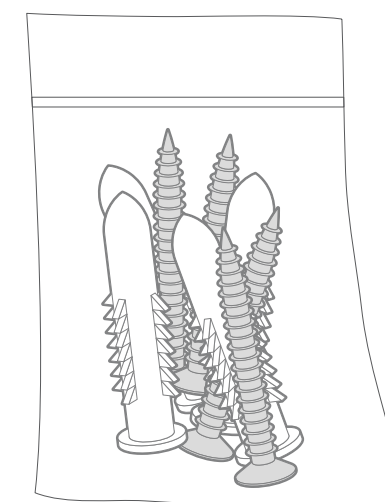


Screws & wall plugs
(x2 per mounting bracket)
(Not applicable for Click2Go upgrade)

If you did not choose our Click2Go upgrade when you ordered, please skip to section 3.

Parts required for this section:

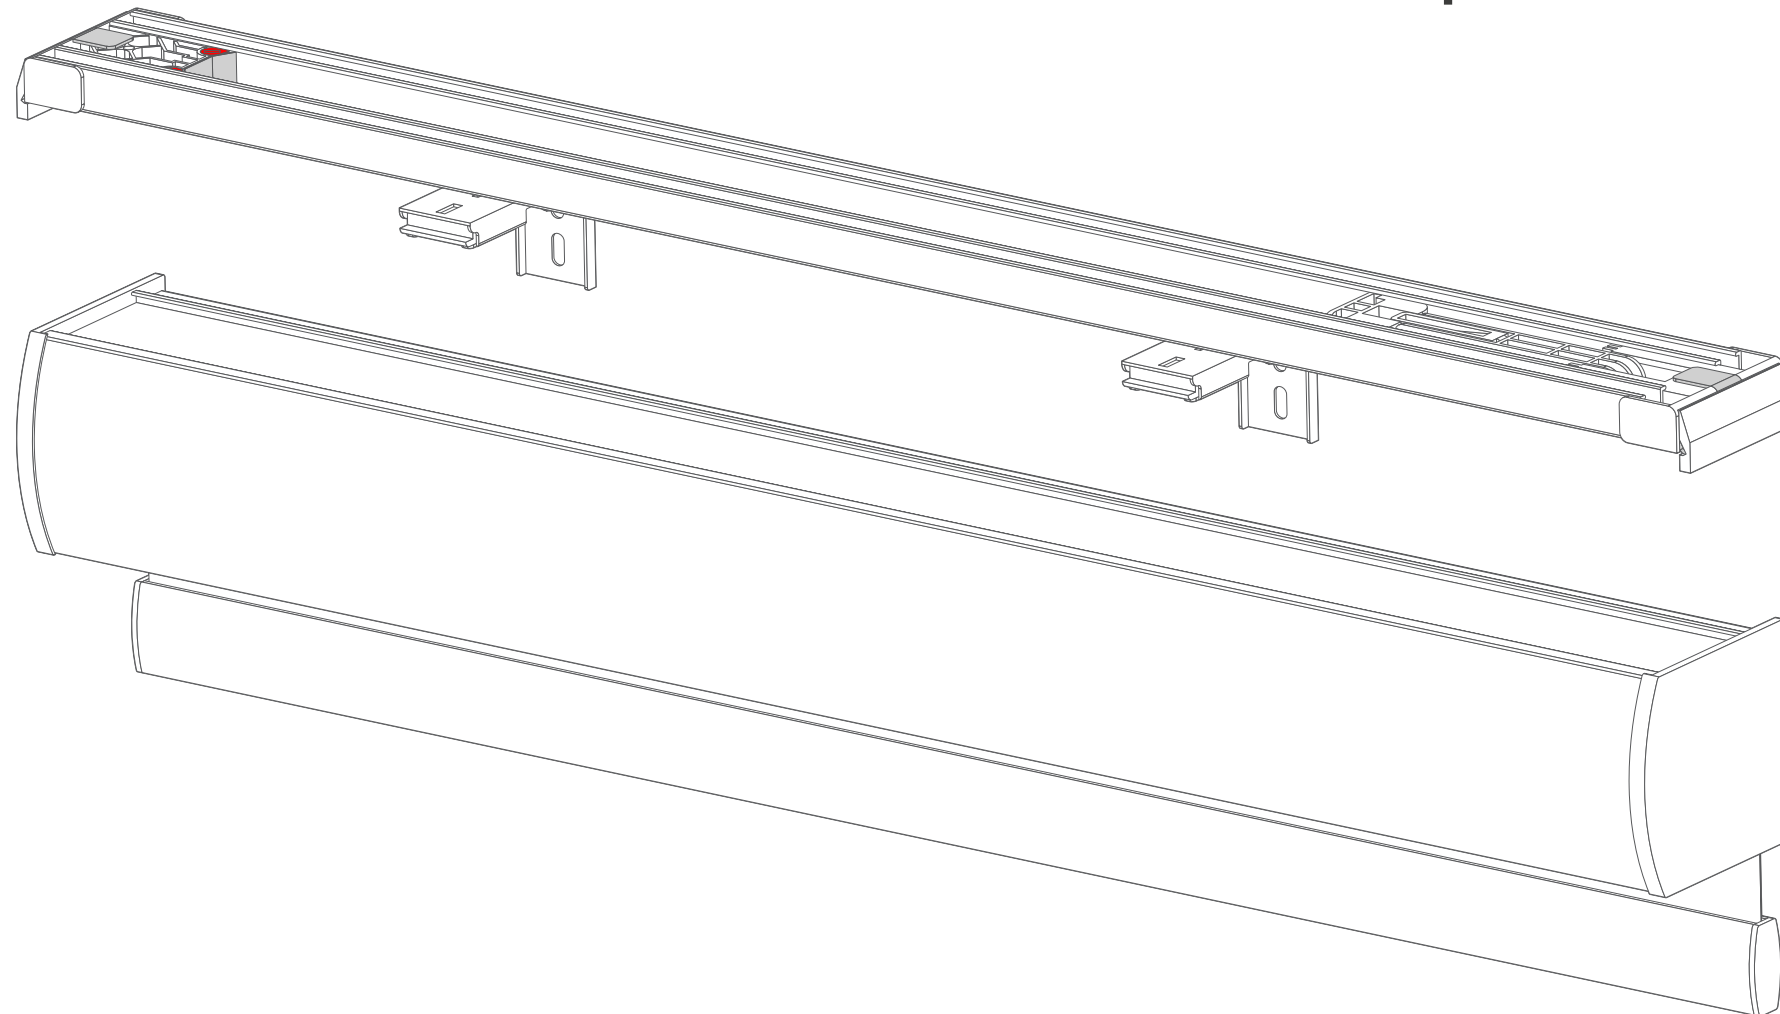

- Click2Go rail (brackets are pre-attached)
- Soft Raise Roller Blind

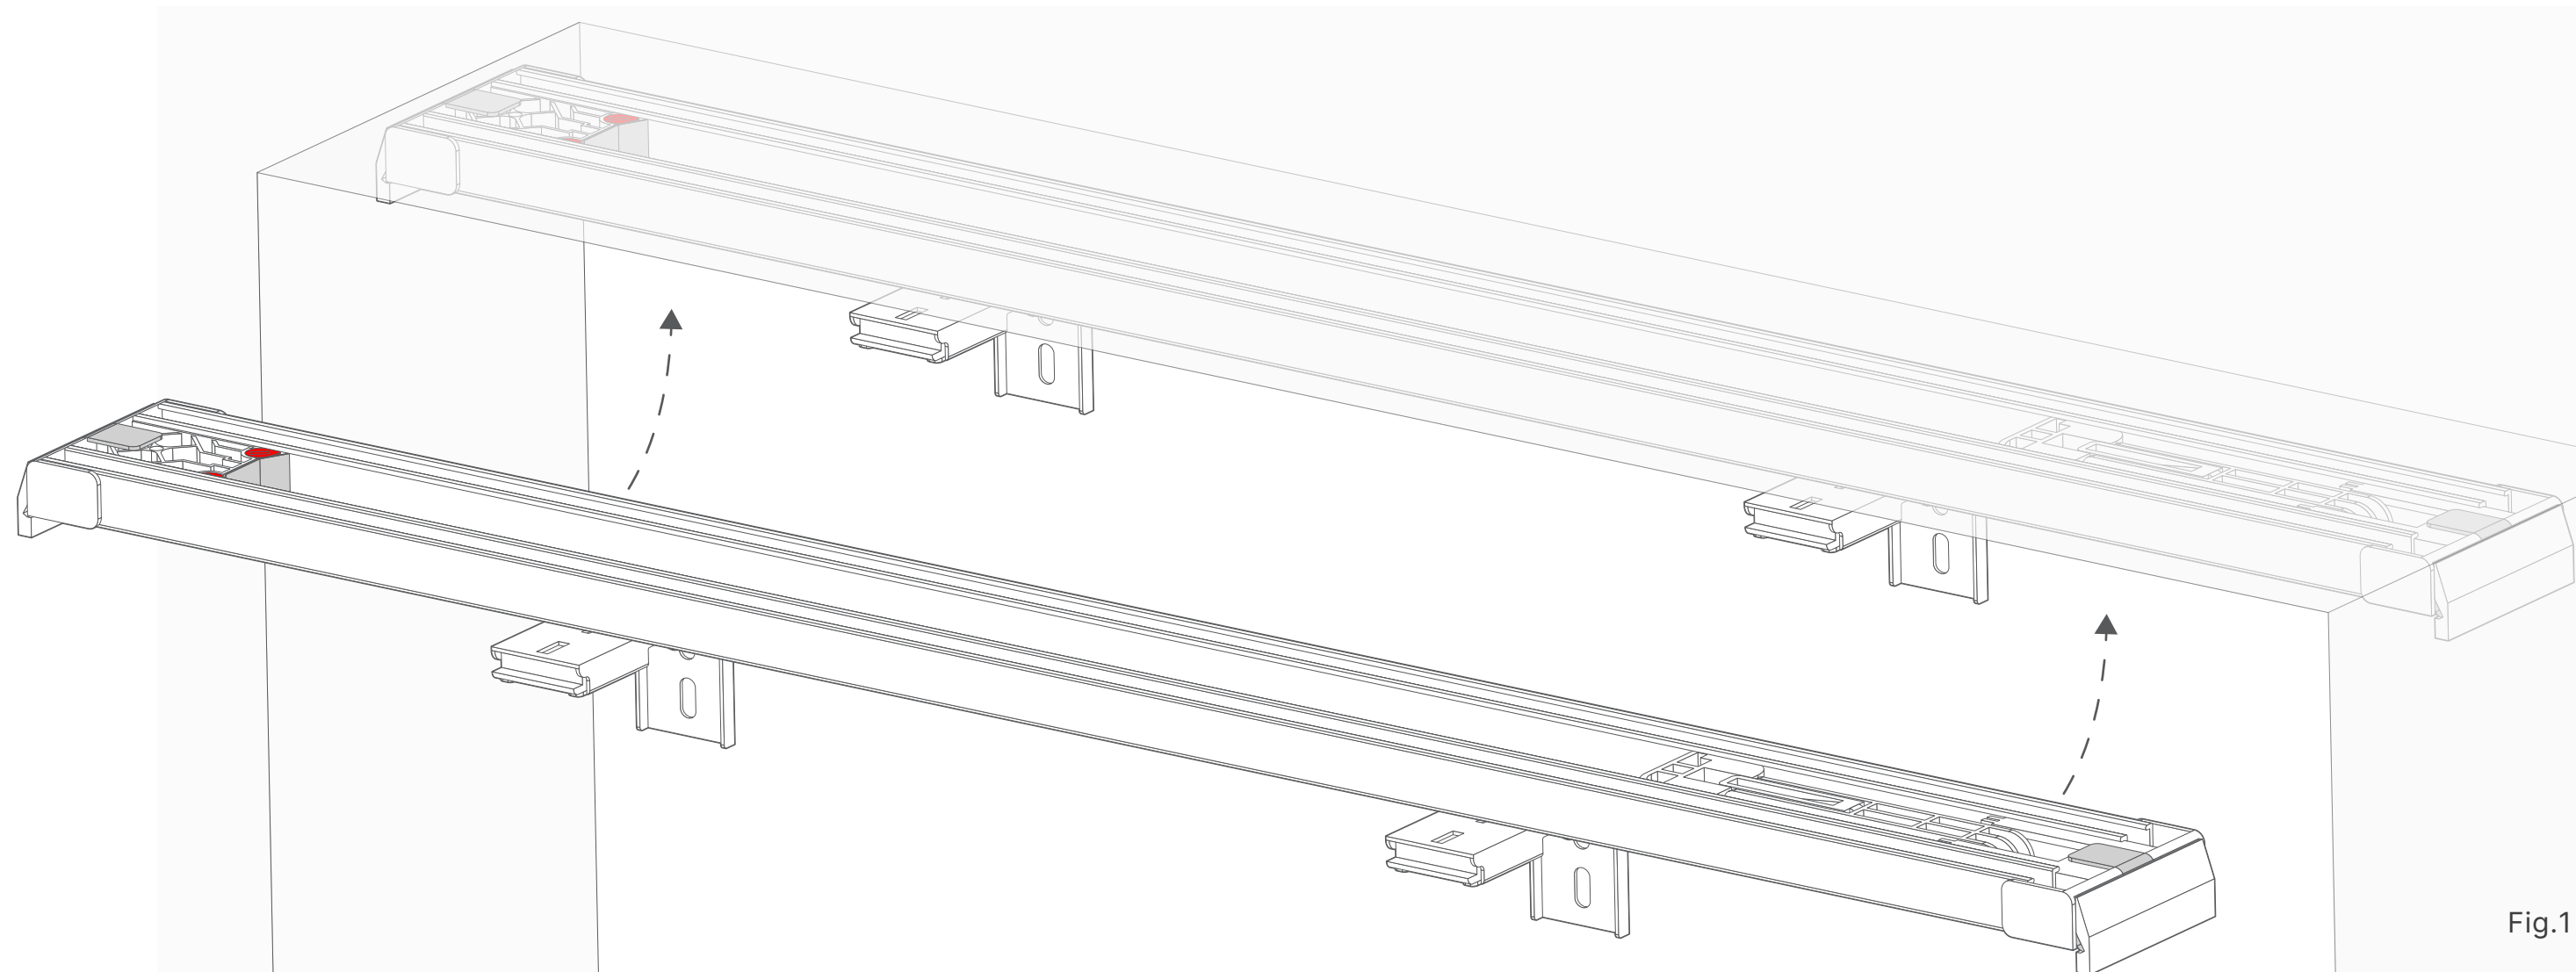

Making sure that the Click2Go lever is pointing fully down (Fig.2), raise the Click2Go rail into the top of the recess and hold it straight (Fig.1).

Fig.3


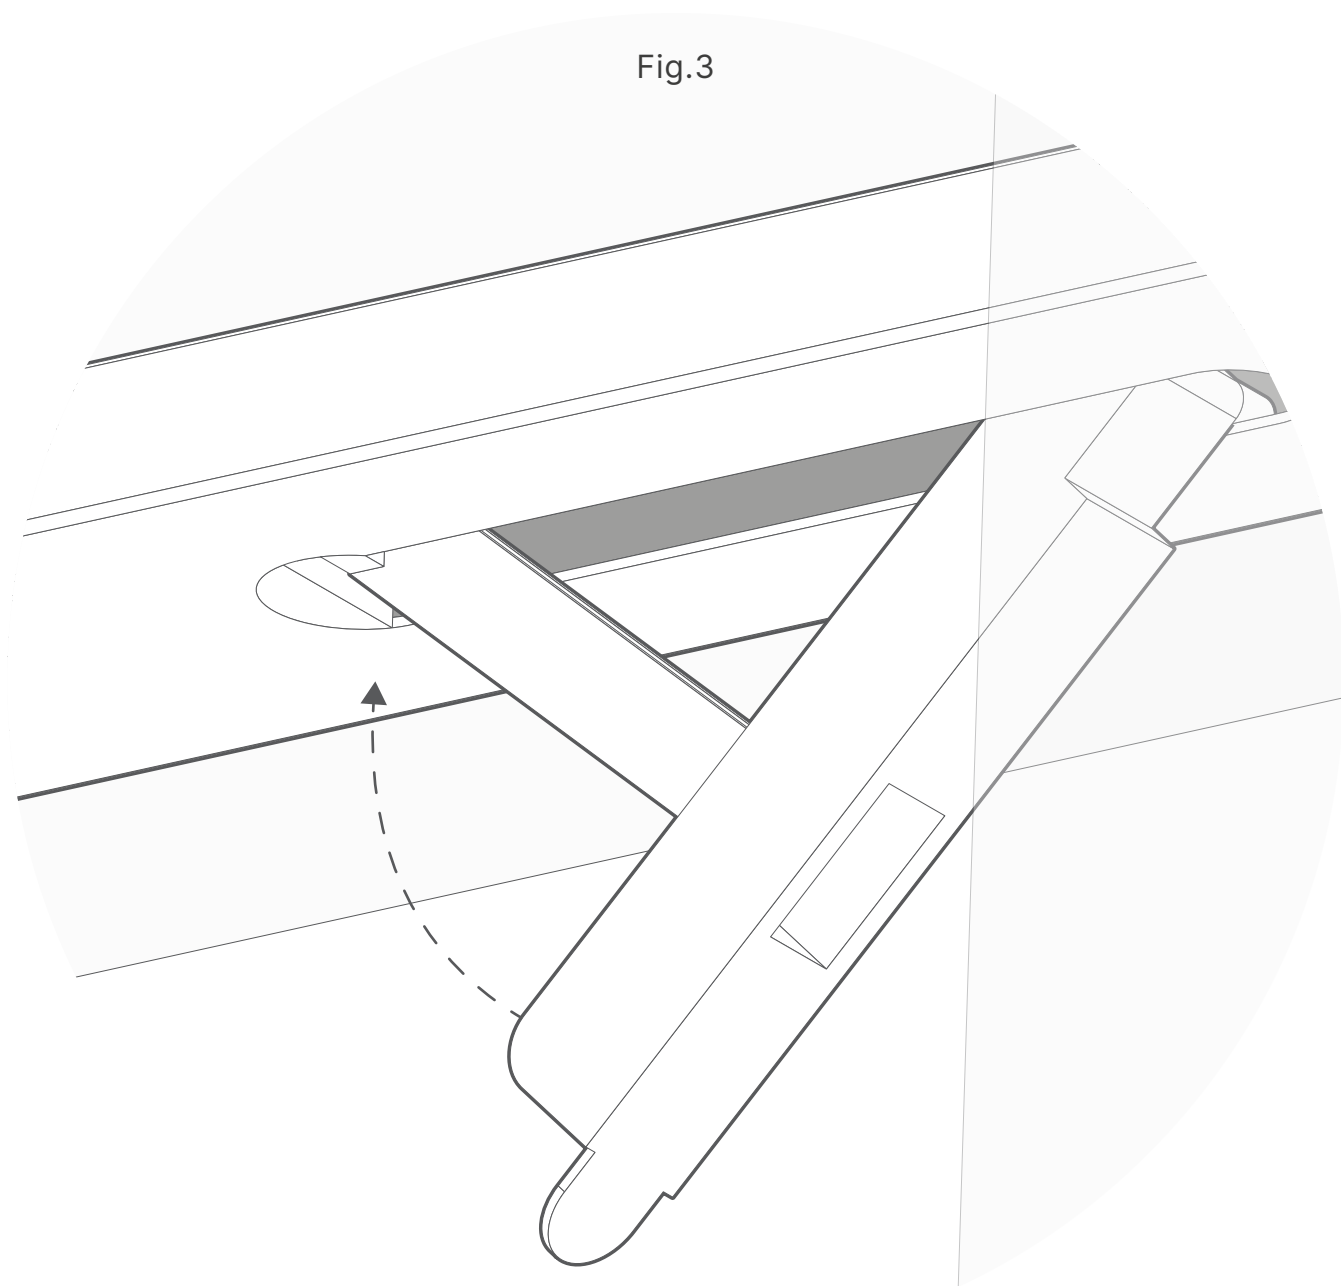


Fig.4

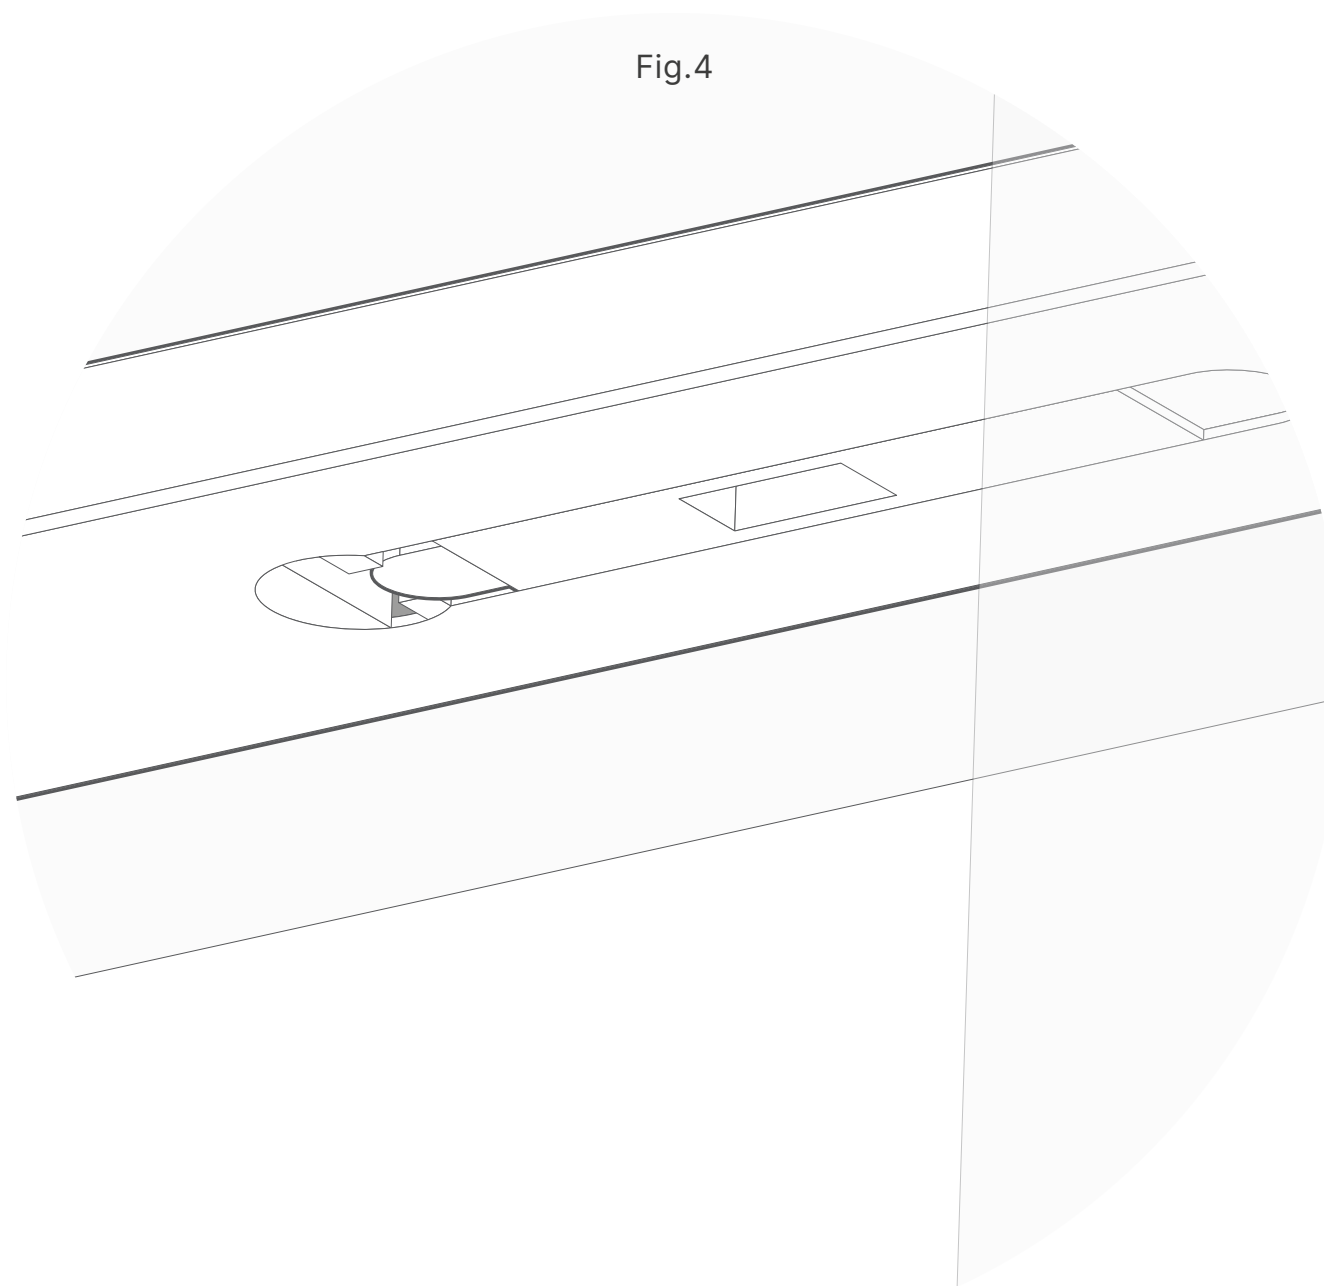

Holding the rail firmly in position, push the lever up against the rail until it snaps into place (Fig.3 / Fig.4).

Now that the Click2Go rail is installed, please skip to section 4.

If you chose our Click2Go upgrade when you ordered, please skip to section 4.



Parts & tools required for this section:

Parts


- Mounting brackets (multiple)
- Screws & wall plugs (multiple)

Tools

- Handheld drill
- 4mm masonry drill bit
- Phillips screwdriver / Phillips driver bit
- Mallet / hammer
- Pen/pencil

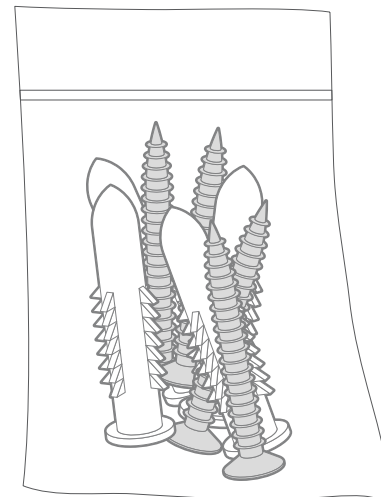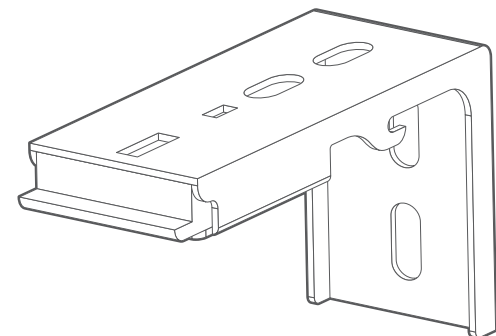


Choose which method you'll be using to mount your brackets.

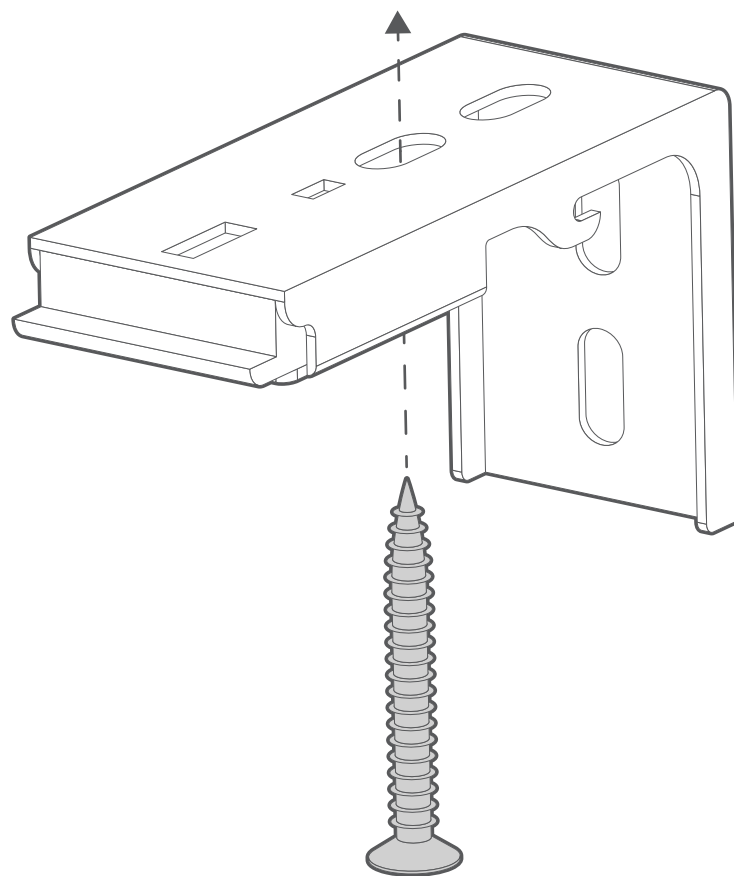

Top fix




A screw is inserted up through the top of the bracket. This is the ideal fitting method when installing inside a window recess, as the brackets can be screwed directly into the lintel.

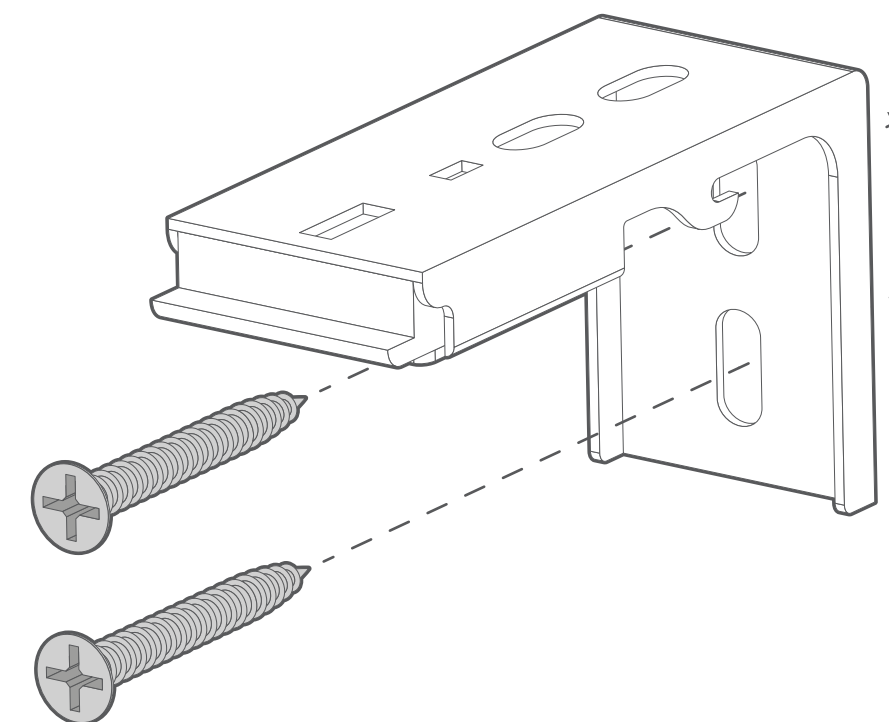

Face fix

Screws are inserted through the back of the bracket. This is the ideal fitting method when installing outside a window recess, as the brackets can be screwed directly onto the wall.

Top fixing your brackets:

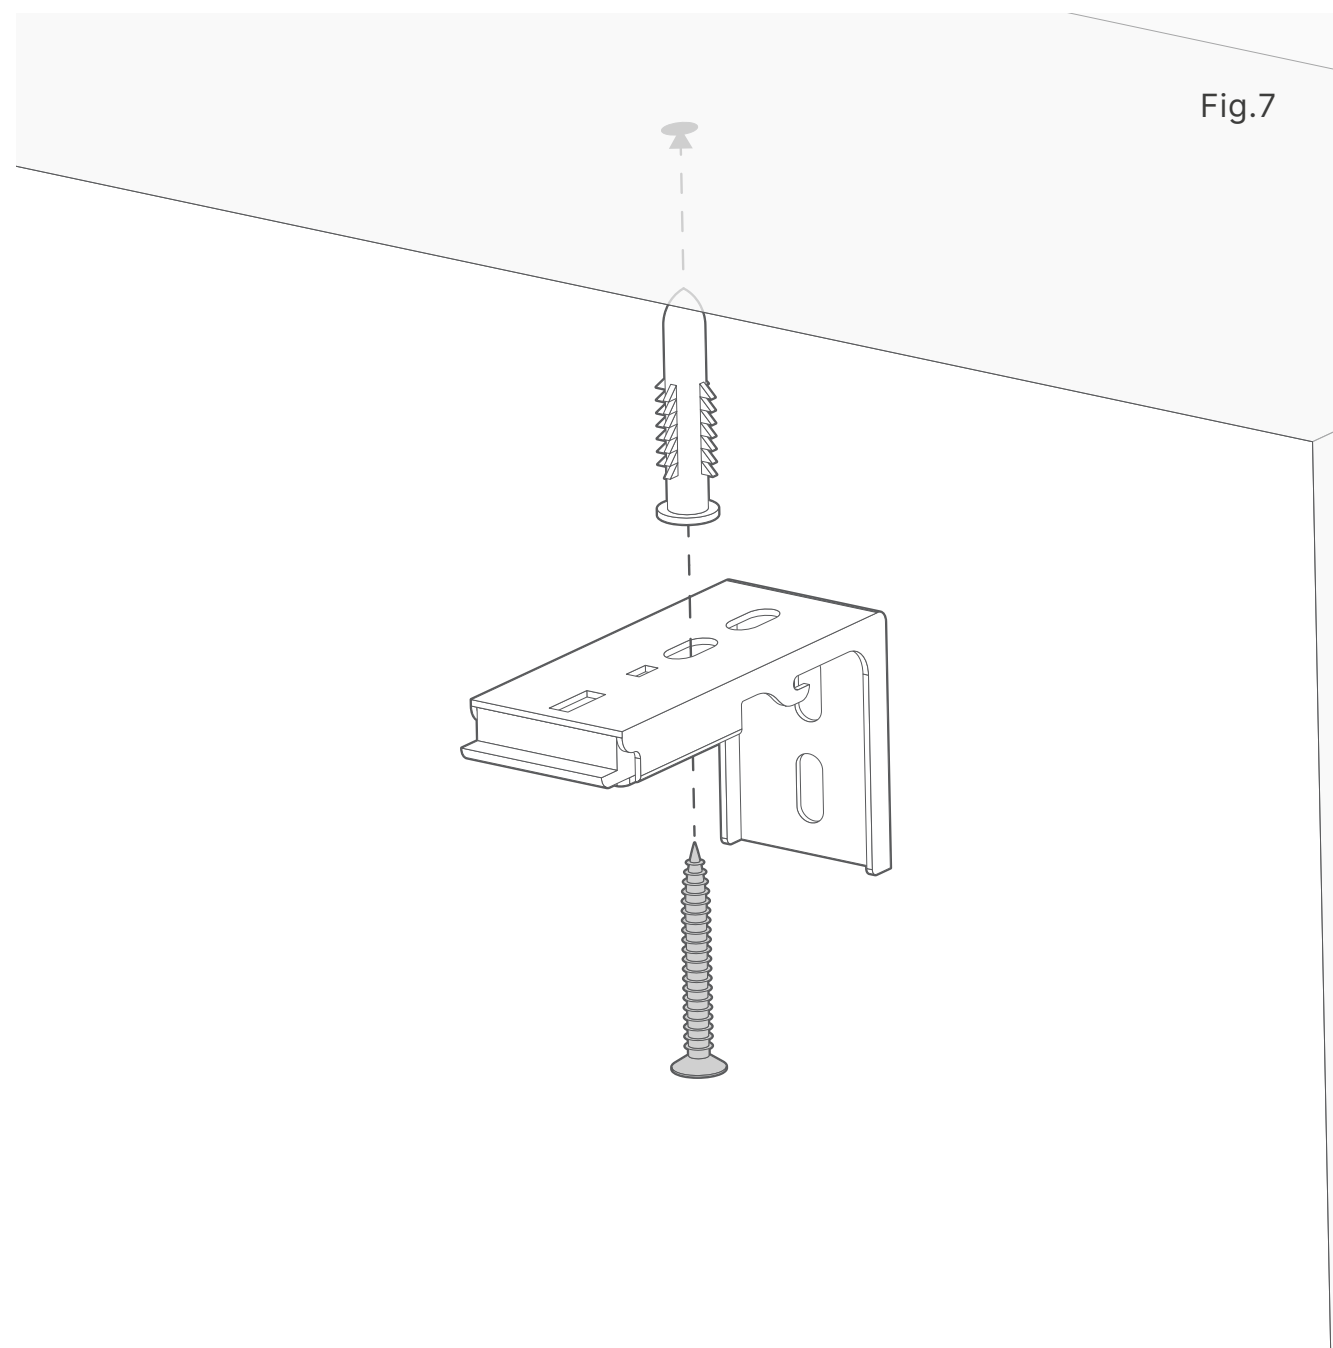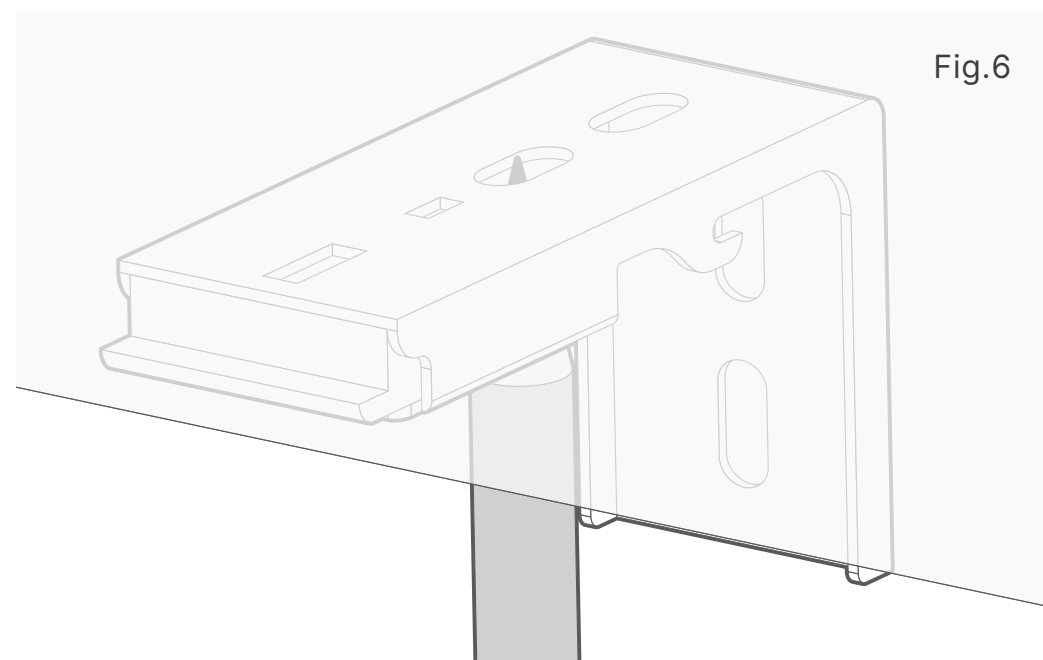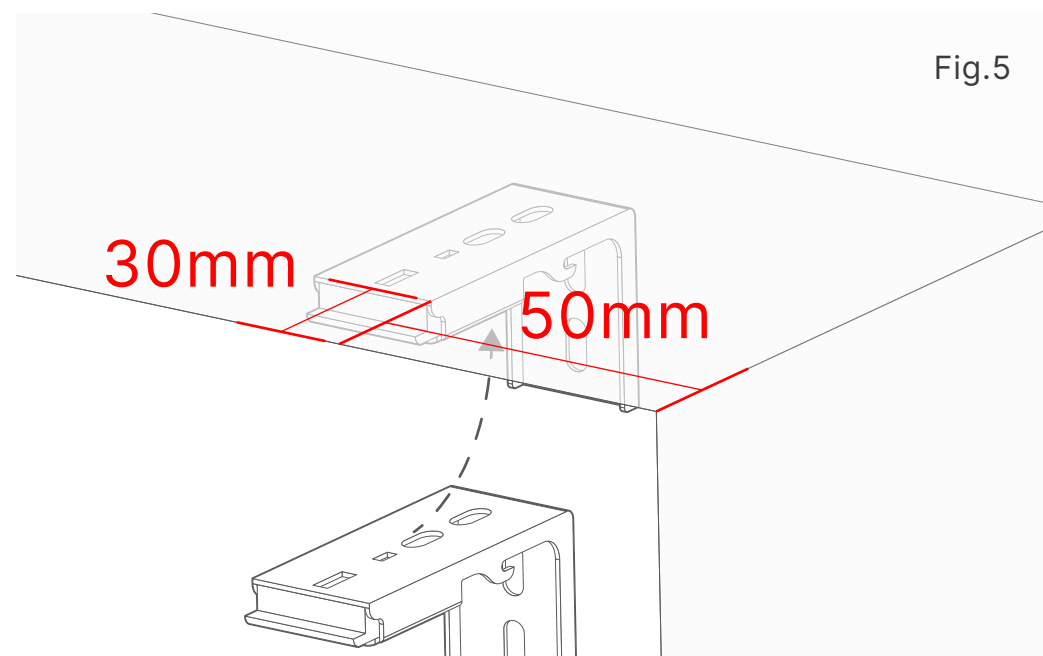

Hold the brackets in position up against the top of the recess. Try to position them so they're 30mm back from the edge of the recess, with the far left and far right brackets at least 50mm in from the sides (Fig.5). Any additional brackets can simply be spaced out evenly along the width of the recess.

Mark the centre screw hole of each bracket with a pen or pencil (Fig.6).

Drill a hole at each mark, then use the screws and wall plugs provided to secure the brackets in place (Fig.7).

Face fixing your brackets:

Fig.8



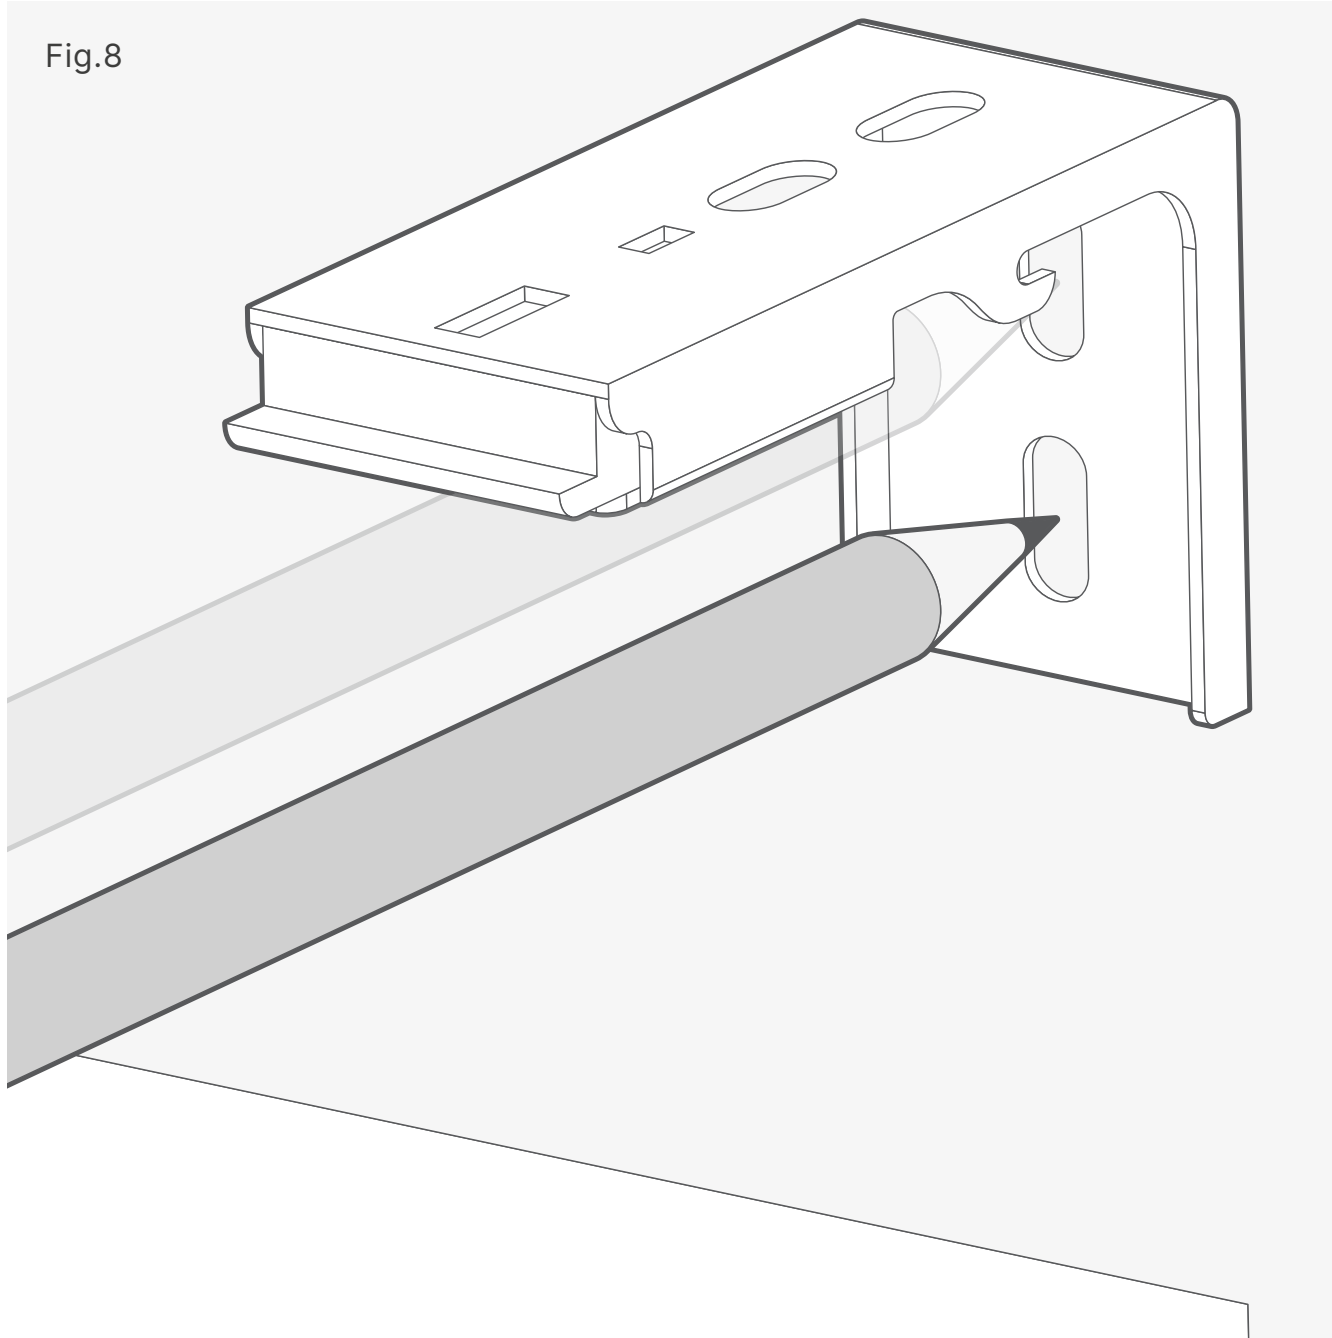


Fig.9

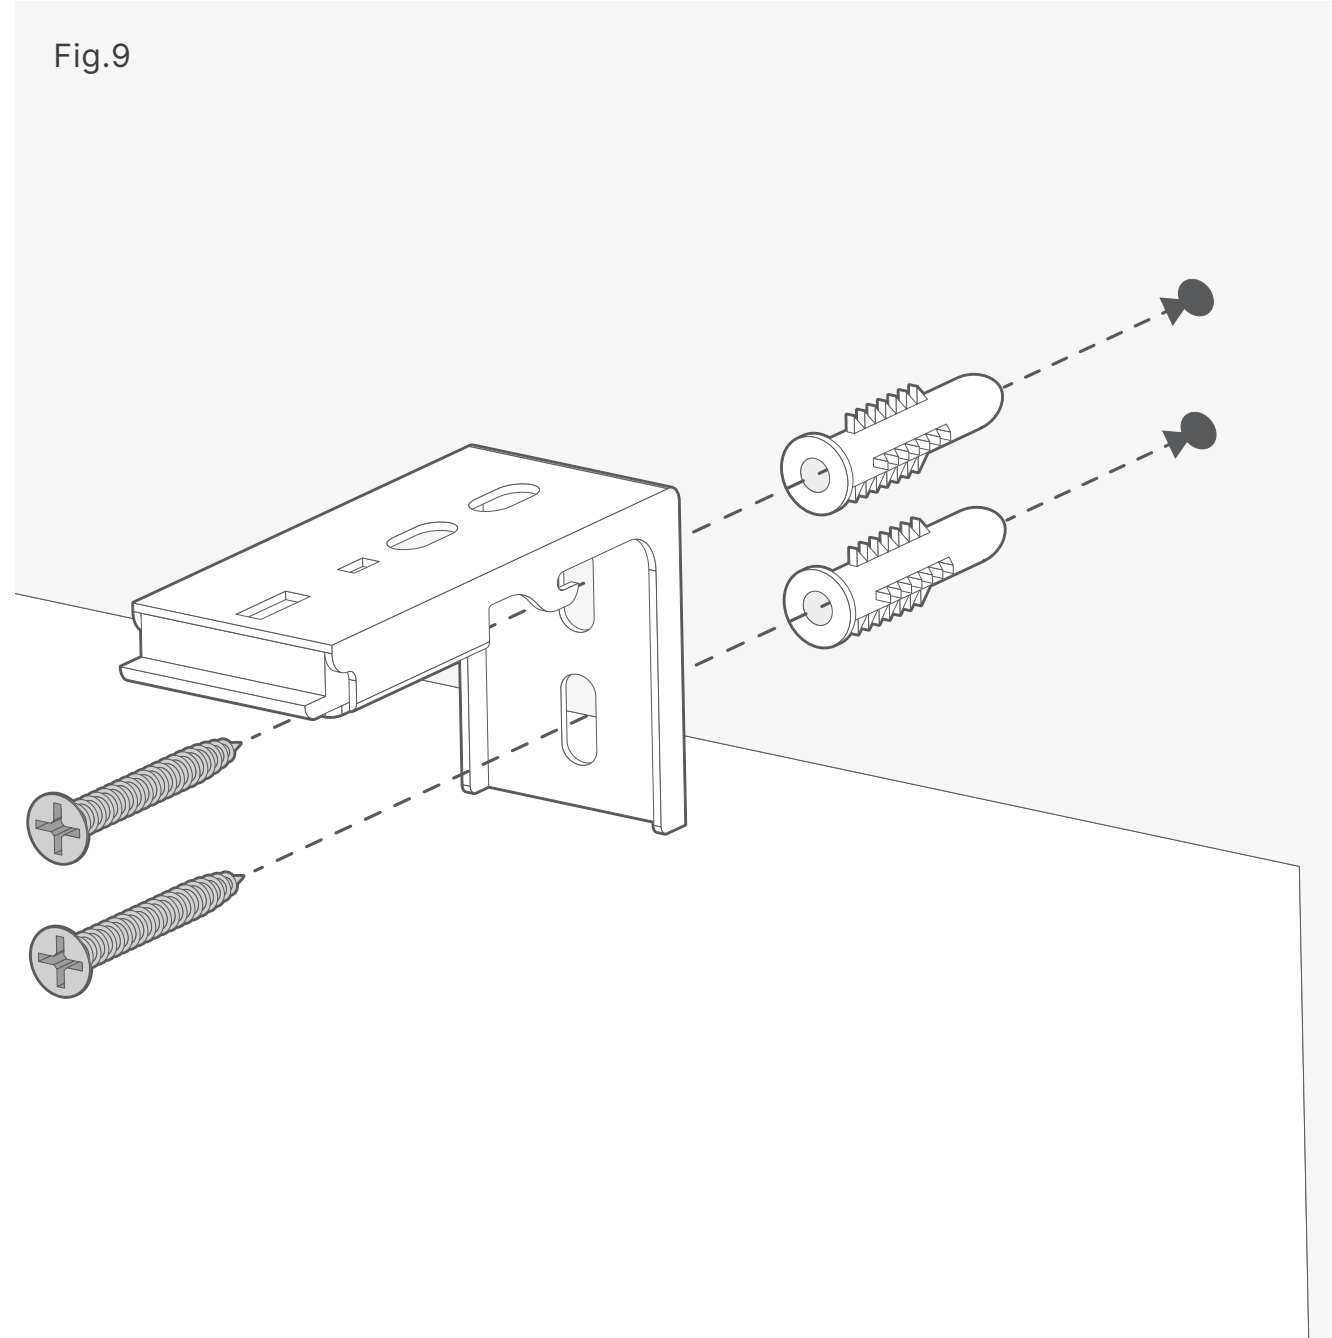

Hold your brackets up against the wall in the area you'll be fitting them. This should match where you took your measurements when you measured for exact fitting. Mark each of the rear screw holes with a pen or pencil (Fig.8).



Drill a hole for each mark, then use two screws and wall plugs per bracket to secure them (Fig.9).

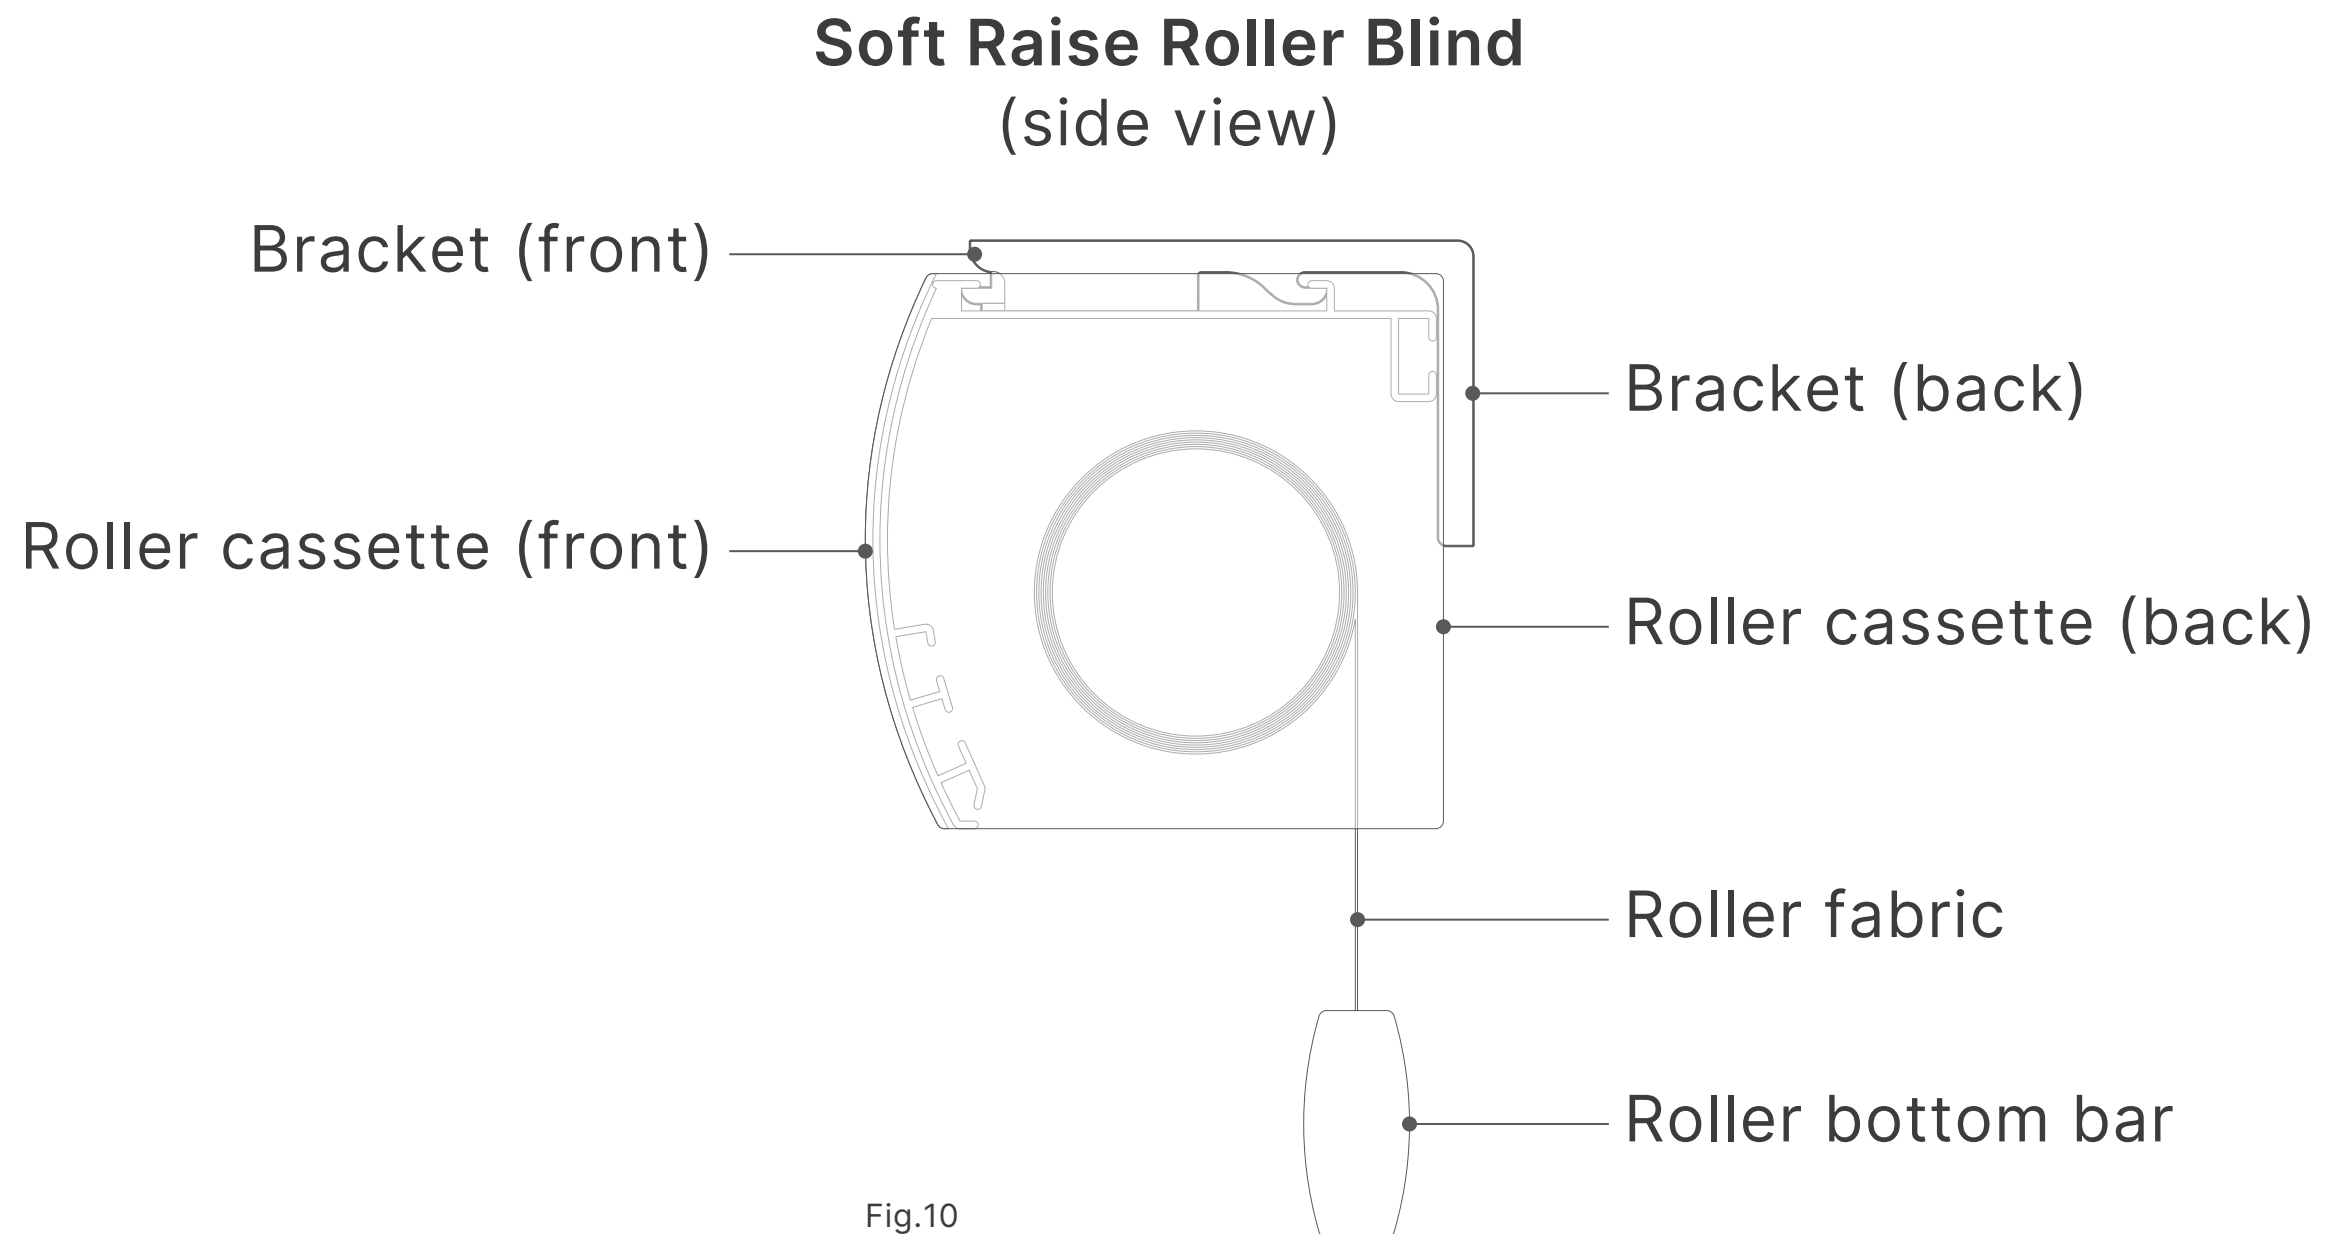

The last step is to slot the blind into its brackets (more details on the next page).

Note that whether you've installed the brackets manually, or have used a Click2Go rail, the method for fitting the blind into the brackets is the same.

Fig.10 shows a labelled side-profile of the blind and relevant components.

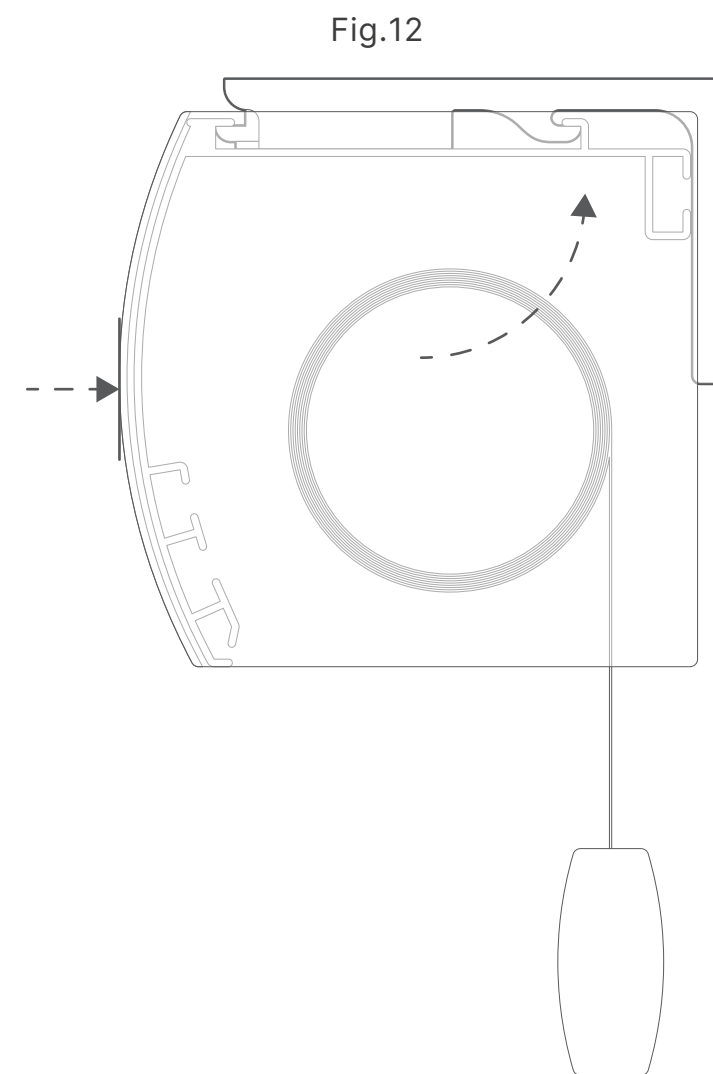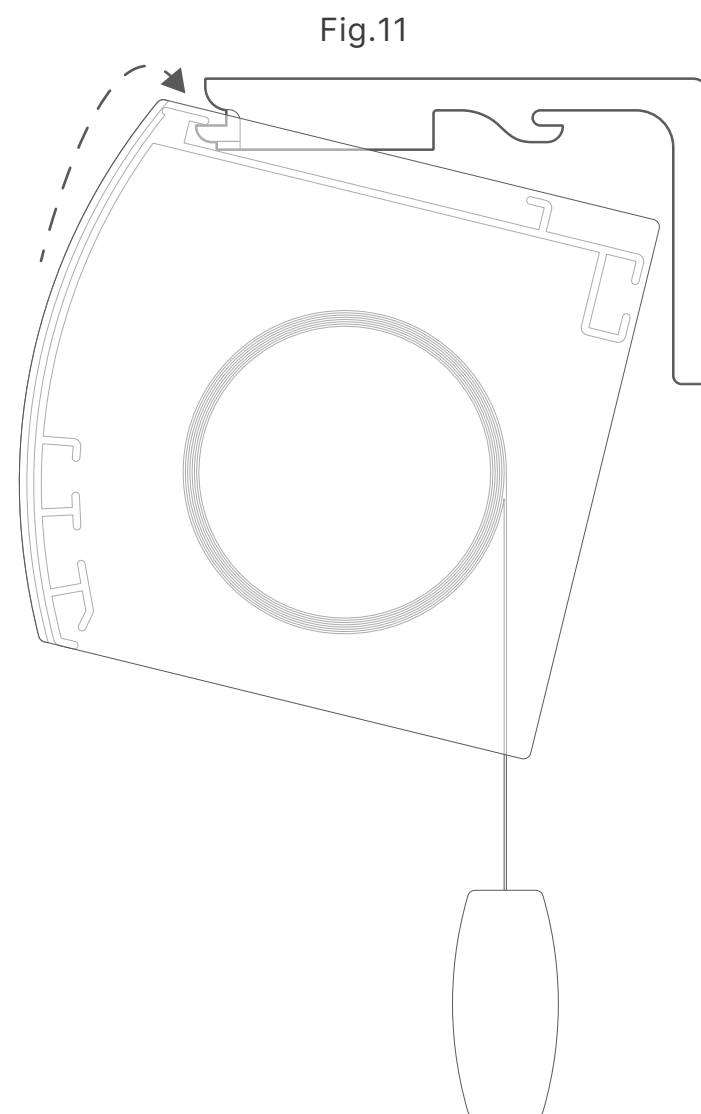

A 'lip' is visible along the top of the blind's cassette, towards the front. Hook this lip over the front hook of the brackets (Fig.11).

Push back against the blind and raise the back of the cassette, pushing up until it snaps into place on the rear hook of the brackets (Fig.12).

And that's it! Your gorgeous new Soft Raise Roller Blind is installed and ready to enjoy...