

Designed for DIY...


Our Wooden Blinds are designed to be installed by you, without specialist fitters, even if you don't have much DIY experience.

Please read each page of this guide carefully during installation, following along one step at a time.

Upgrades & Variations...

If you chose our Click2Go no drill upgrade, just click or tap this link to find your installation guide:



[Click2Go Wooden Blinds >>](#)

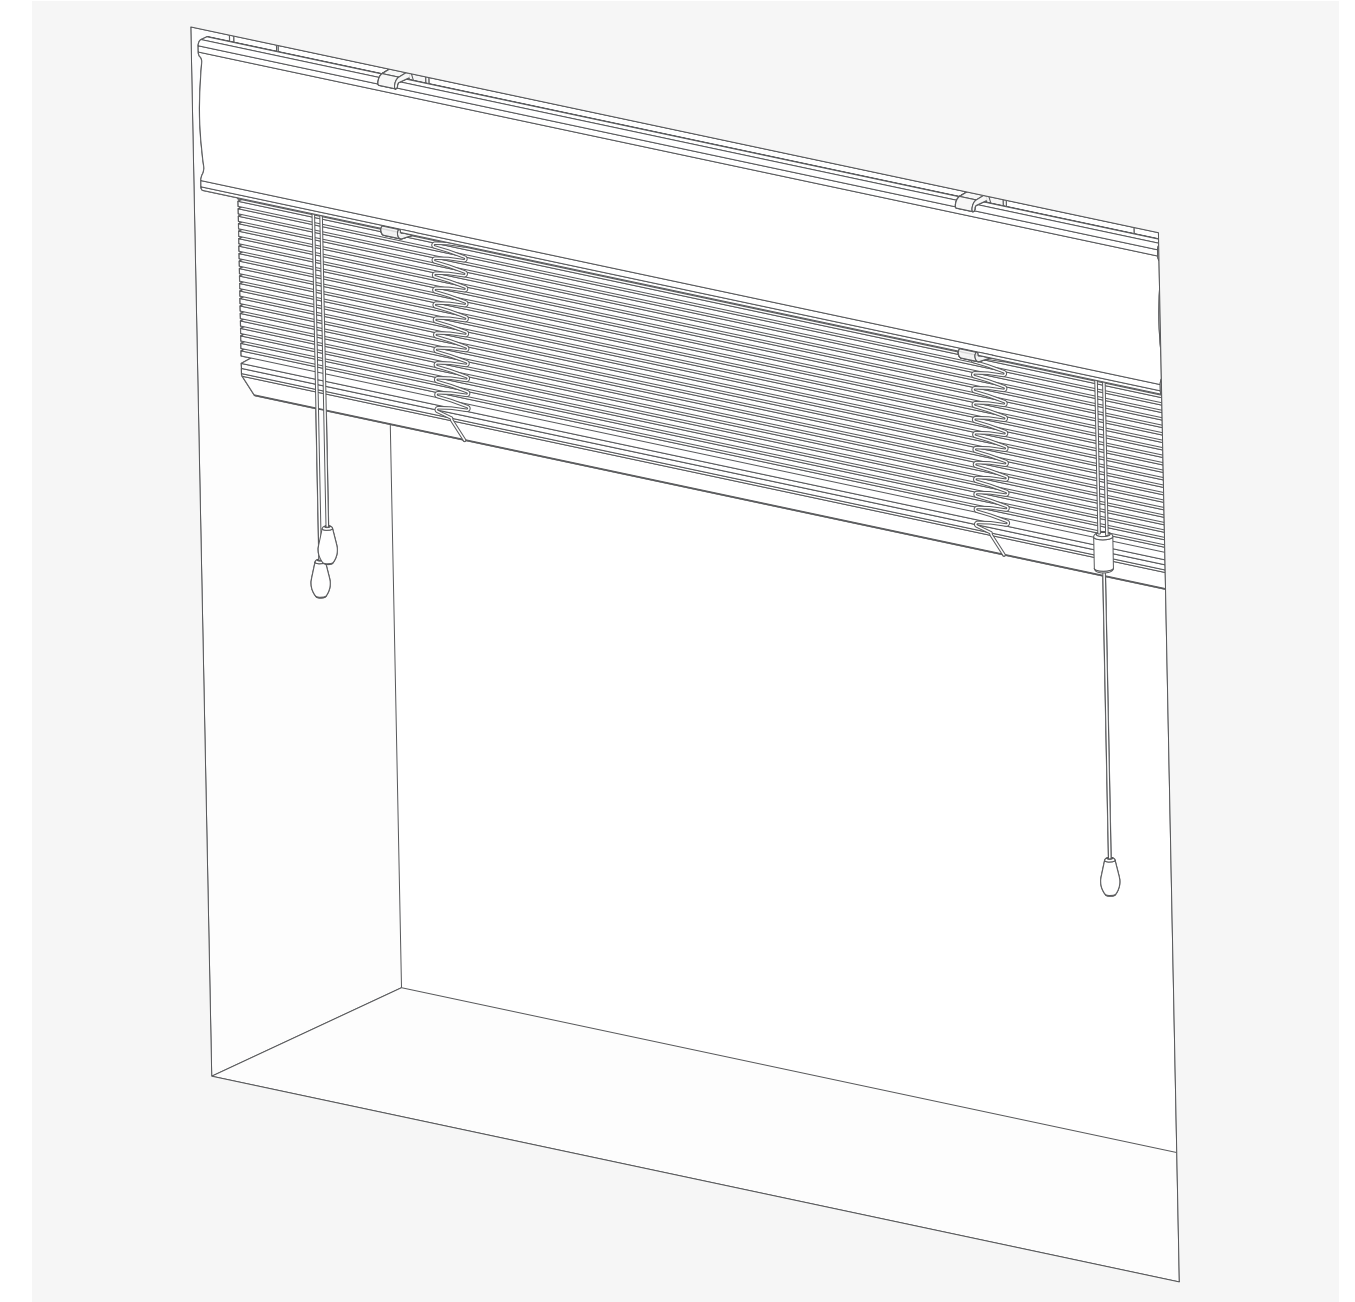


Tools required for this install:

- Handheld drill
- 4mm masonry drill bit
- Phillips screwdriver / Phillips driver bit
- Mallet / hammer
- Pen / pencil

Larger parts contained in your order...

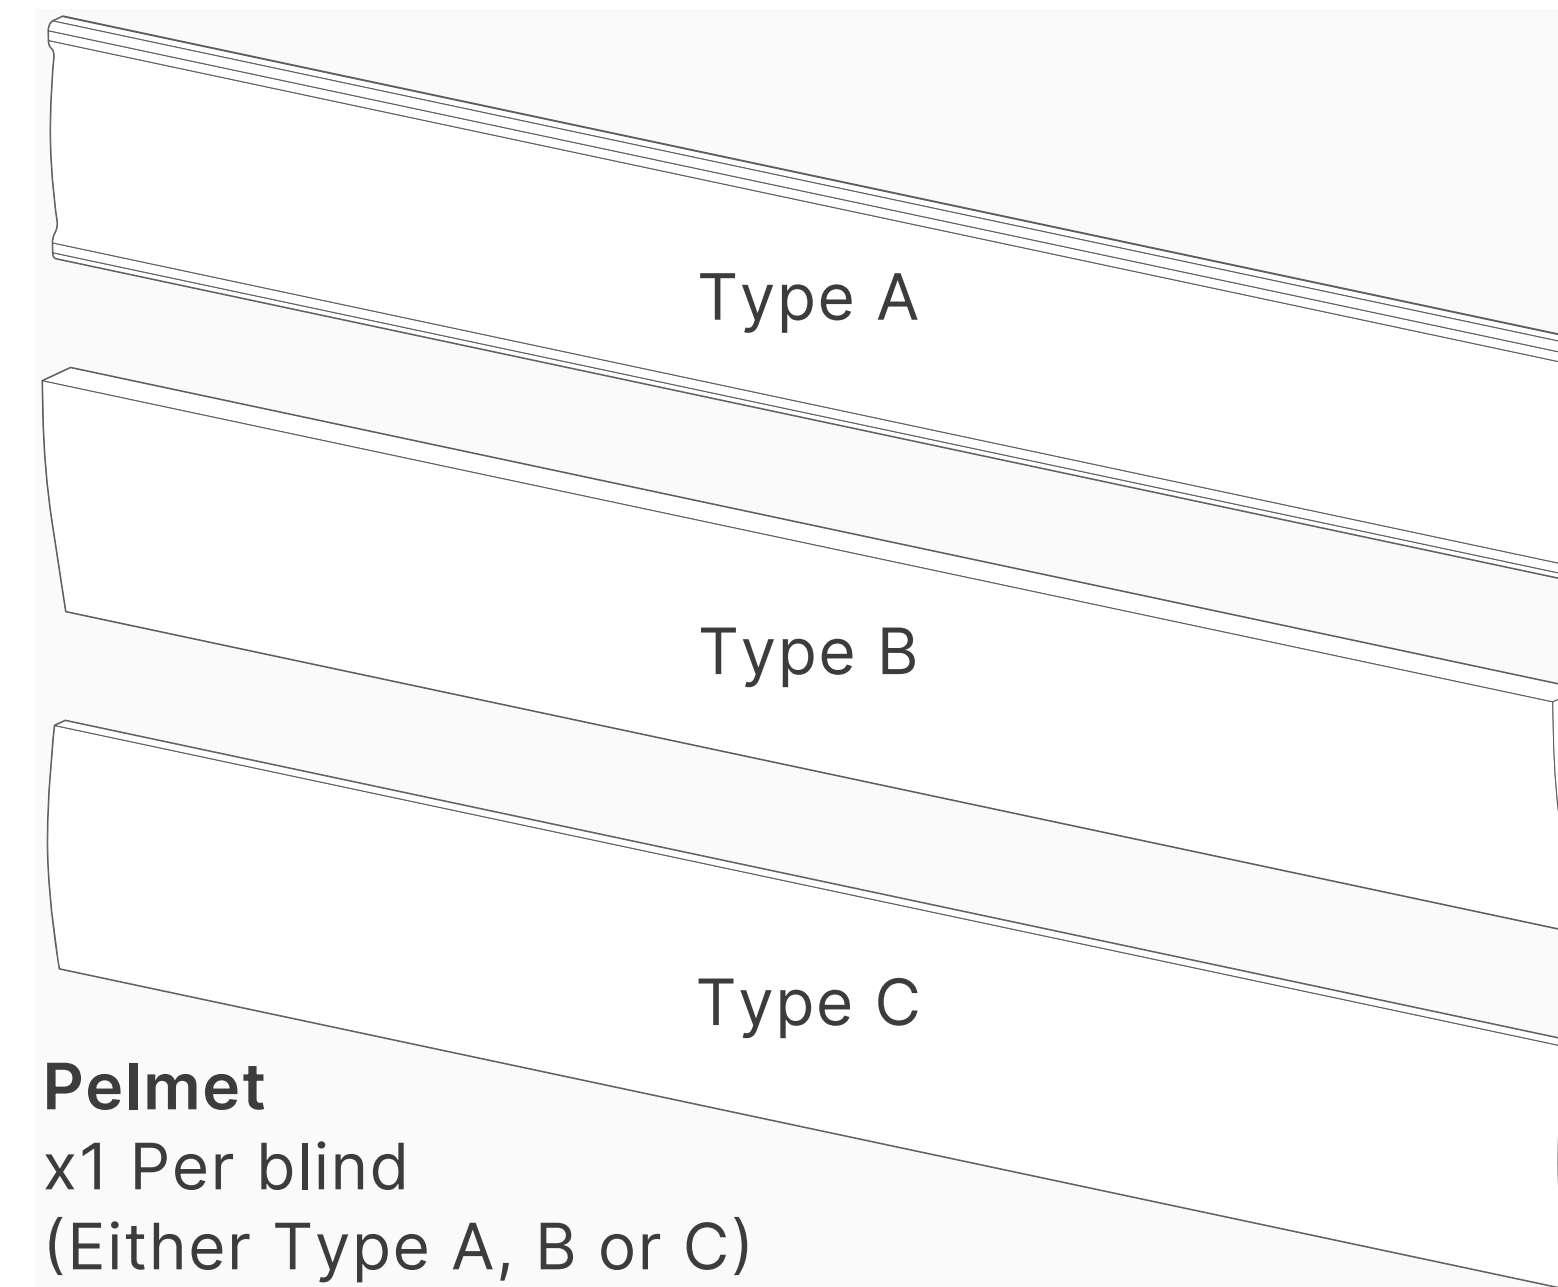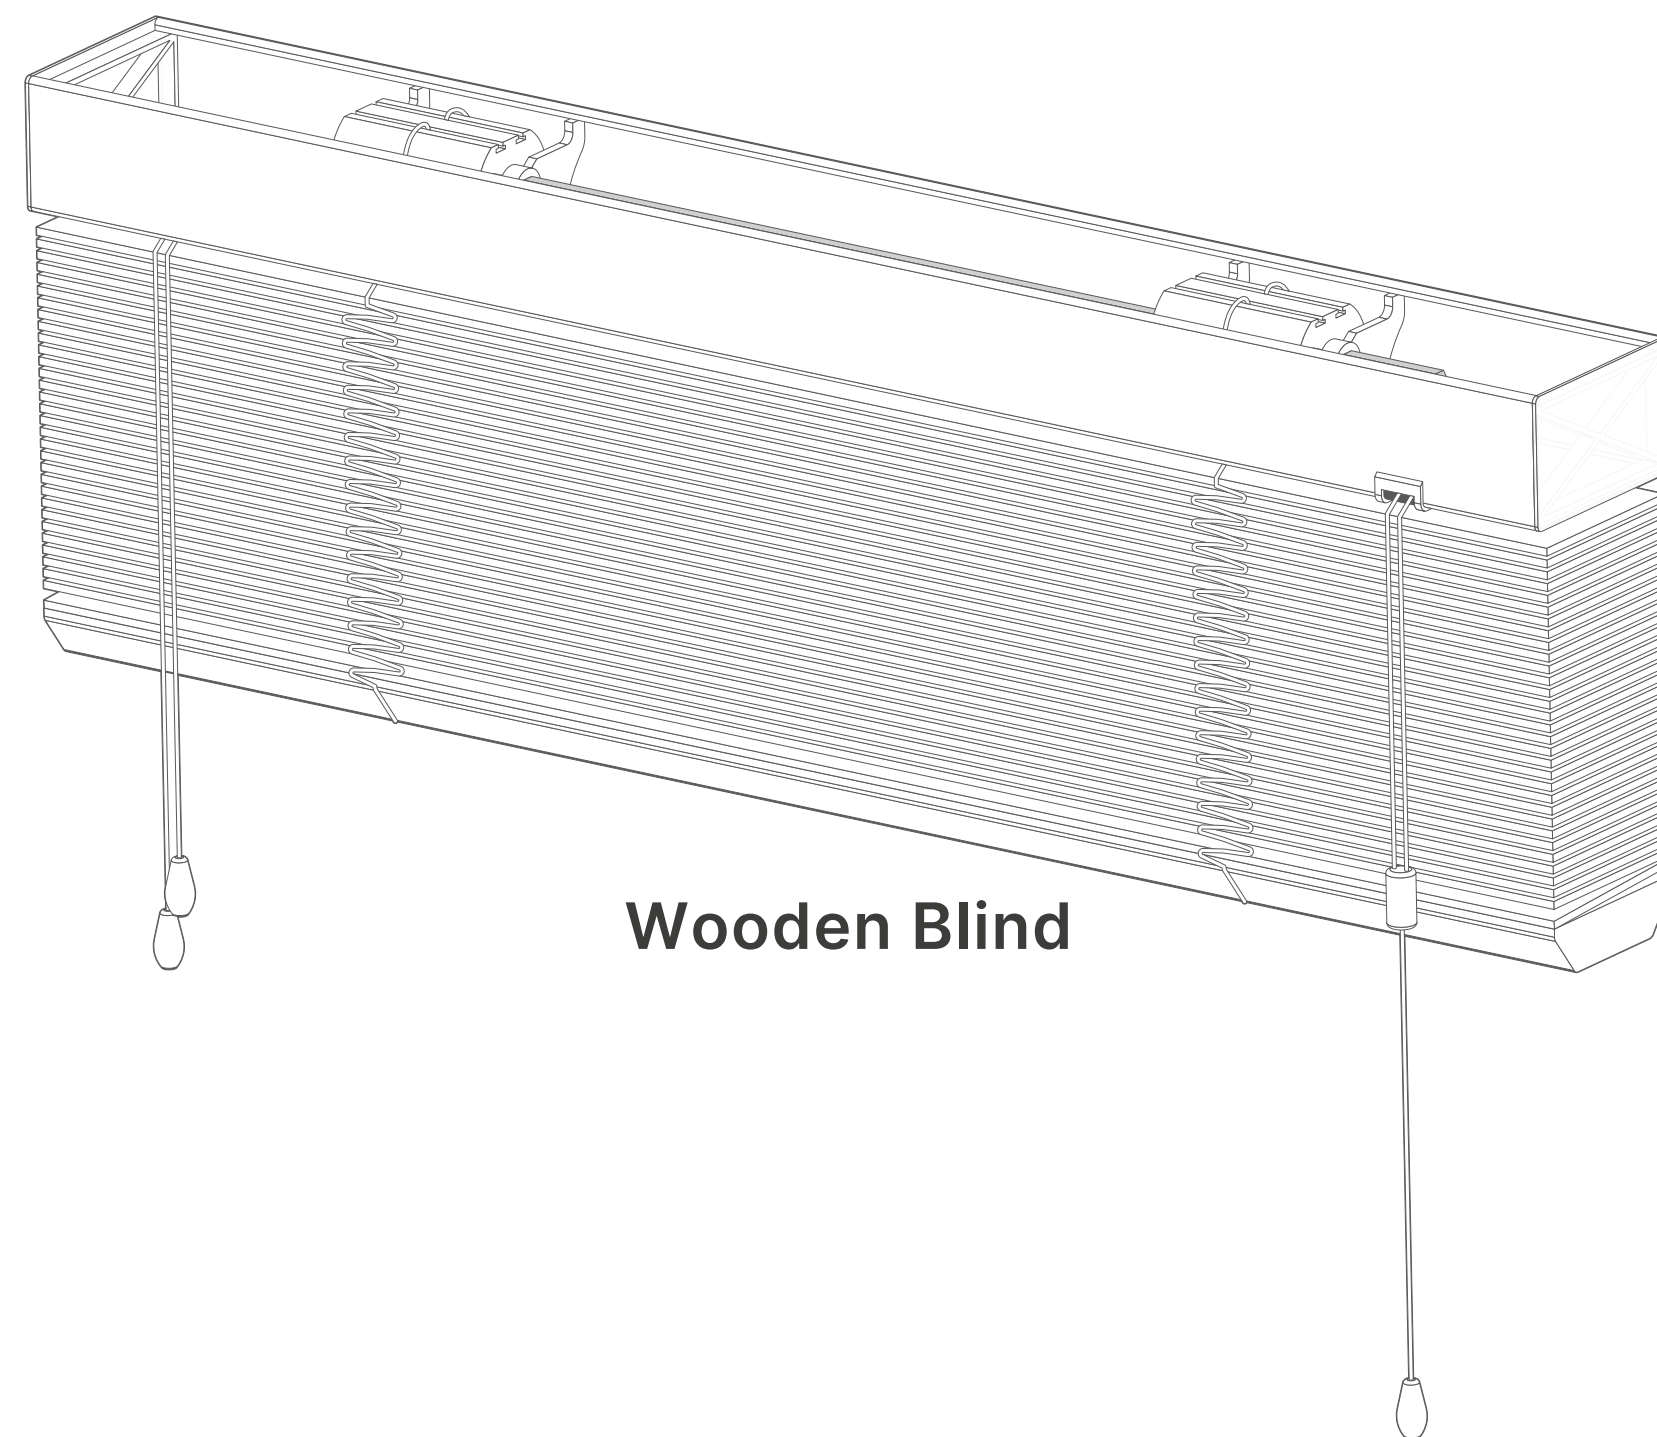


Smaller parts & fittings contained in your order...

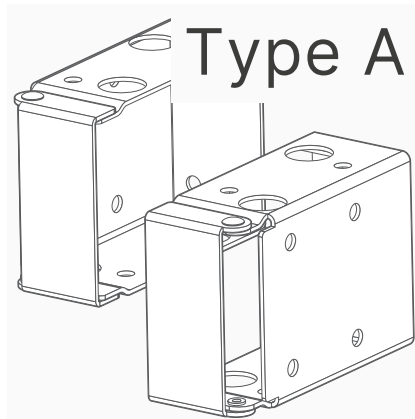


Type A


Mounting Brackets
x2 Per blind
(Either Type A or B)

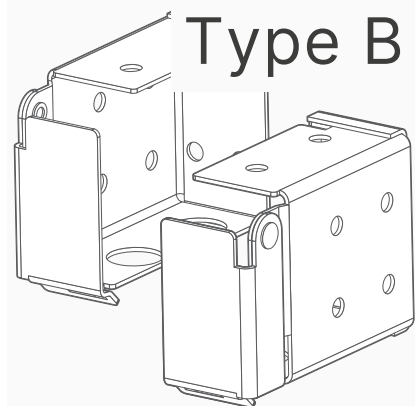


Type B

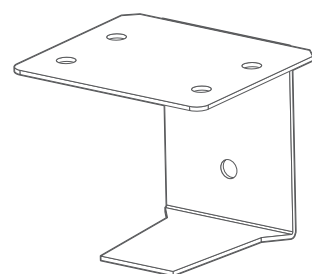


Support Brackets
Multiple per blind,
based on width
(Only supplied for
wider blinds)

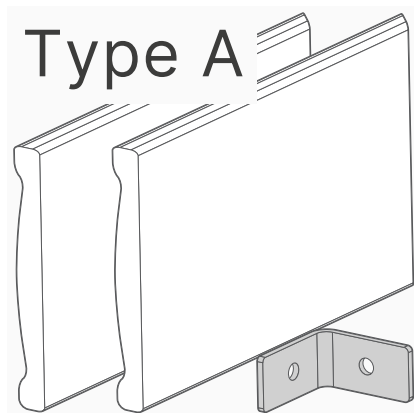

Type A

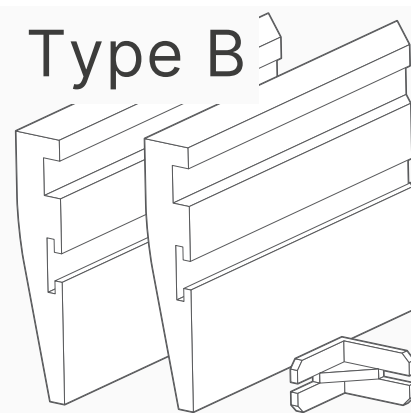


Type B

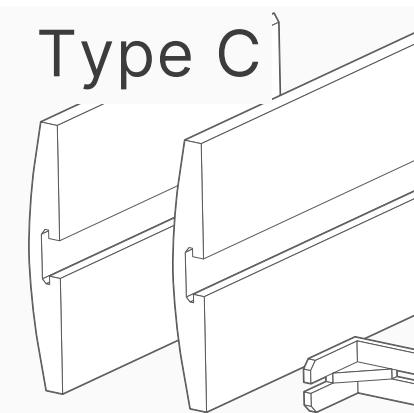


Type C

Pelmet Returns & Pelmet Return Brackets
x2 per blind (Either Type A, B or C)

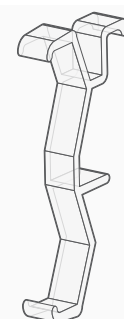

Type A

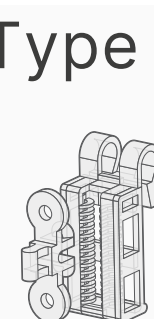

Type B




Type C


Pelmet Clips
Multiple per blind, based on width (Either Type A, B or C)



Safety Cleat
x1 Per blind

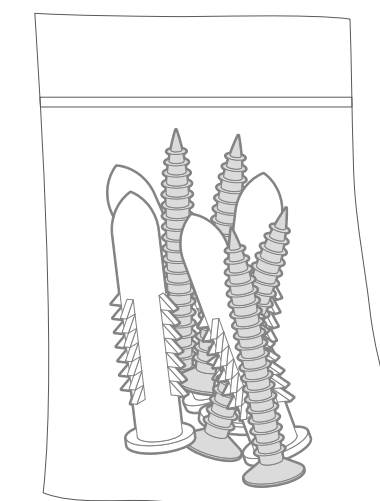

Screws & wall plugs
x2 per mounting bracket
x2 per support bracket
x2 per safety cleat

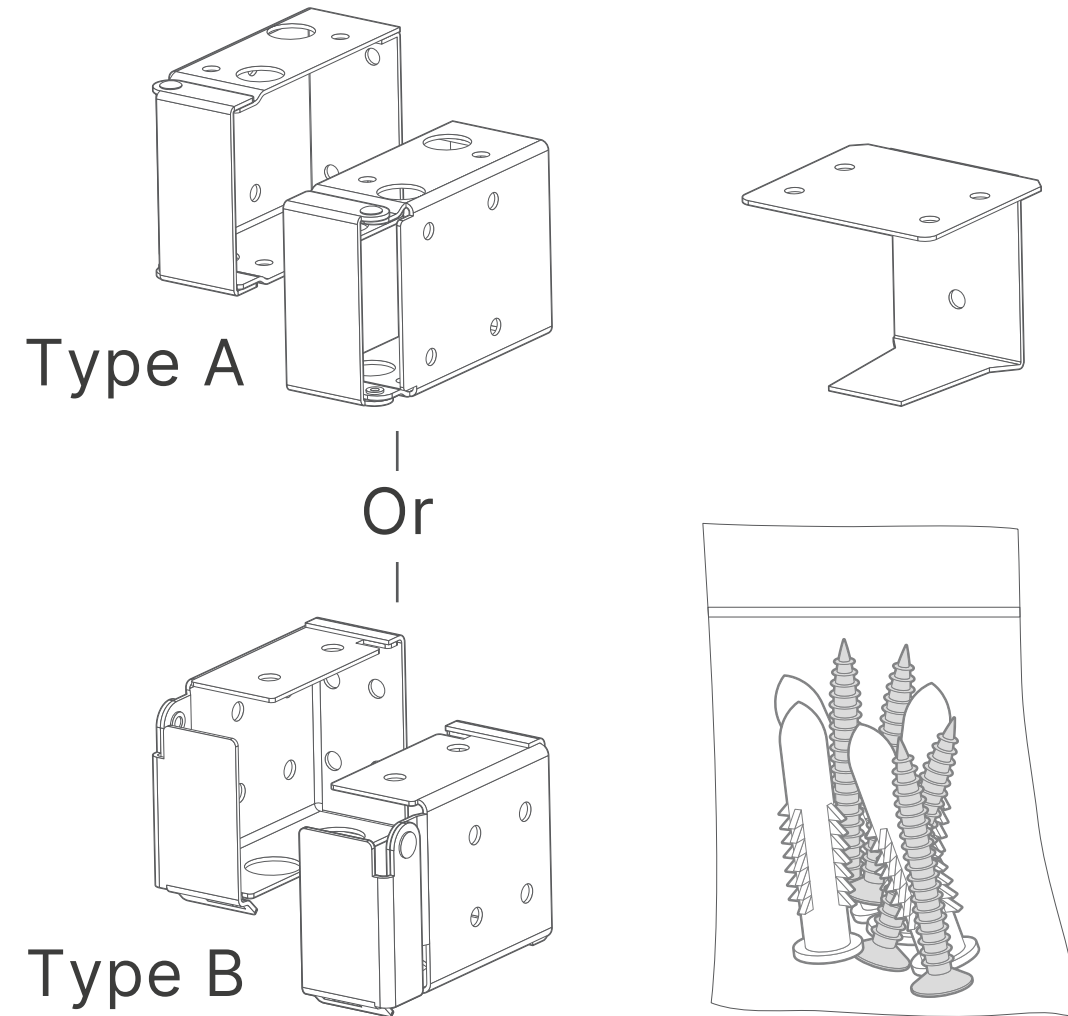

Parts & tools required for this section:

Parts

- Mounting brackets
- Support brackets (if supplied)
- Screws & wall plugs


Tools

- Handheld drill
- 4mm masonry drill bit
- Phillips screwdriver / Phillips driver bit
- Mallet / hammer
- Pen/pencil


TOP TIP

The instructions for this section only show Type A brackets, but both types function in the same way and are installed in the same way.


First, choose the method you'll be using to install your mounting brackets:

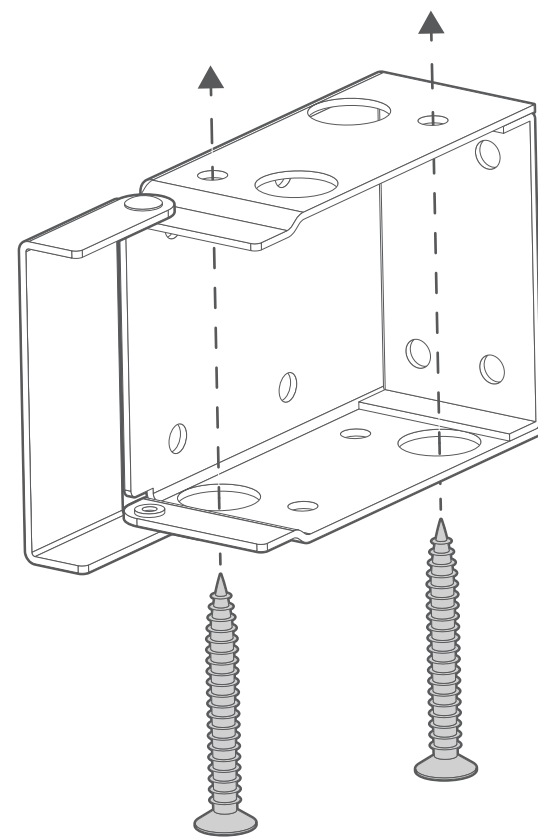

Top-fixing

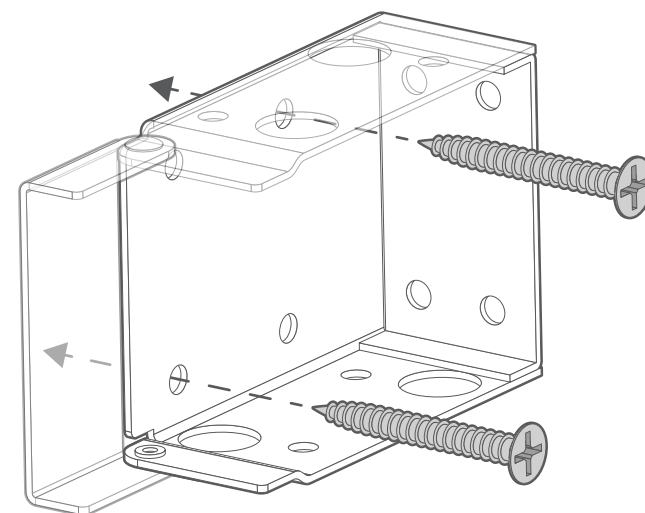

Side-fixing

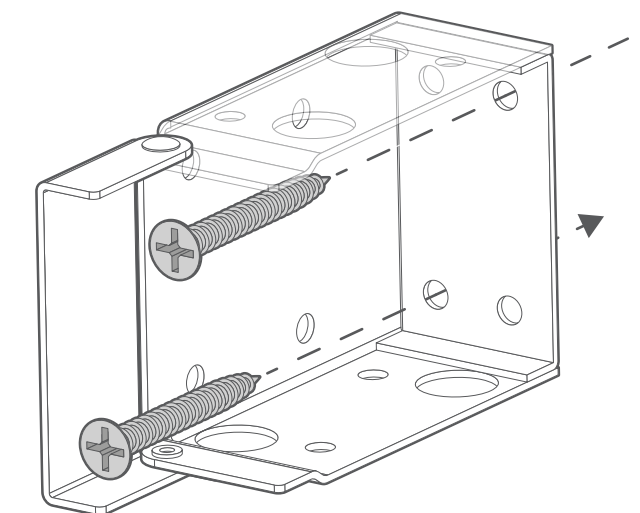

Face-fixing


Fitting inside the recess

The brackets are screwed into the top of the recess (top-fixing) or into the side walls of the recess (side-fixing).

Fitting outside the recess


The brackets are screwed to the wall above the recess.

Type A

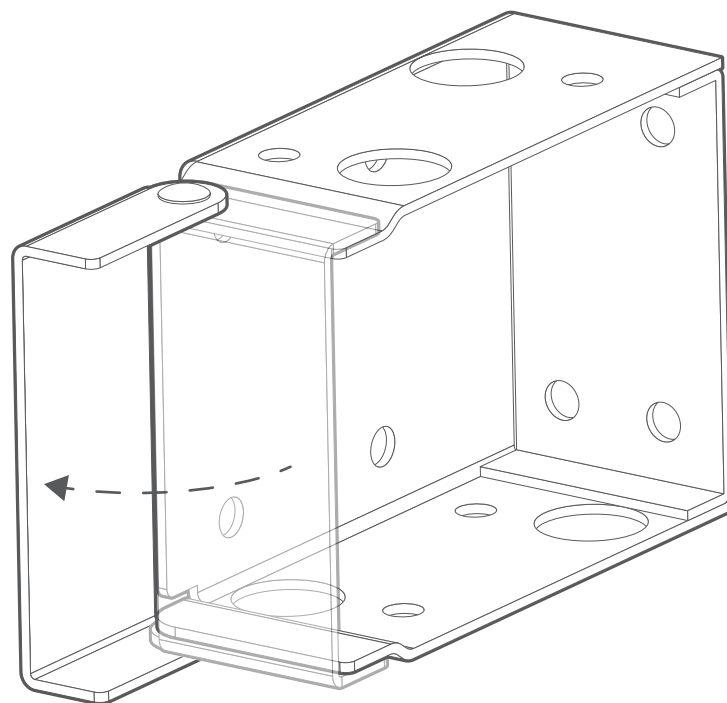



Before installing the brackets, take a moment to open the hinged front section.

Type B

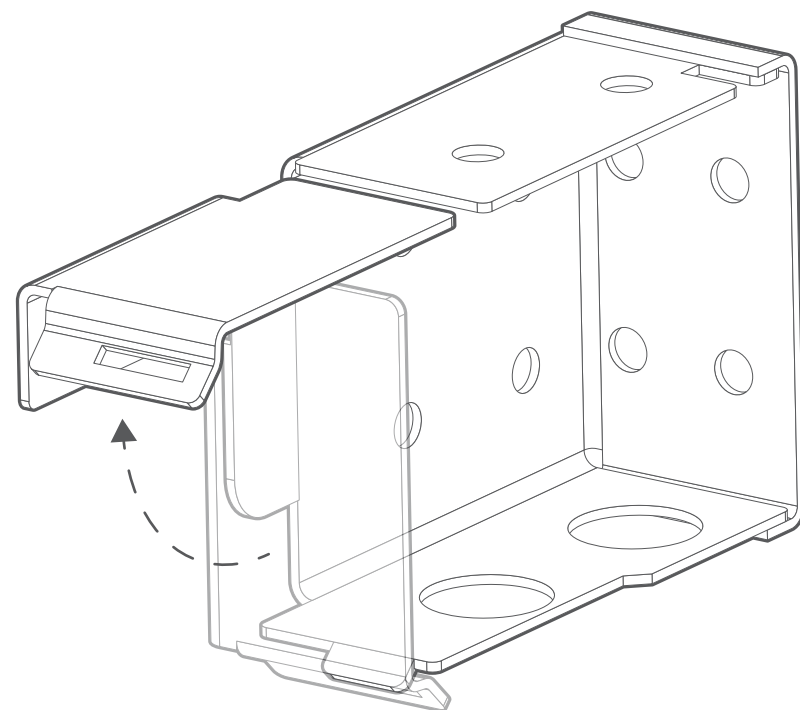

Squeeze the top and bottom faces of the bracket together to make it easier to pop the hinged section open.



Top-fixing the mounting brackets (for side-fixing, skip to page 8):

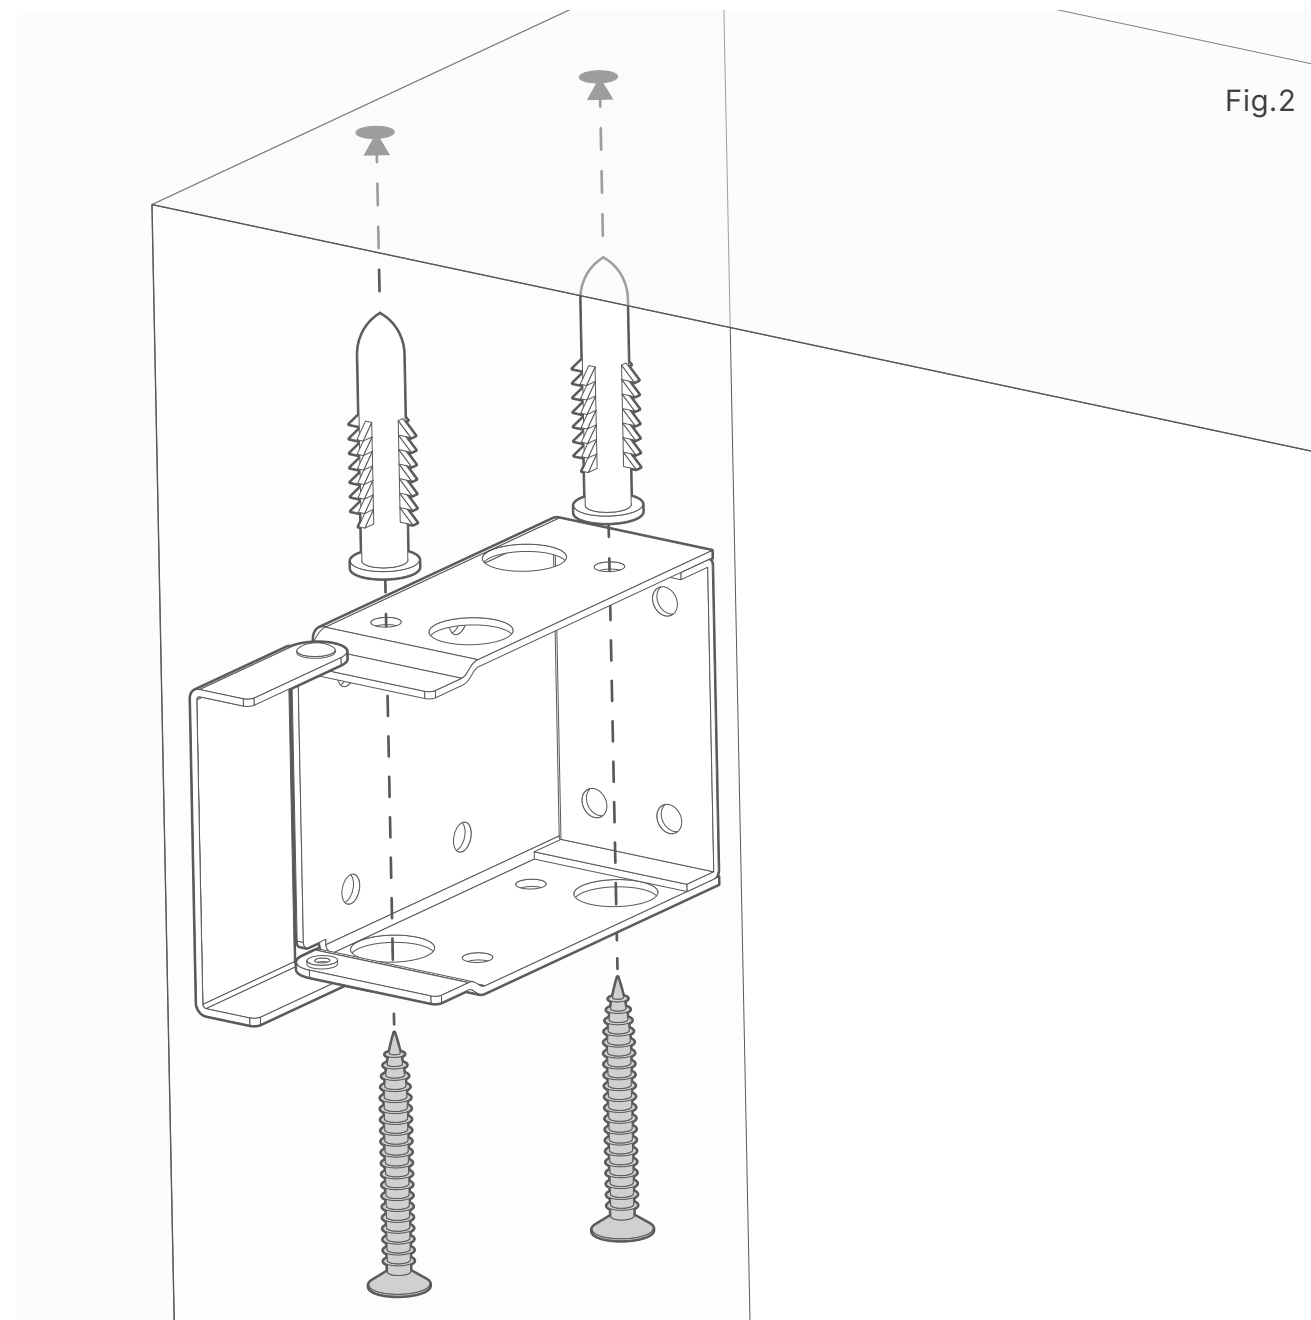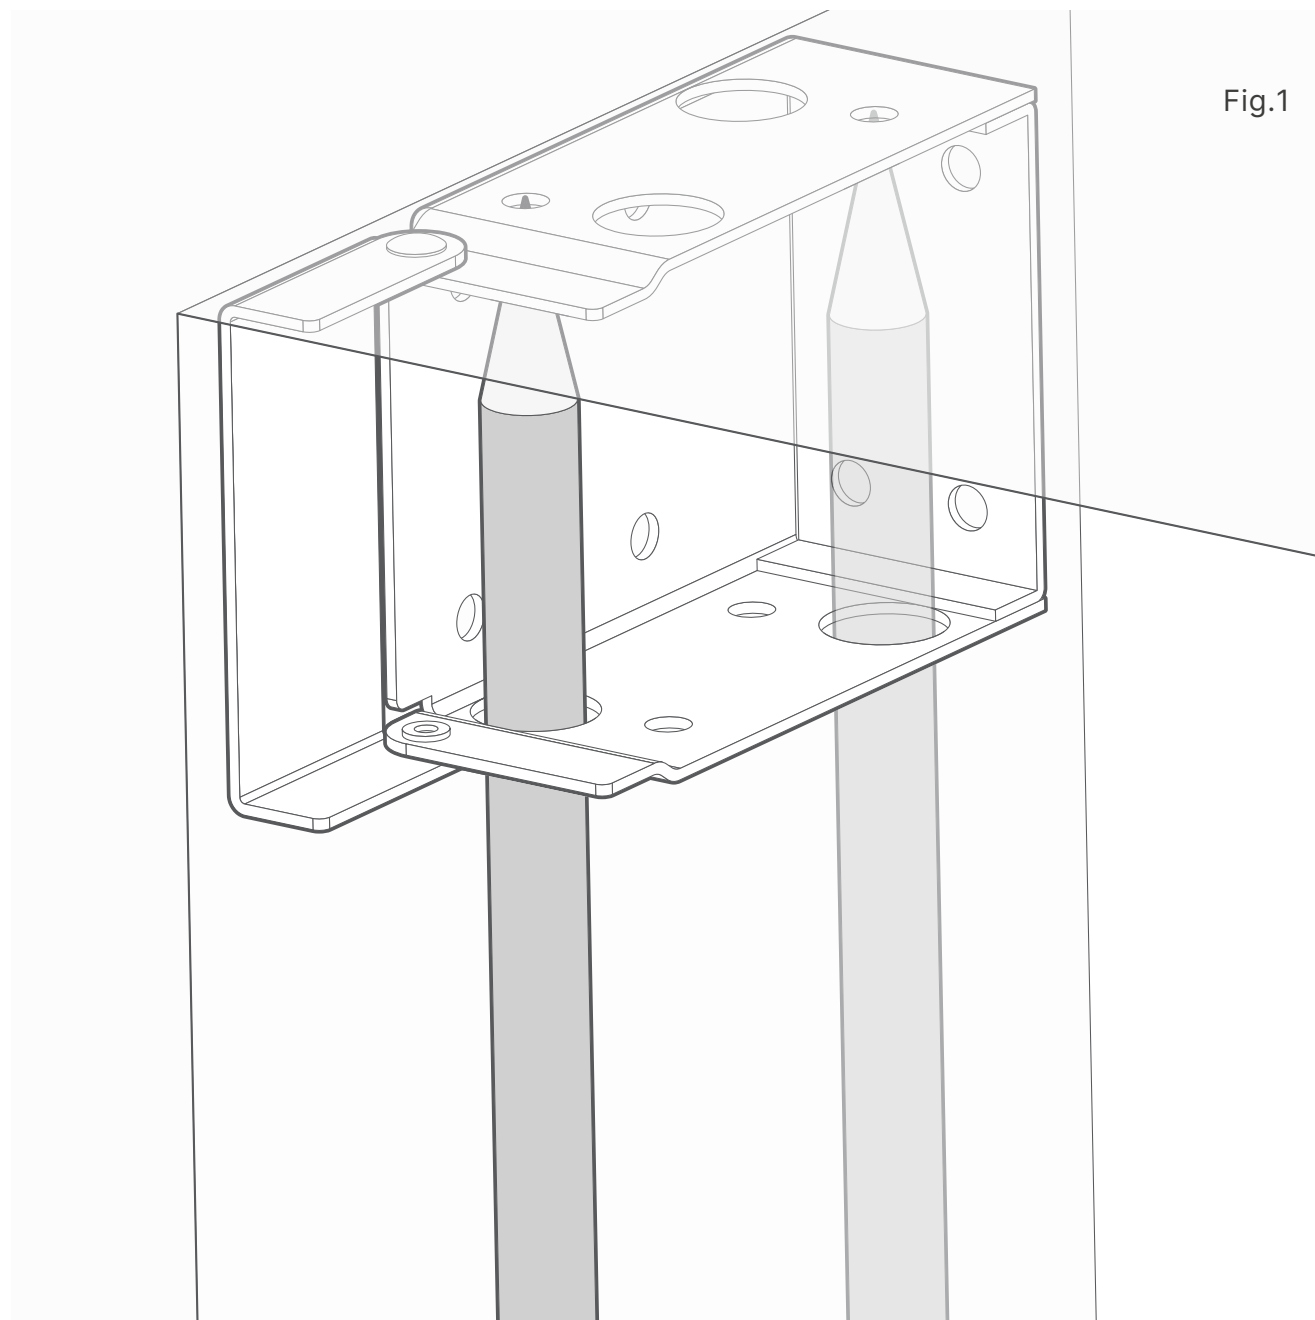

Hold the brackets in position up against the top of the recess and mark the locations of the screw holes on each bracket with a pen or pencil (Fig.1).

Drill a hole at each mark, then use the screws and wall plugs provided to secure the brackets in place (Fig.2).



Side-fixing the mounting brackets (for face-fixing, skip to page 9):

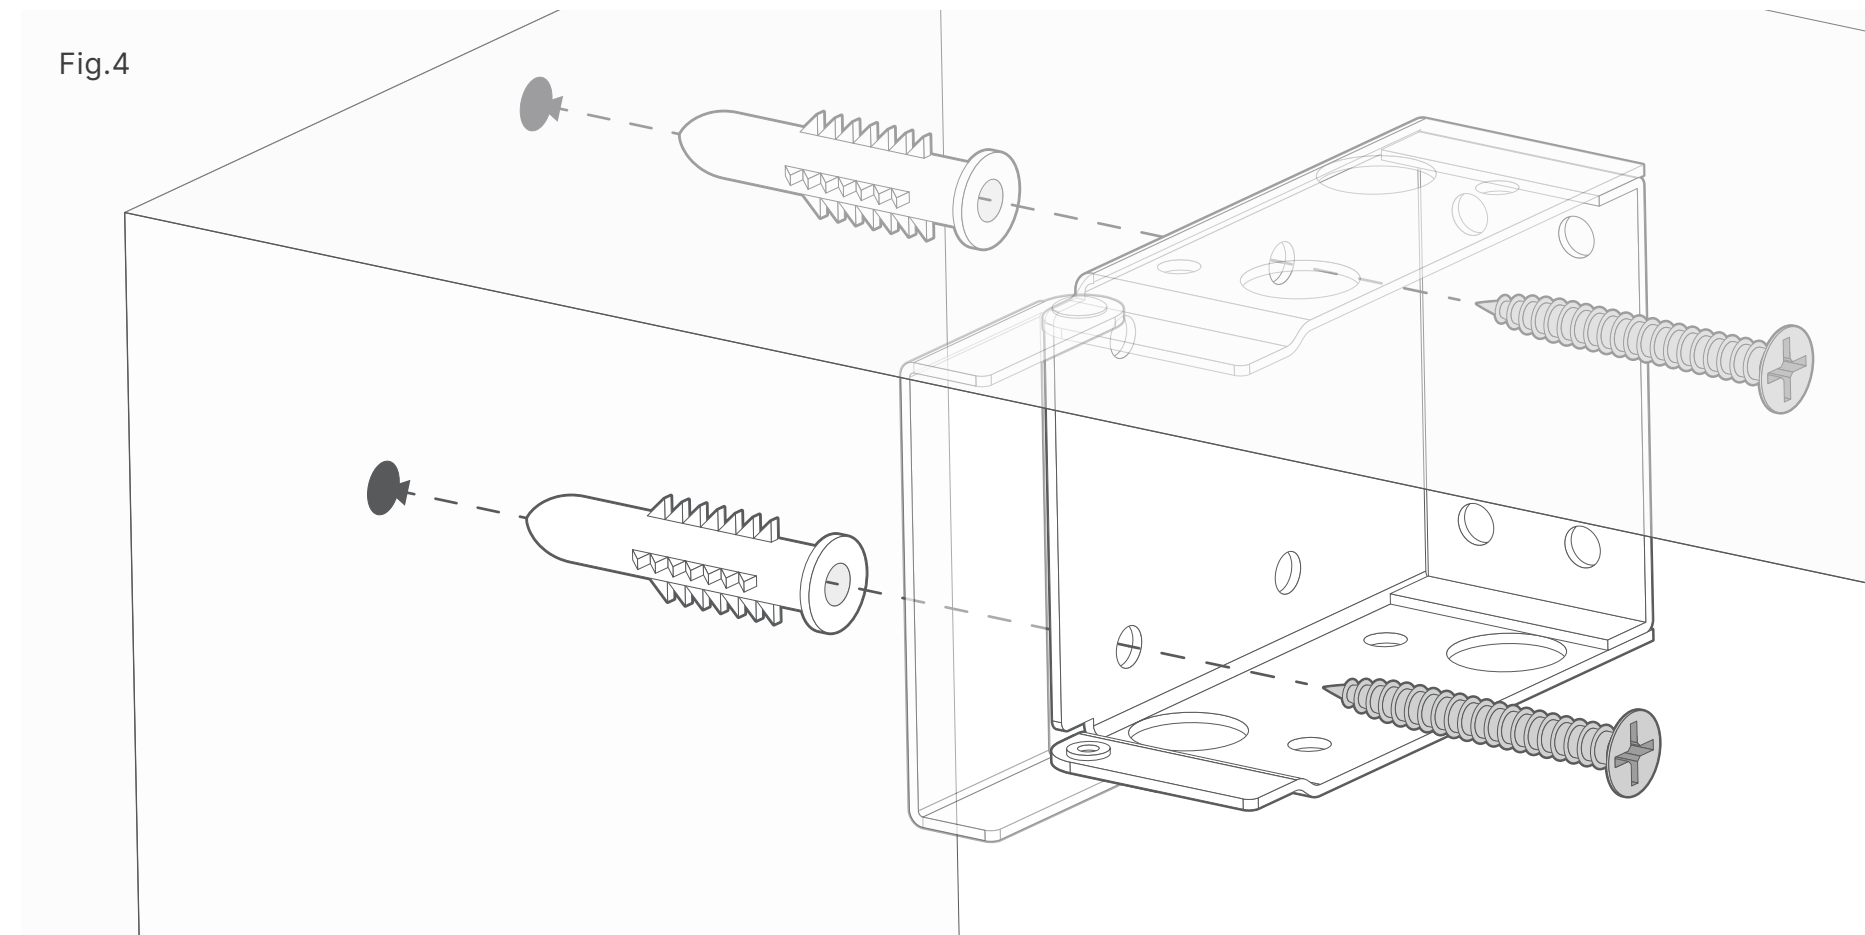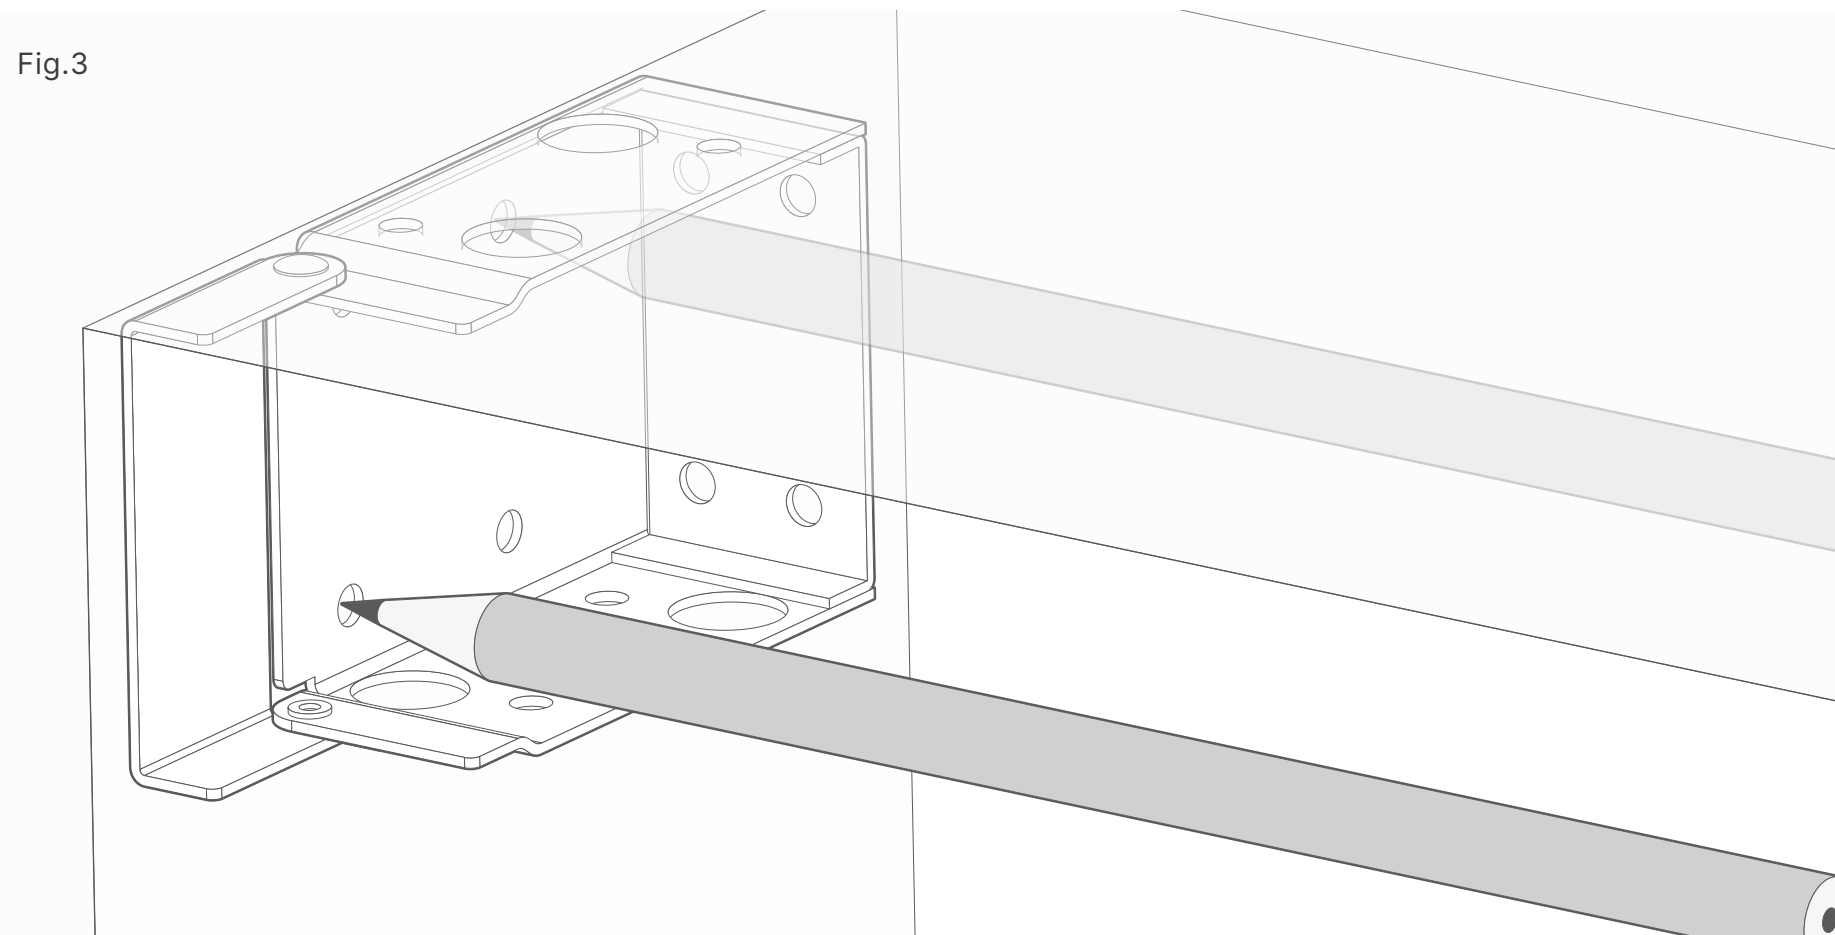

Hold the brackets in position up against the side walls at the top of the recess and mark the locations of the screw holes on each bracket with a pen or pencil (Fig.3).

Drill a hole at each mark, then use the screws and wall plugs provided to secure the brackets in place (Fig.4).



Face-fixing the mounting brackets:

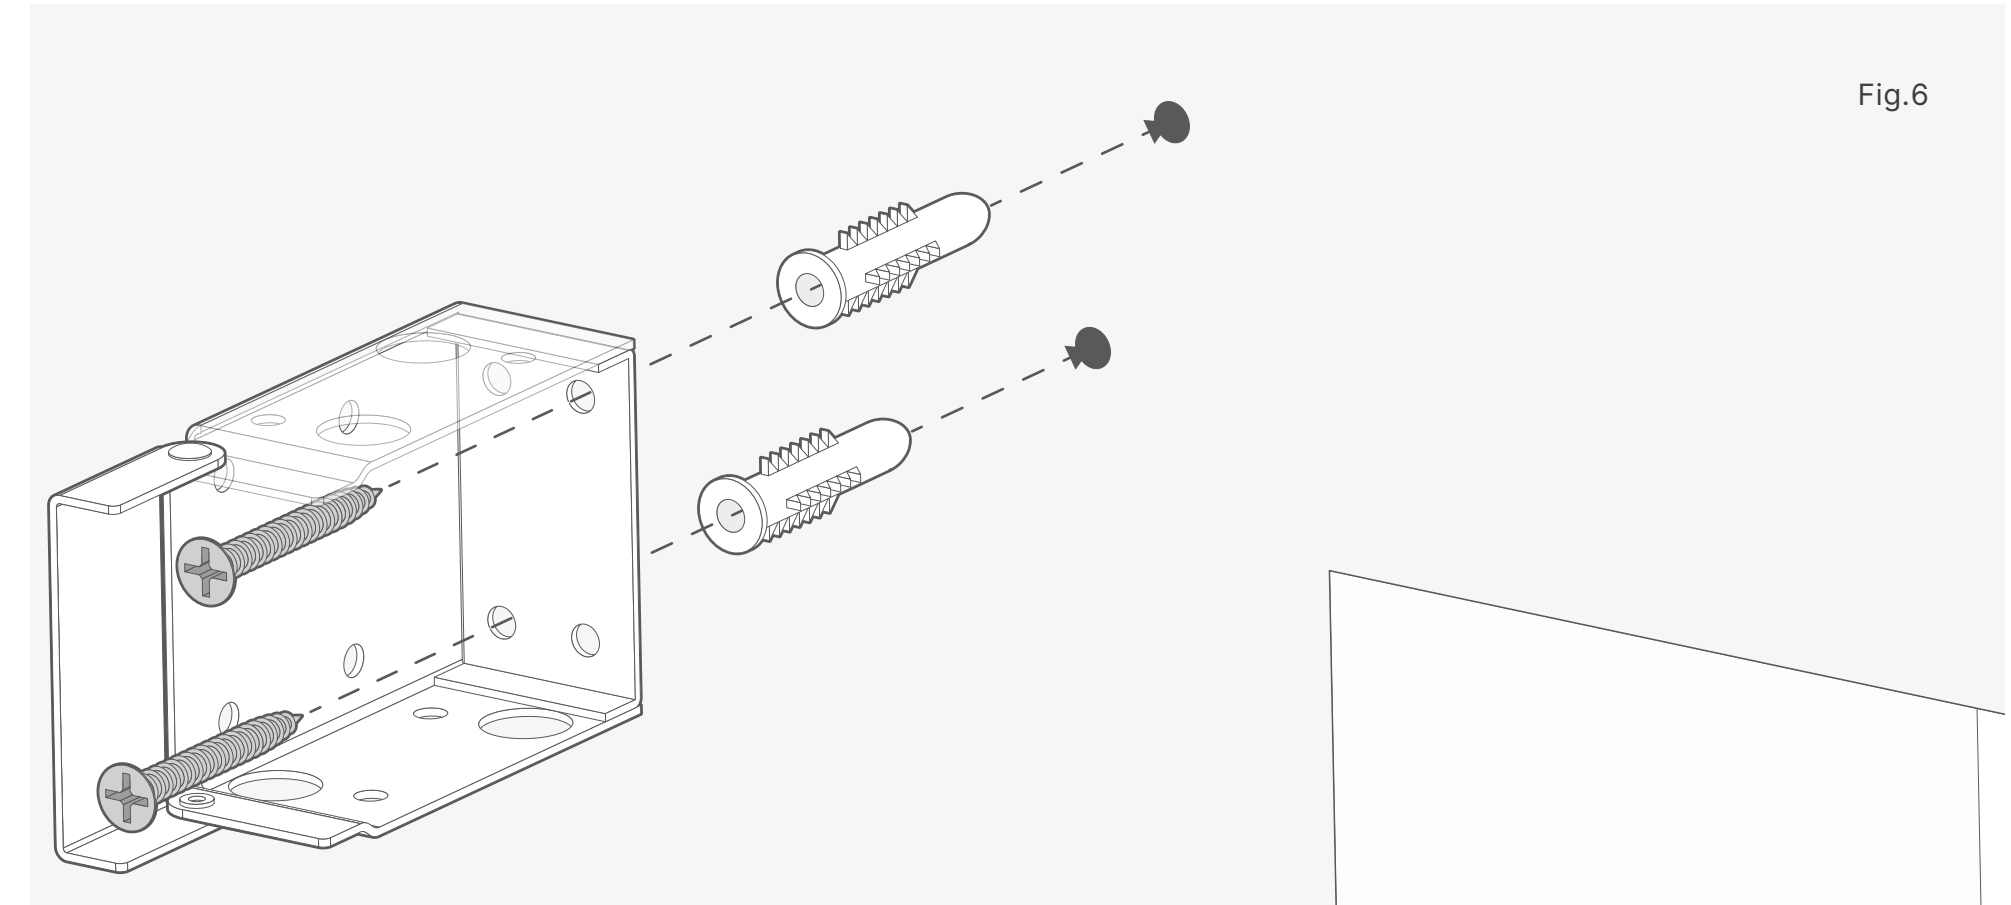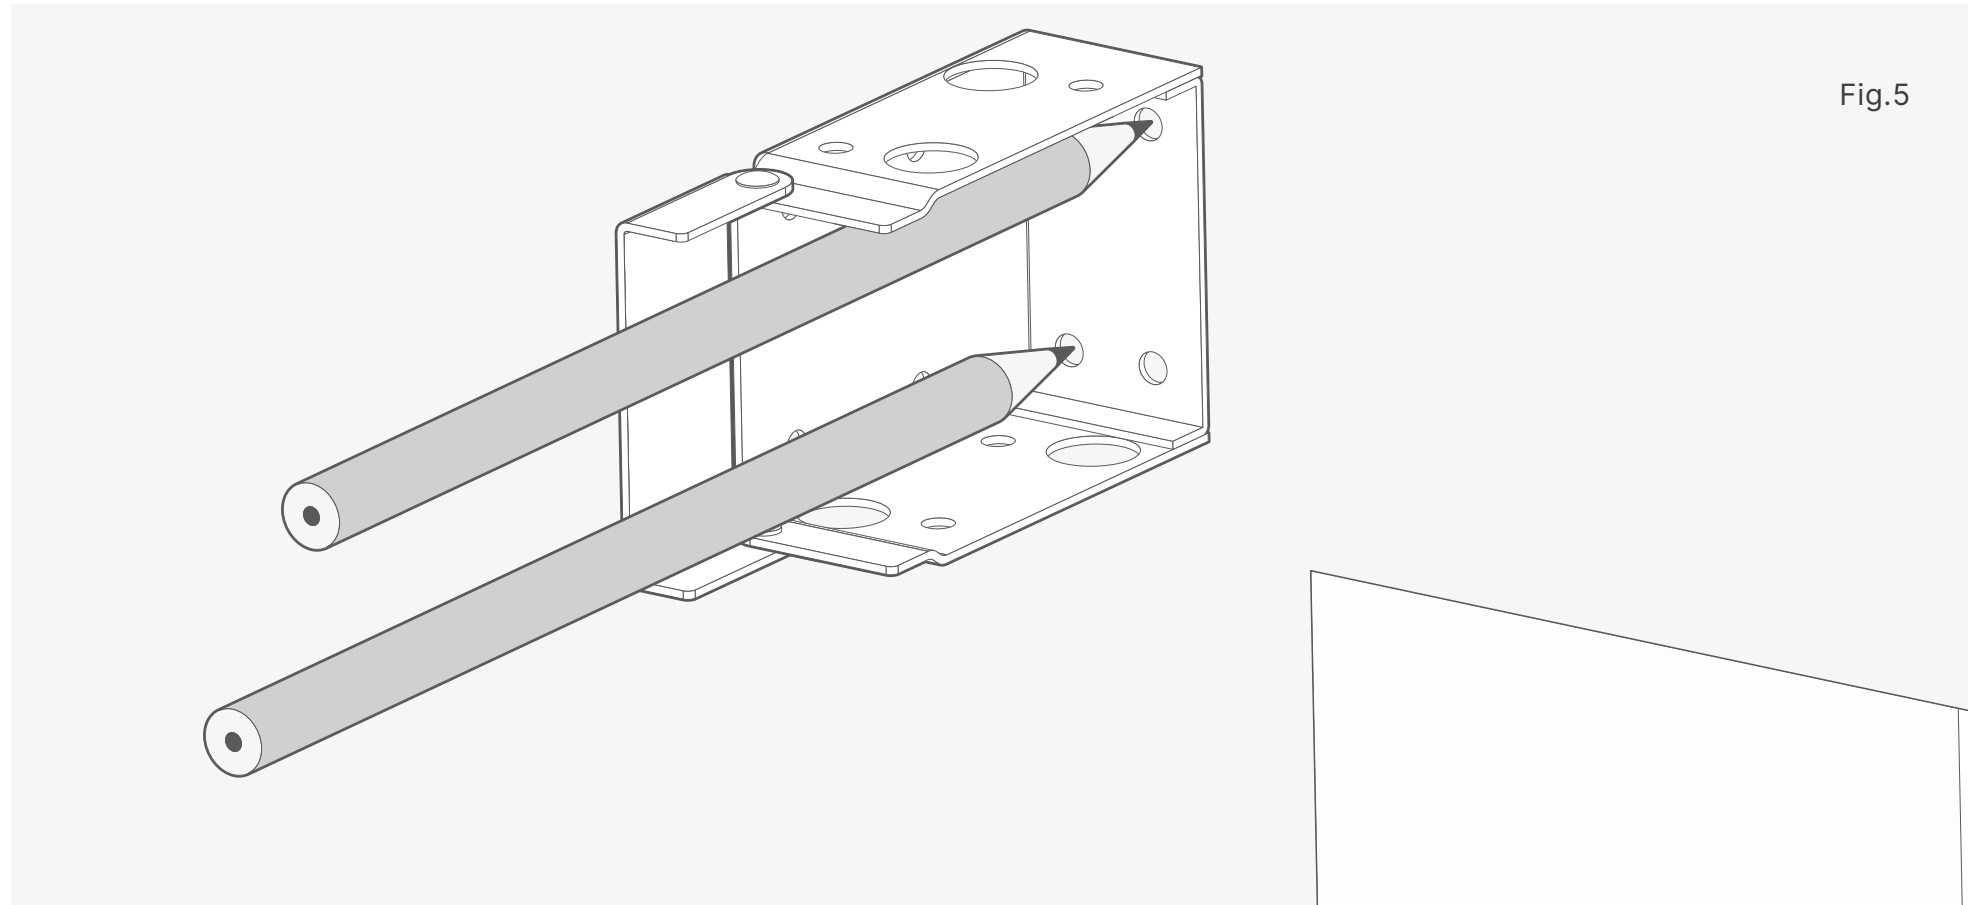

Hold the brackets in position up against the wall above the recess and mark the locations of the screw holes on each bracket with a pen or pencil (Fig.5). The locations of the mounting brackets should match where you took your measurements originally.



Drill a hole at each mark, then use the screws and wall plugs provided to secure the brackets in place (Fig.6).

Installing the support brackets (skip to the next page if not supplied):

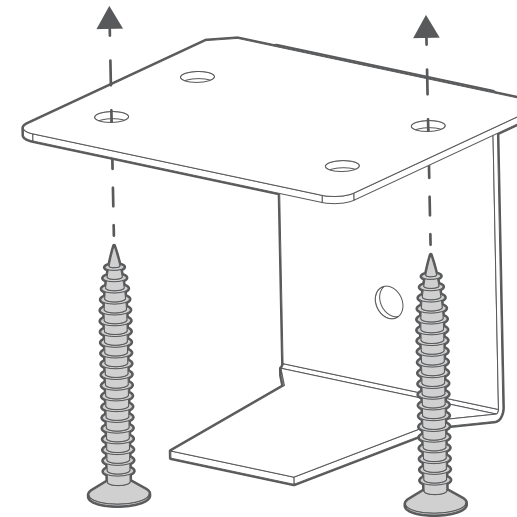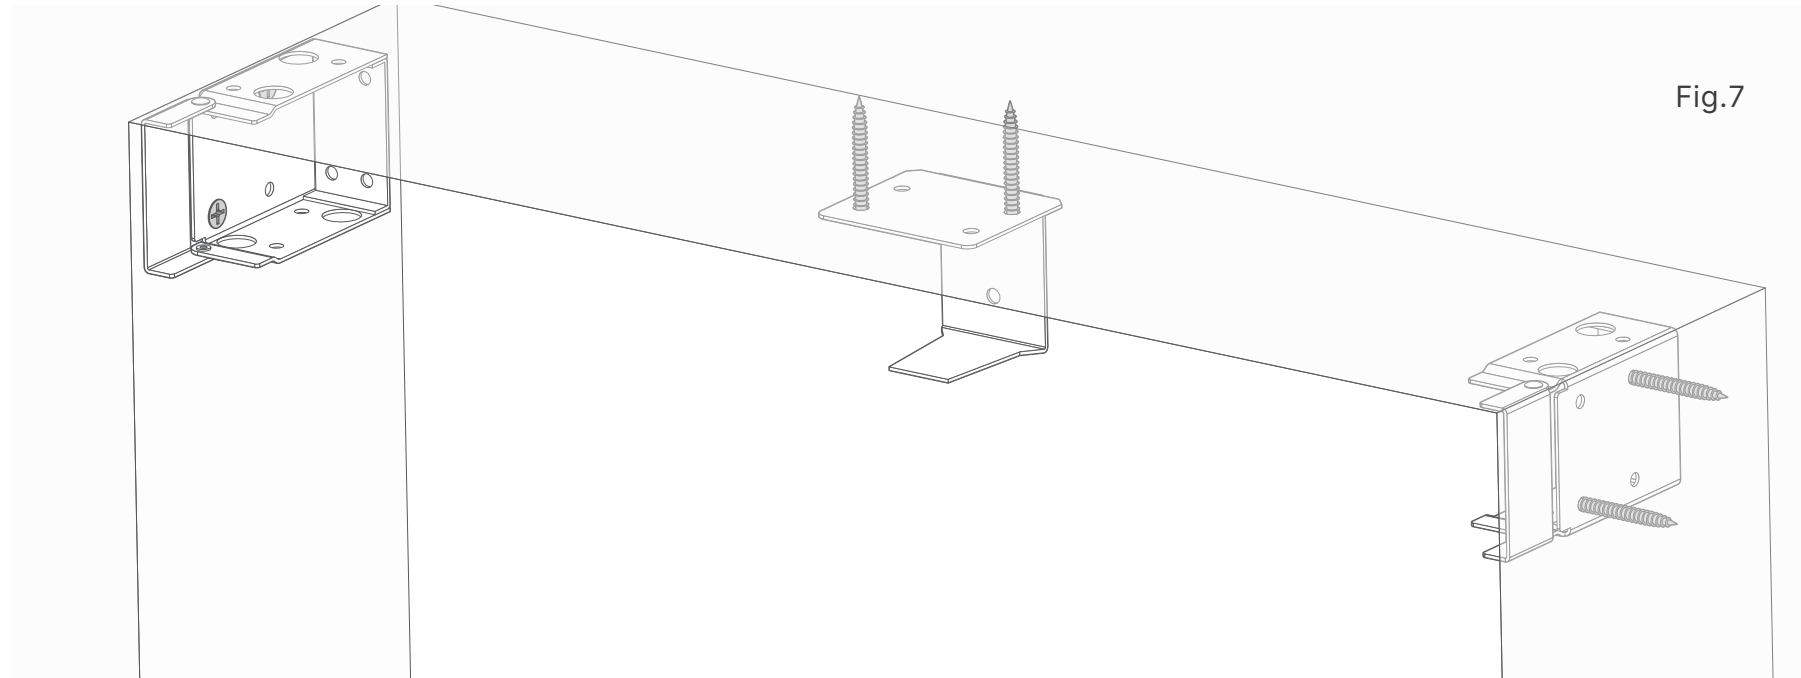




Top-fixing

The support brackets can also be installed either inside the recess (top-fixing, Fig.7) or outside the recess (face-fixing, Fig.8). Follow the same process of marking, drilling and attaching as you did with the mounting brackets. Locate the support brackets such that they aren't lined up with any of the blind's ladder cords (Fig.9).

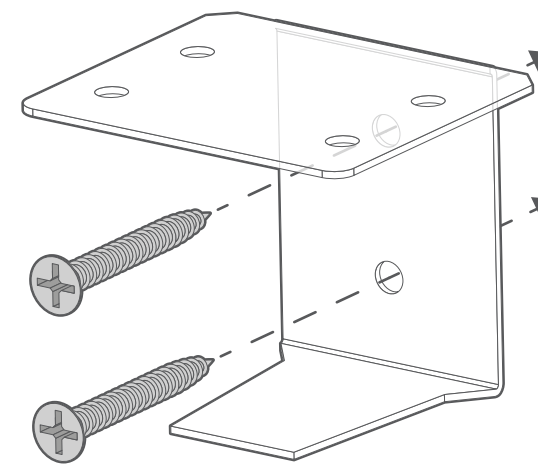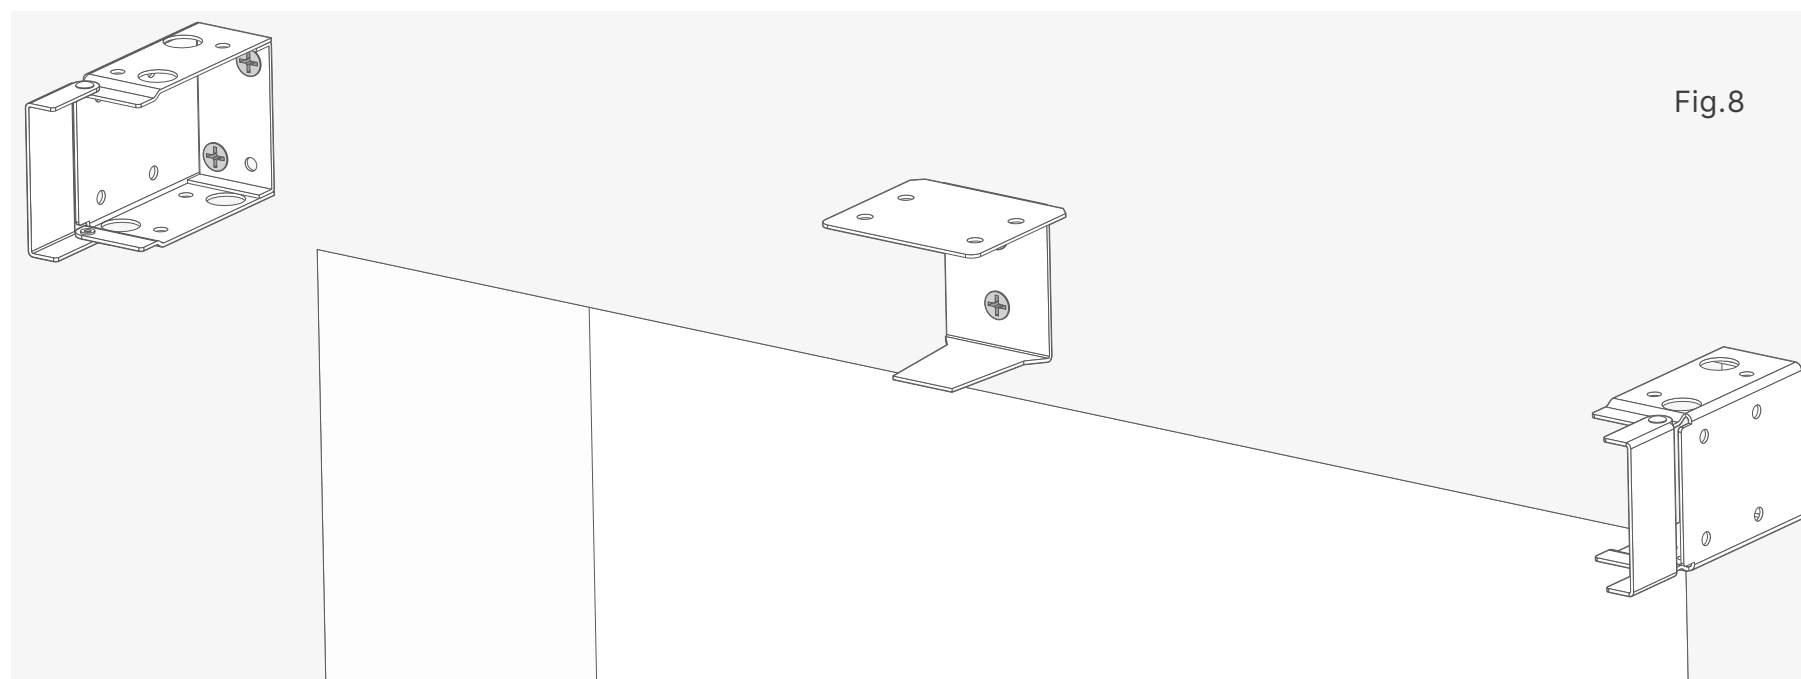


Face-fixing

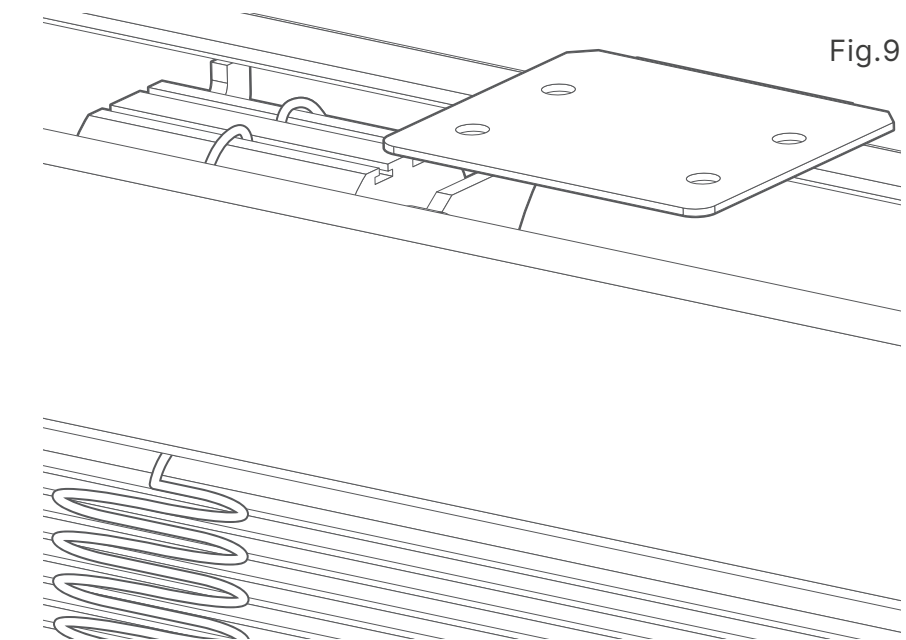


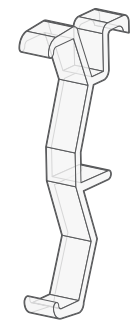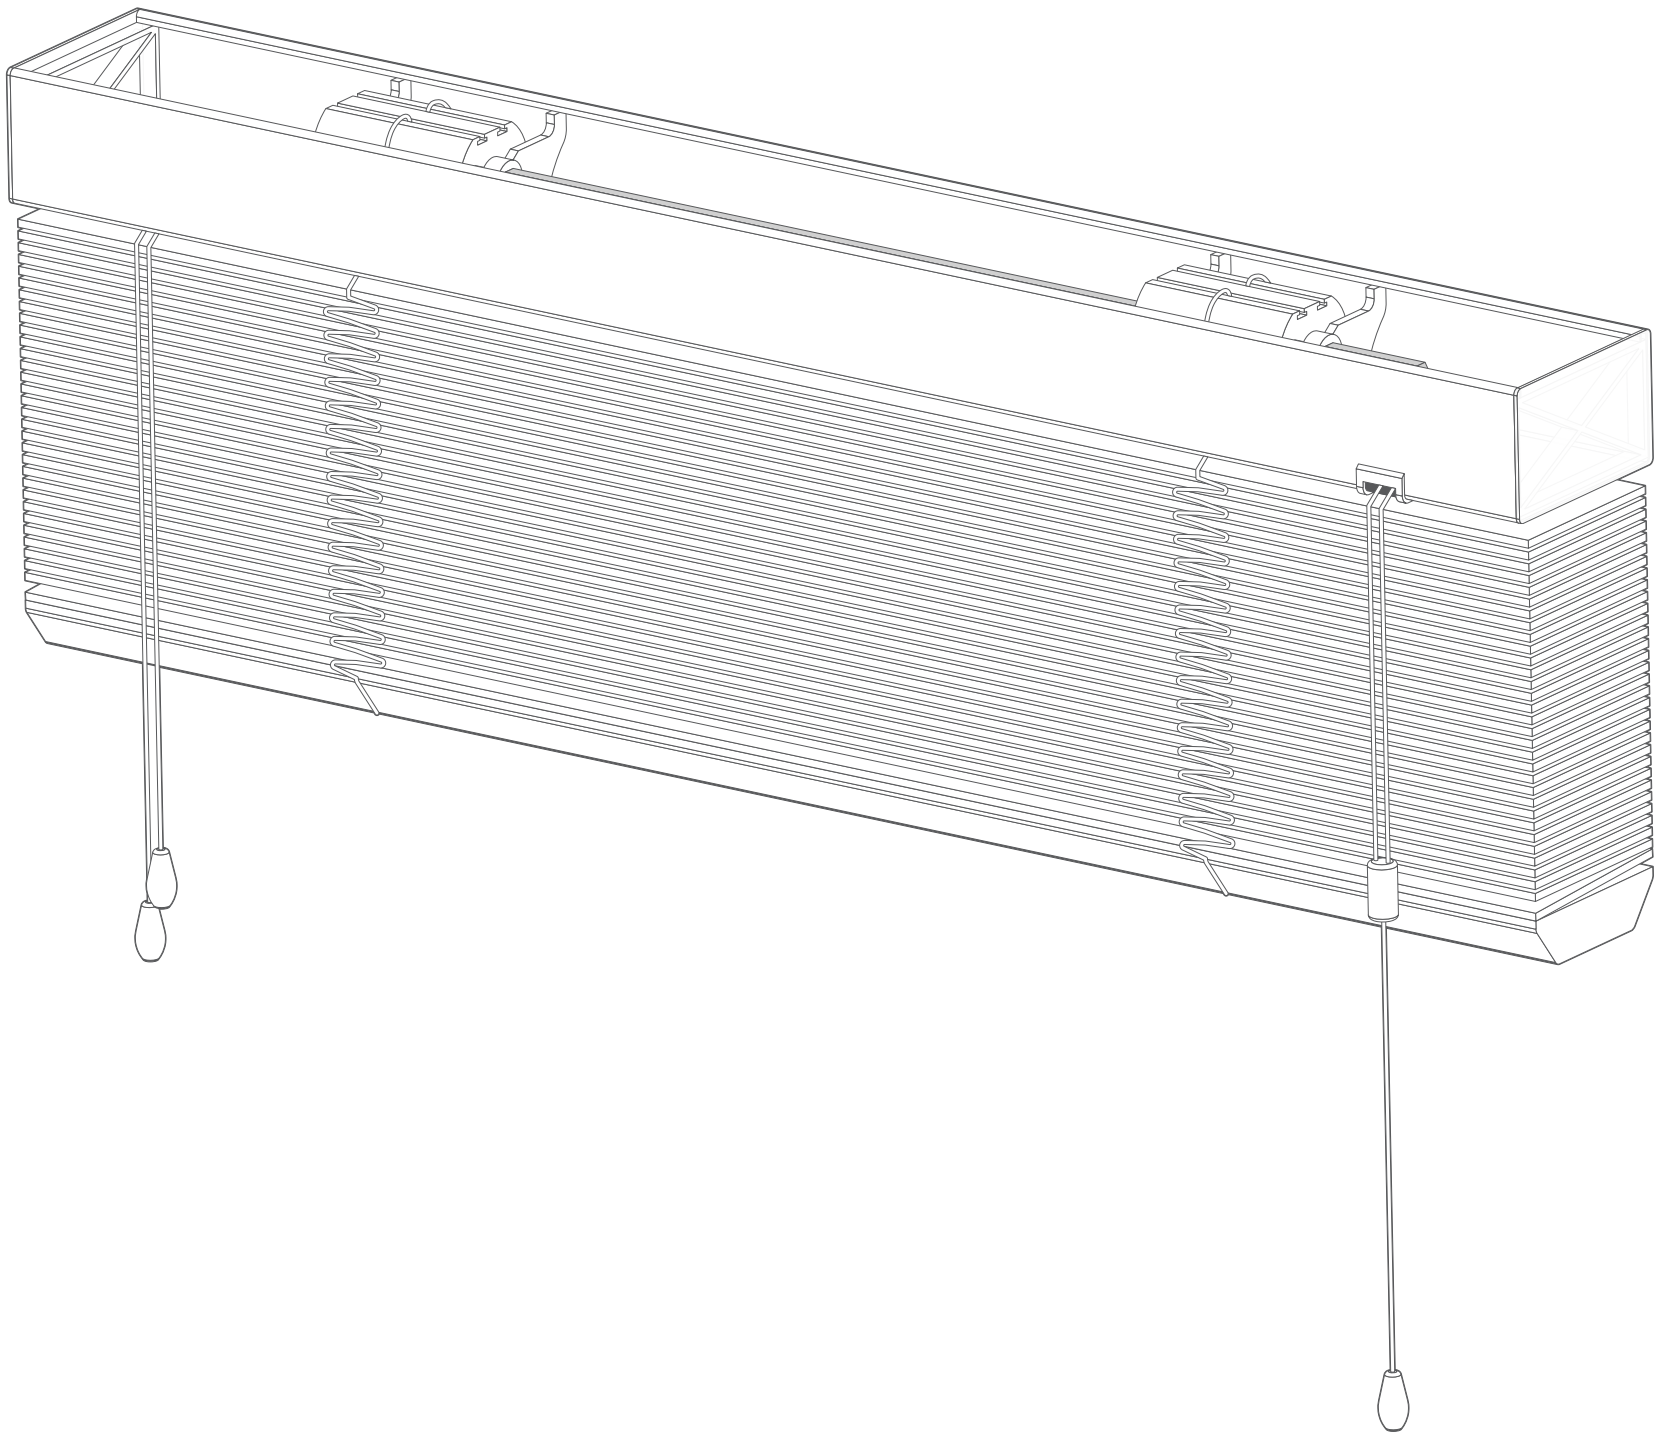

Or

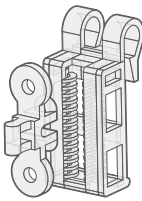


Or



Parts required for this section:

Parts

- Blind
- Pelmet clips

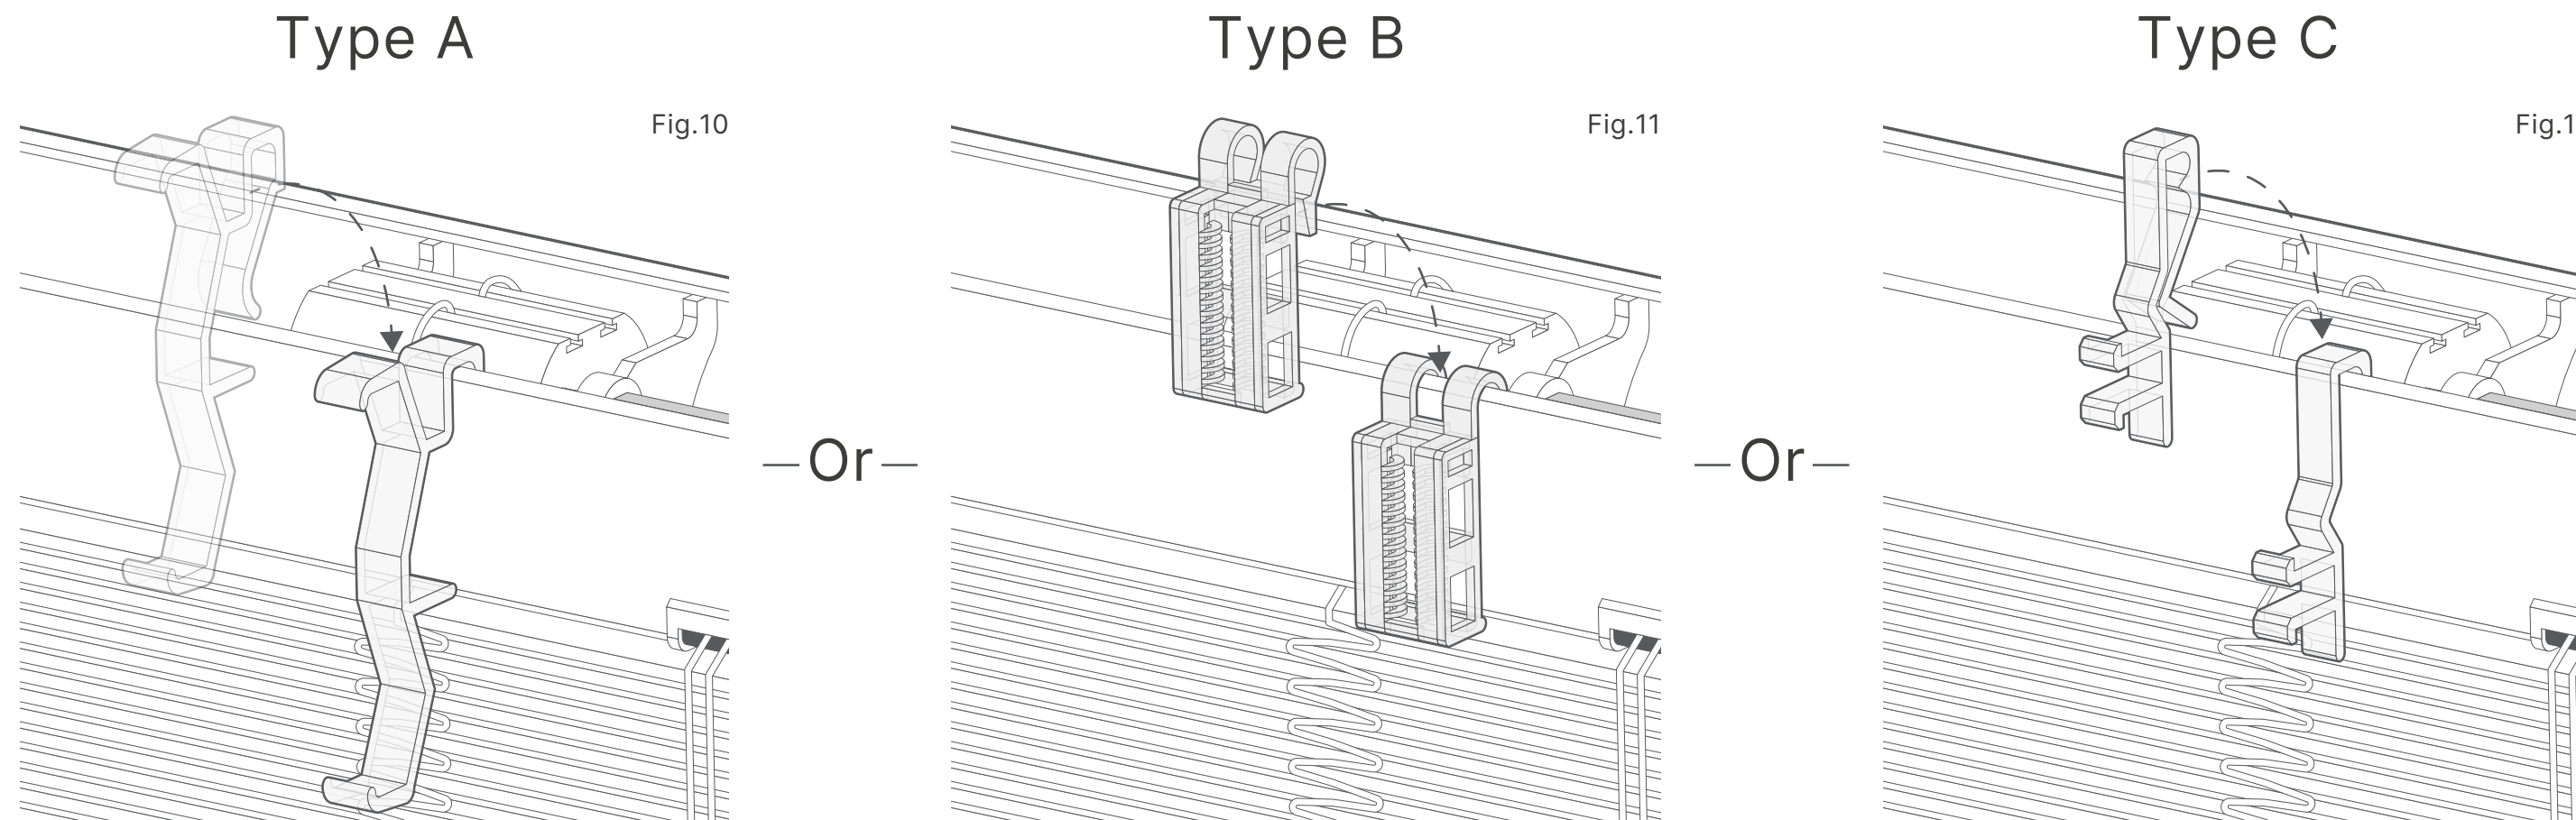

Start by hooking your pelmet clips onto the front of the blind's headrail (Fig.10 / 11 / 12). Regardless of which type of pelmet clip you've received, they all hook on in the same way.

Space the clips out evenly along the length of the headrail.

Fig.13


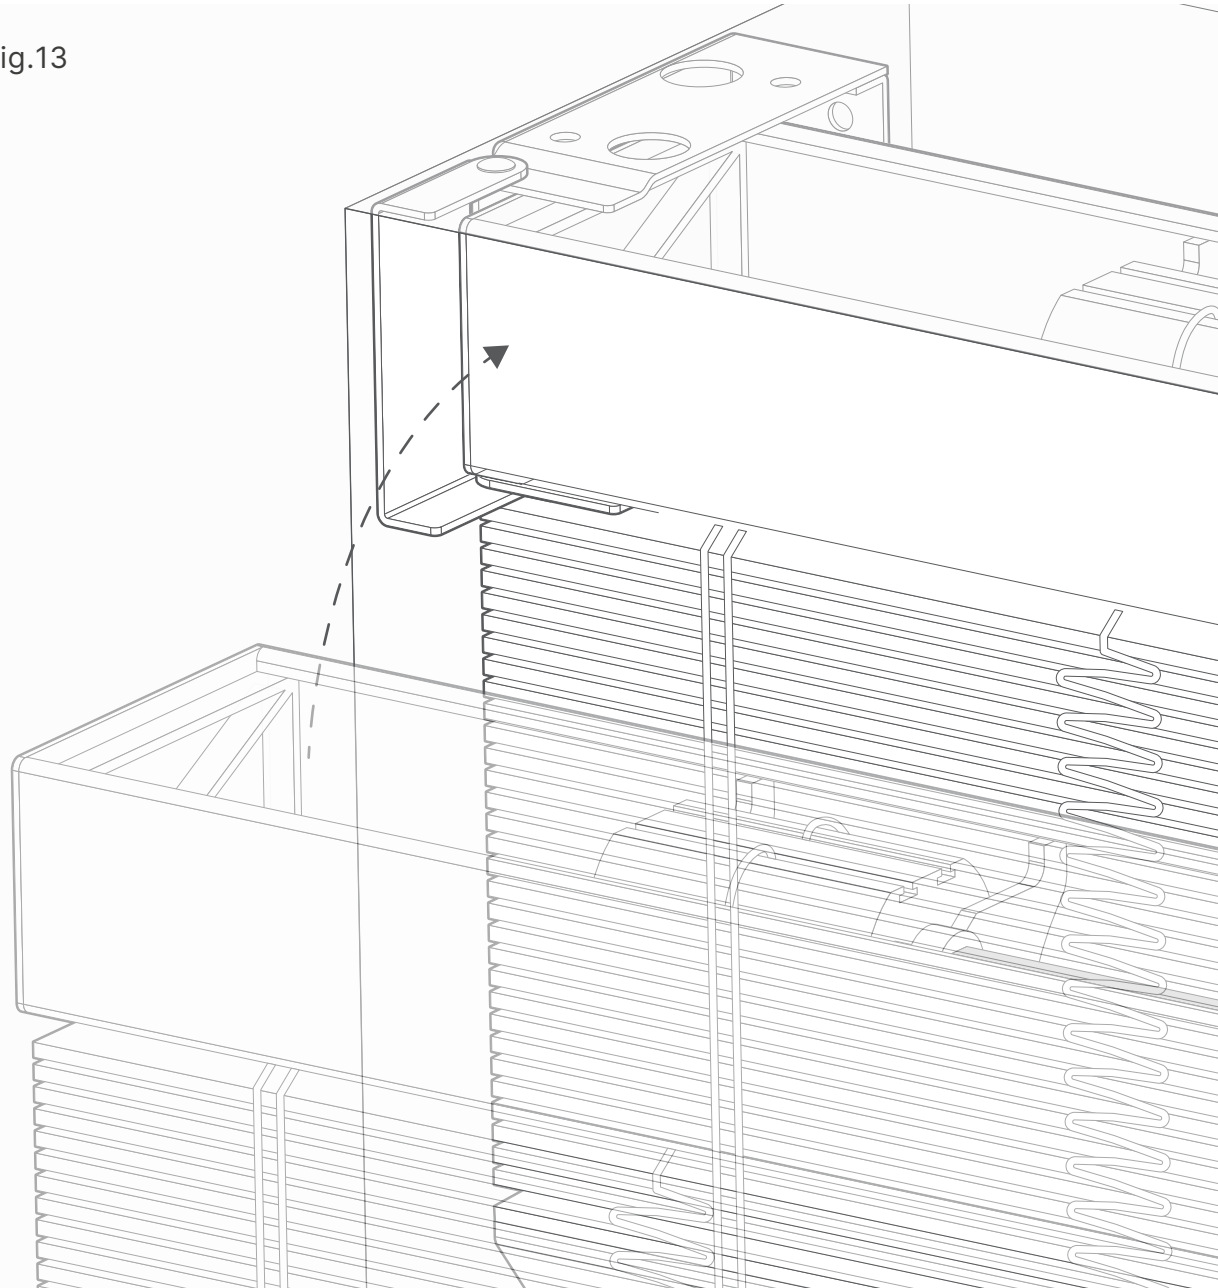


Fig.14

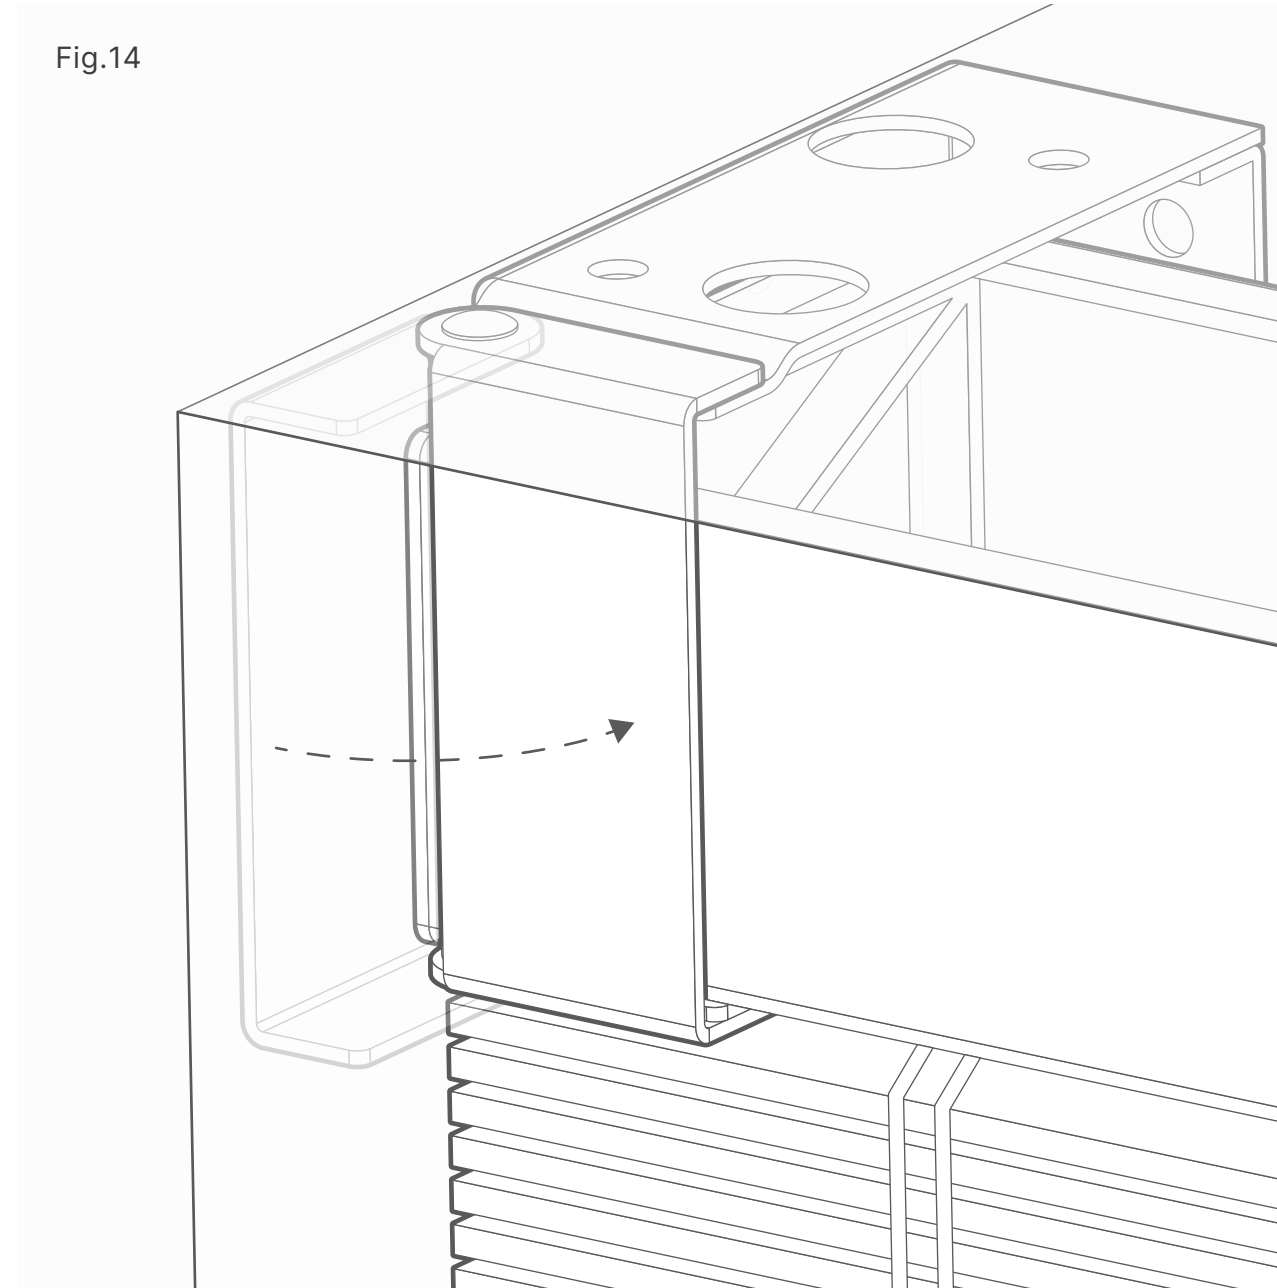

Raise the blind and slot it into the open face of the brackets (Fig.13).

Close the hinged sections of the brackets and snap them shut (Fig.14).

SECTION 4 | INSTALLING THE PELMET

Page 15 / 21

Section 4

Type A

Type B

Type C

Or

Or

Parts & tools required for this section:

Parts



- Pelmet
- Pelmet return clips
- Pelmet return screws (Type A only)

Tools

- Phillips screwdriver / Phillips driver bit

Type A Pelmet


(see page 17 for Type B, page 18 for Type C)

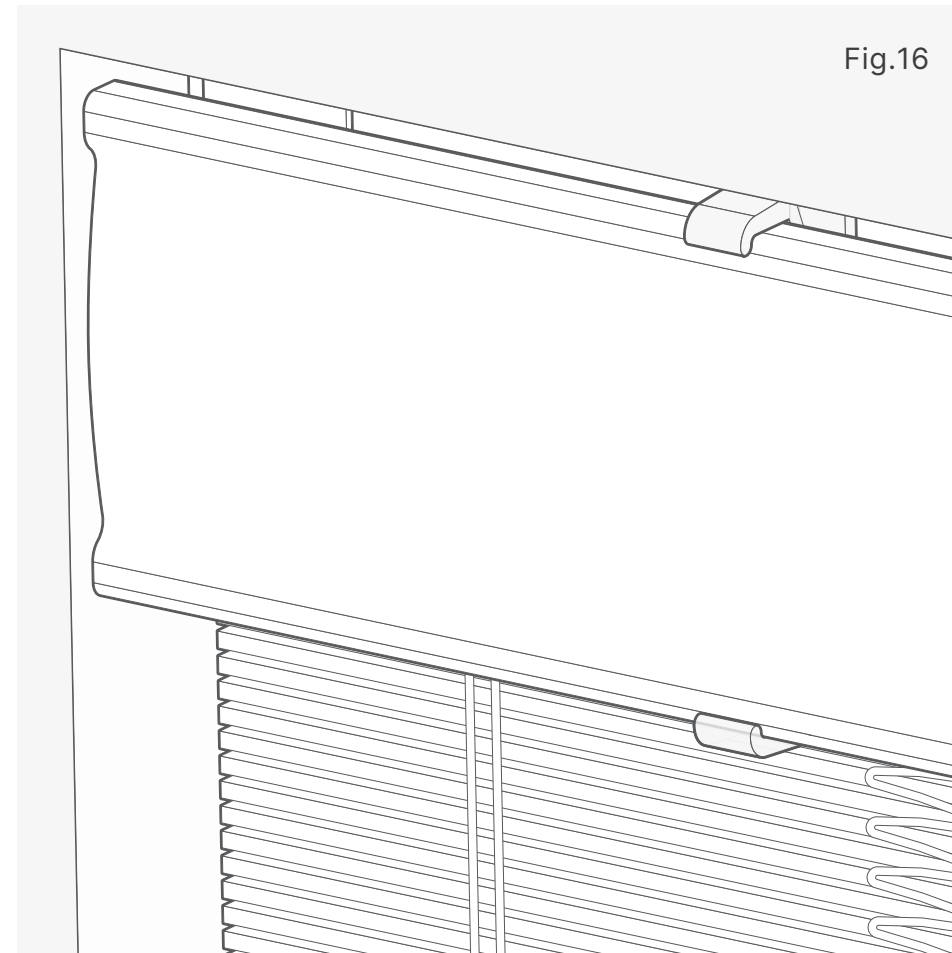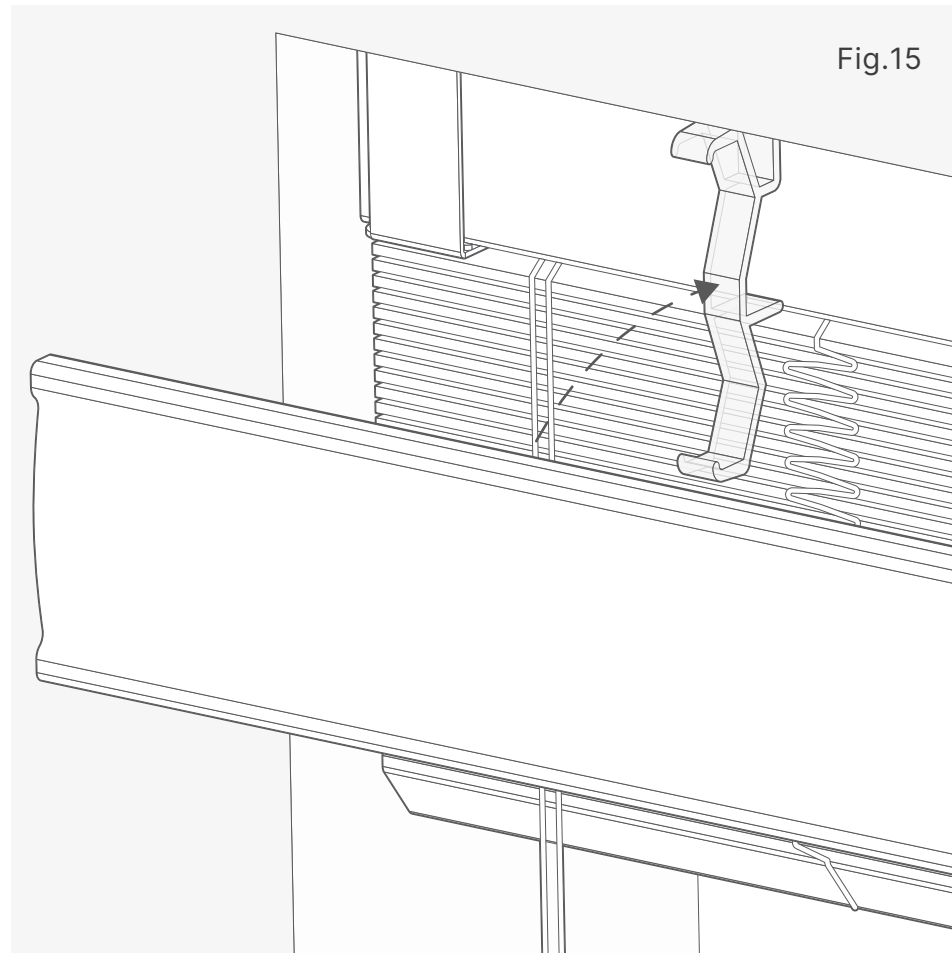

Simply slot the pelmet into the pelmet clips (Fig.15), with the flat side facing the blind. The pelmet clips will hold the top and bottom of the pelmet (Fig.16).

Type A Pelmet Returns

(only applicable if you ordered 'exact' fitting)

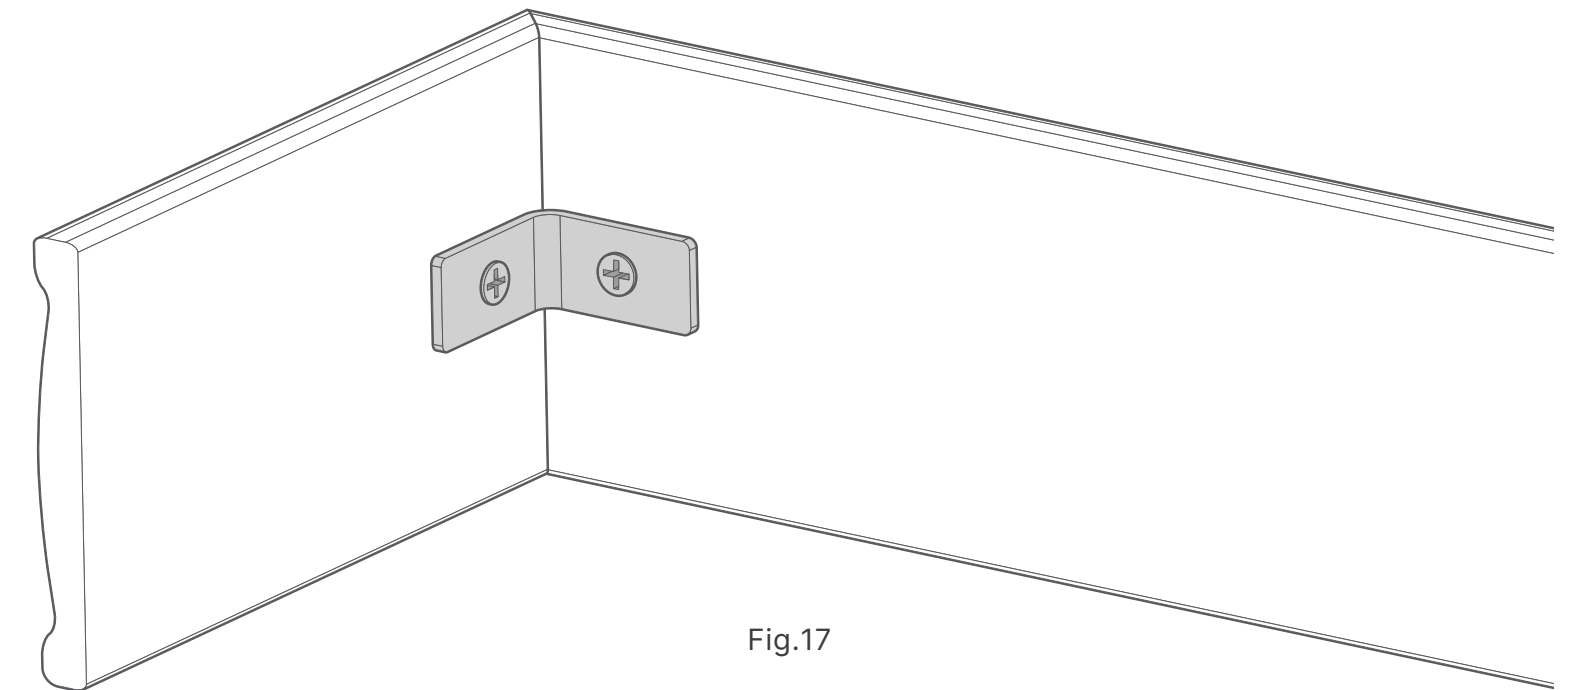

The small pelmet returns are designed to attach to the ends of the pelmet, if you are fitting the blind outside the recess, to cover the brackets. Use the return clips provided to attach the returns before fitting the pelmet (Fig.17).

Type B Pelmet

(see page 16 for Type A, page 18 for Type C)

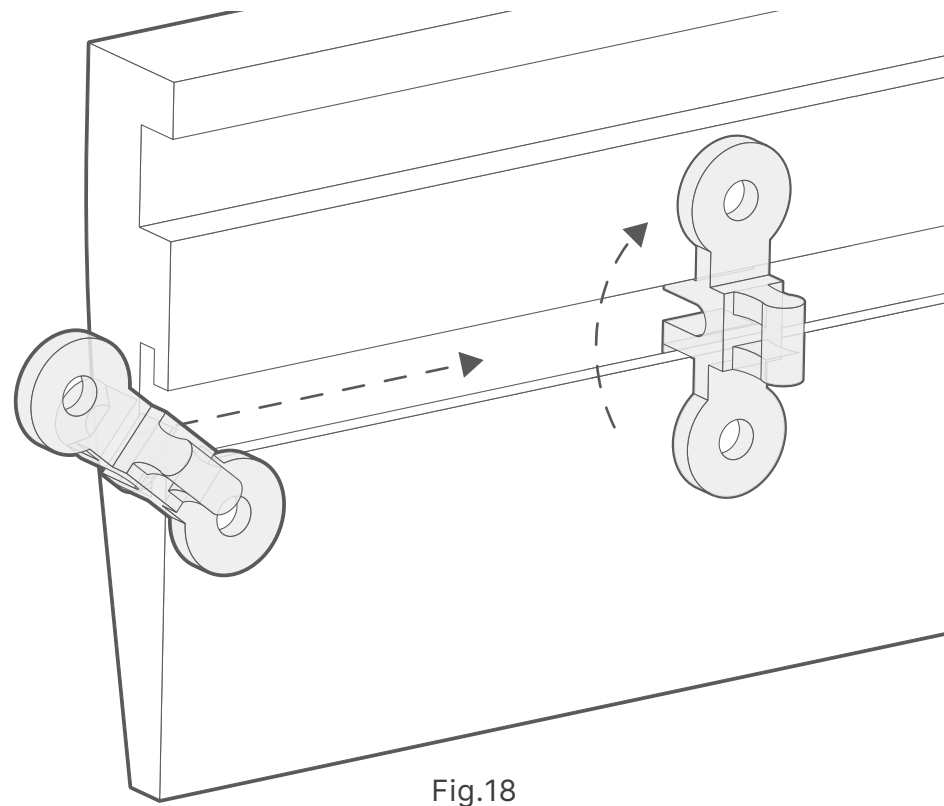


Fig.18

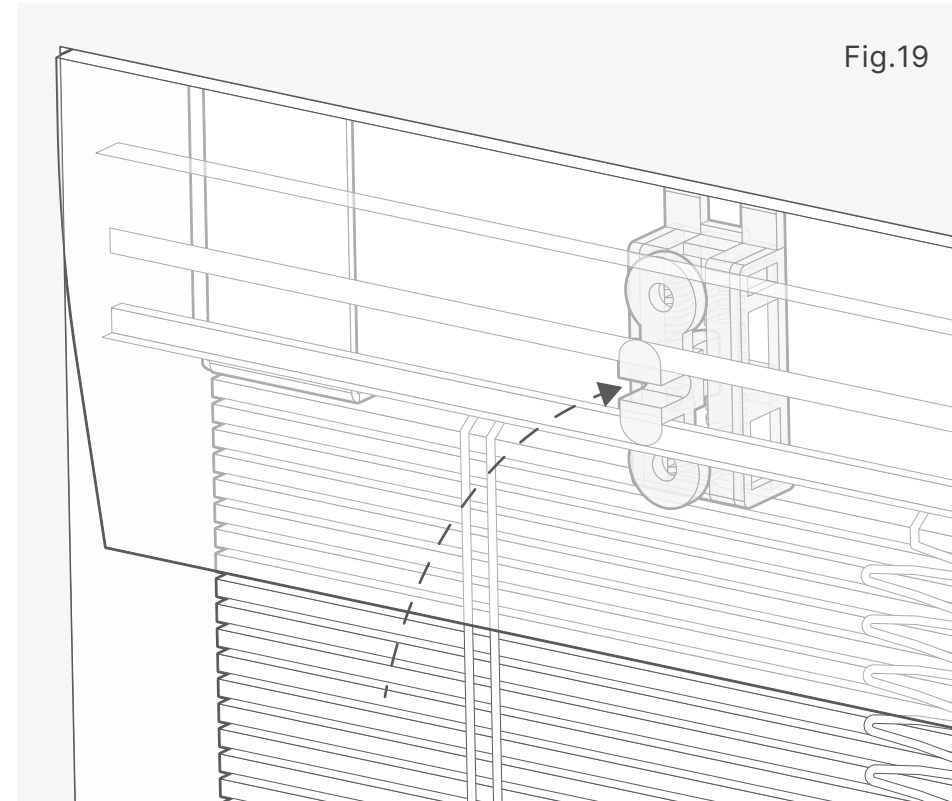


Fig.19

Slide the smaller parts of the pelmet clips into the groove on the back of the pelmet (Fig.18), spacing them out to match the clips you hooked onto the blind's headrail. Line up the clips on the back of the pelmet with the other parts hooked over the headrail and press the pelmet into place (Fig.19).

Type B Pelmet Returns

(only applicable if you ordered 'exact' fitting)

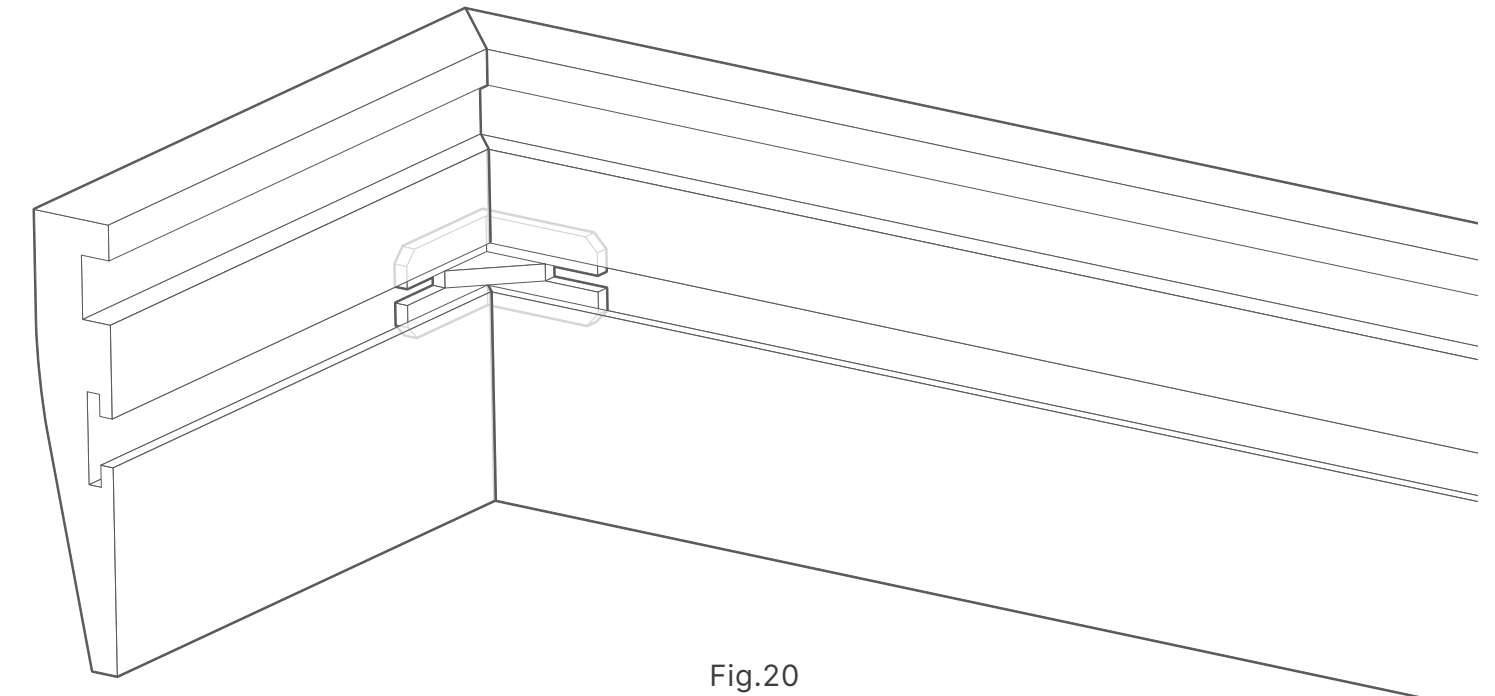


Fig.20

The small pelmet returns are designed to attach to the ends of the pelmet, if you are fitting the blind outside the recess, to cover the brackets. Use the return clips provided to attach the returns before fitting the pelmet (Fig.20).

Type C Pelmet

(see page 16 for Type A, page 17 for Type B)

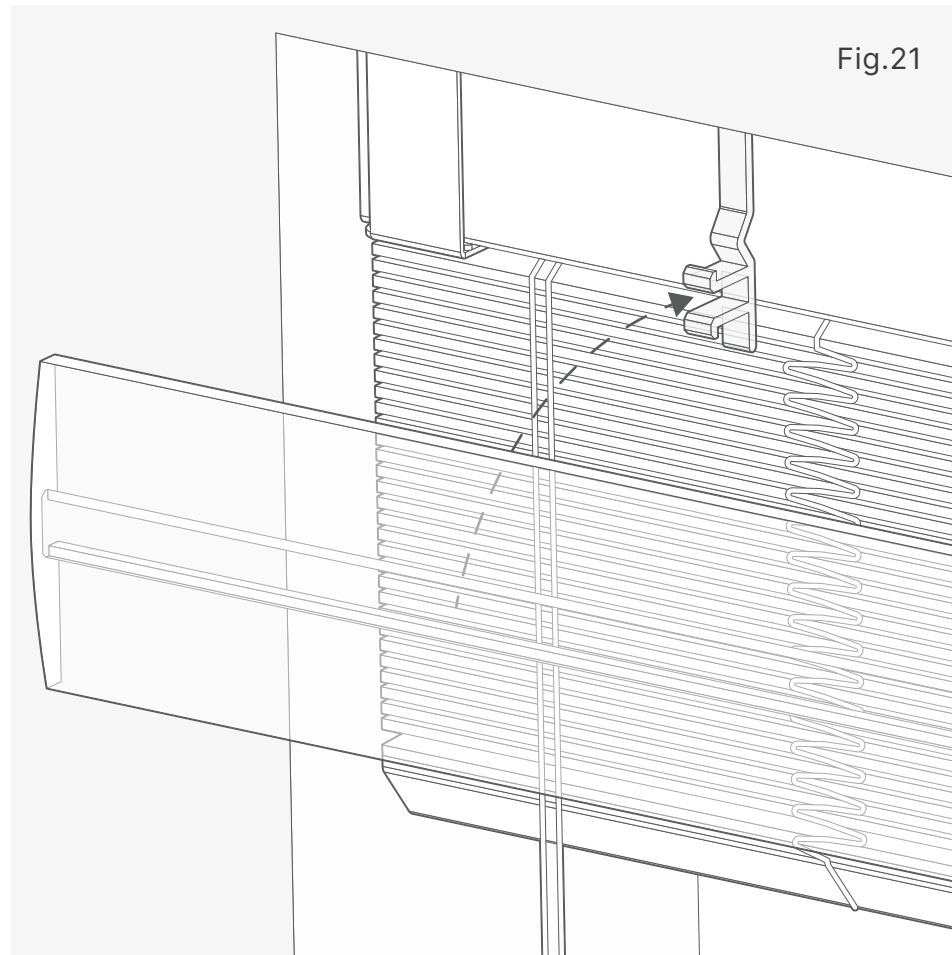


Fig.21

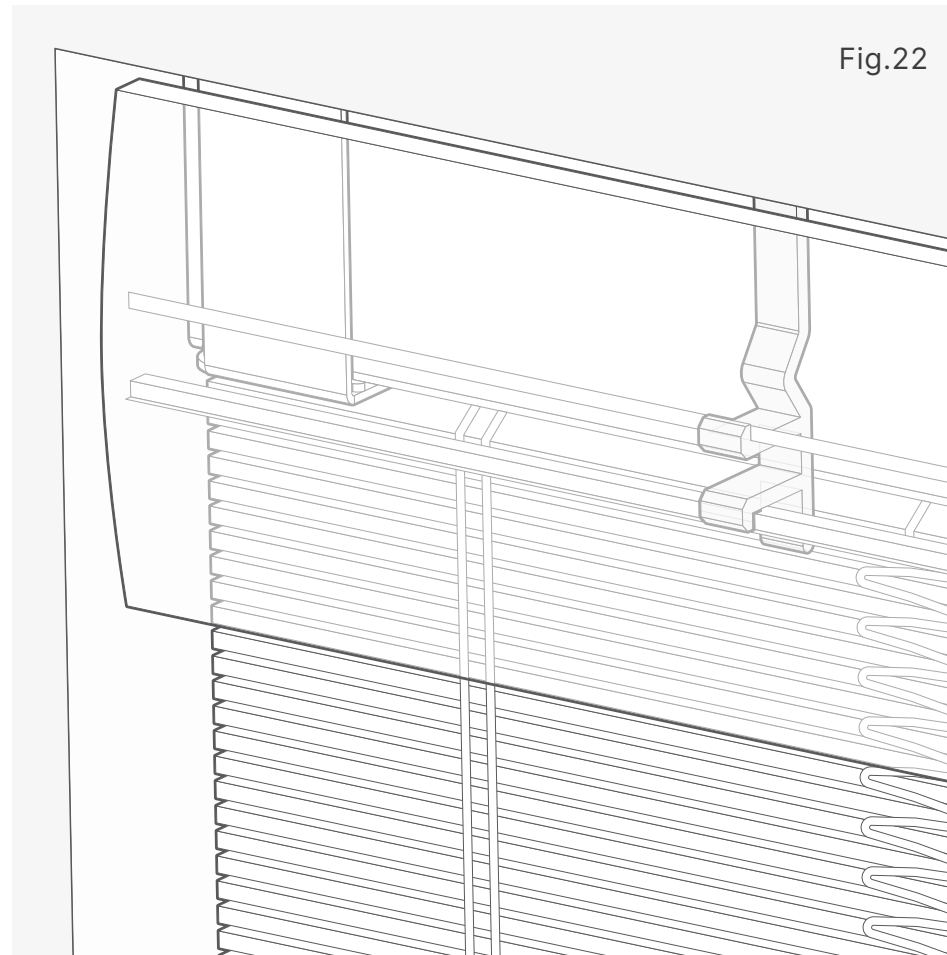


Fig.22

Raise the pelmet with the groove side facing the blind (Fig.21). Push the groove along the back of the pelmet onto the prongs on the clips until it snaps into place (Fig.22).

Type C Pelmet Returns

(only applicable if you ordered 'exact' fitting)

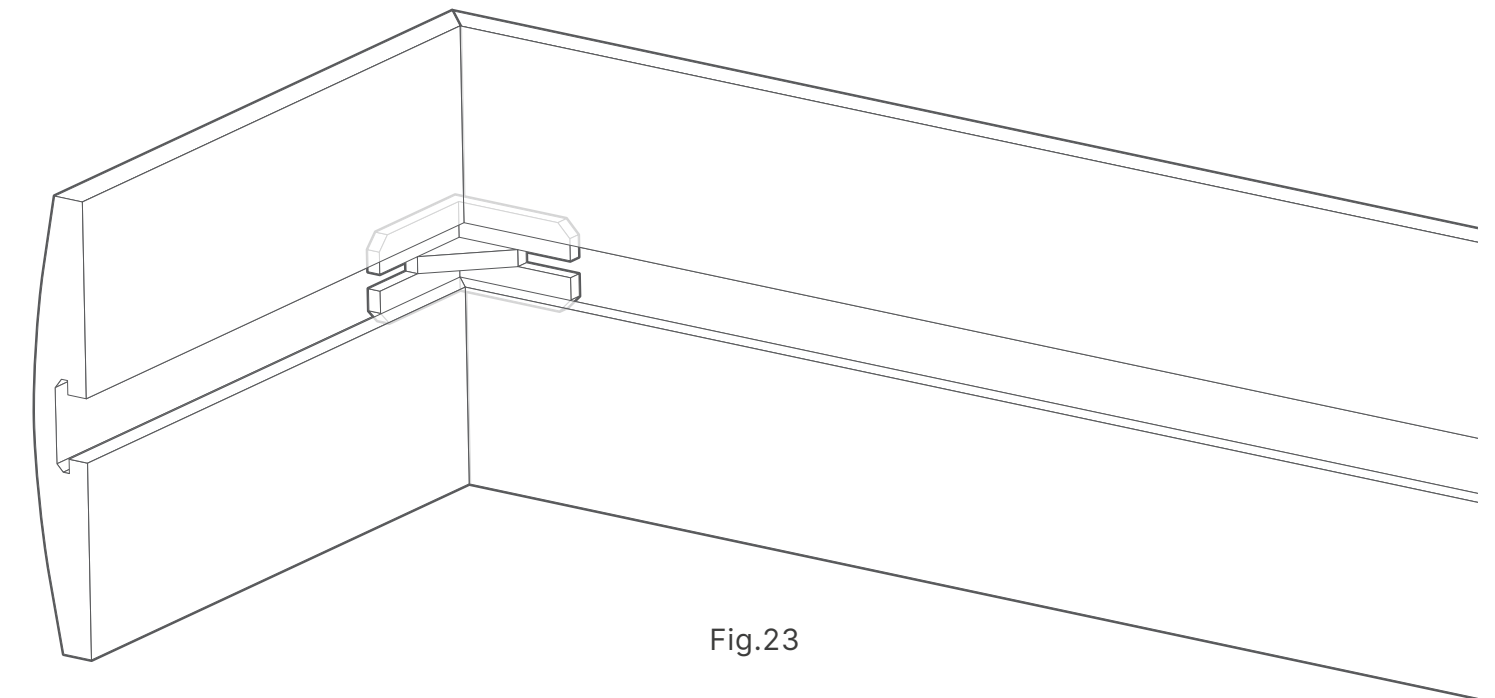


Fig.23

The small pelmet returns are designed to attach to the ends of the pelmet, if you are fitting the blind outside the recess, to cover the brackets. Use the return clips provided to attach the returns before fitting the pelmet (Fig.23).




Young children can be strangled by loops in pull cords, chains, tapes and inner cords that operate the product.


To avoid strangulation and entanglement, keep cords out of the reach of young children. Cords may become wrapped around a child's neck.

Move beds, cots and furniture away from window covering cords.

Do not tie cords together. Make sure cords do not twist and create a loop.

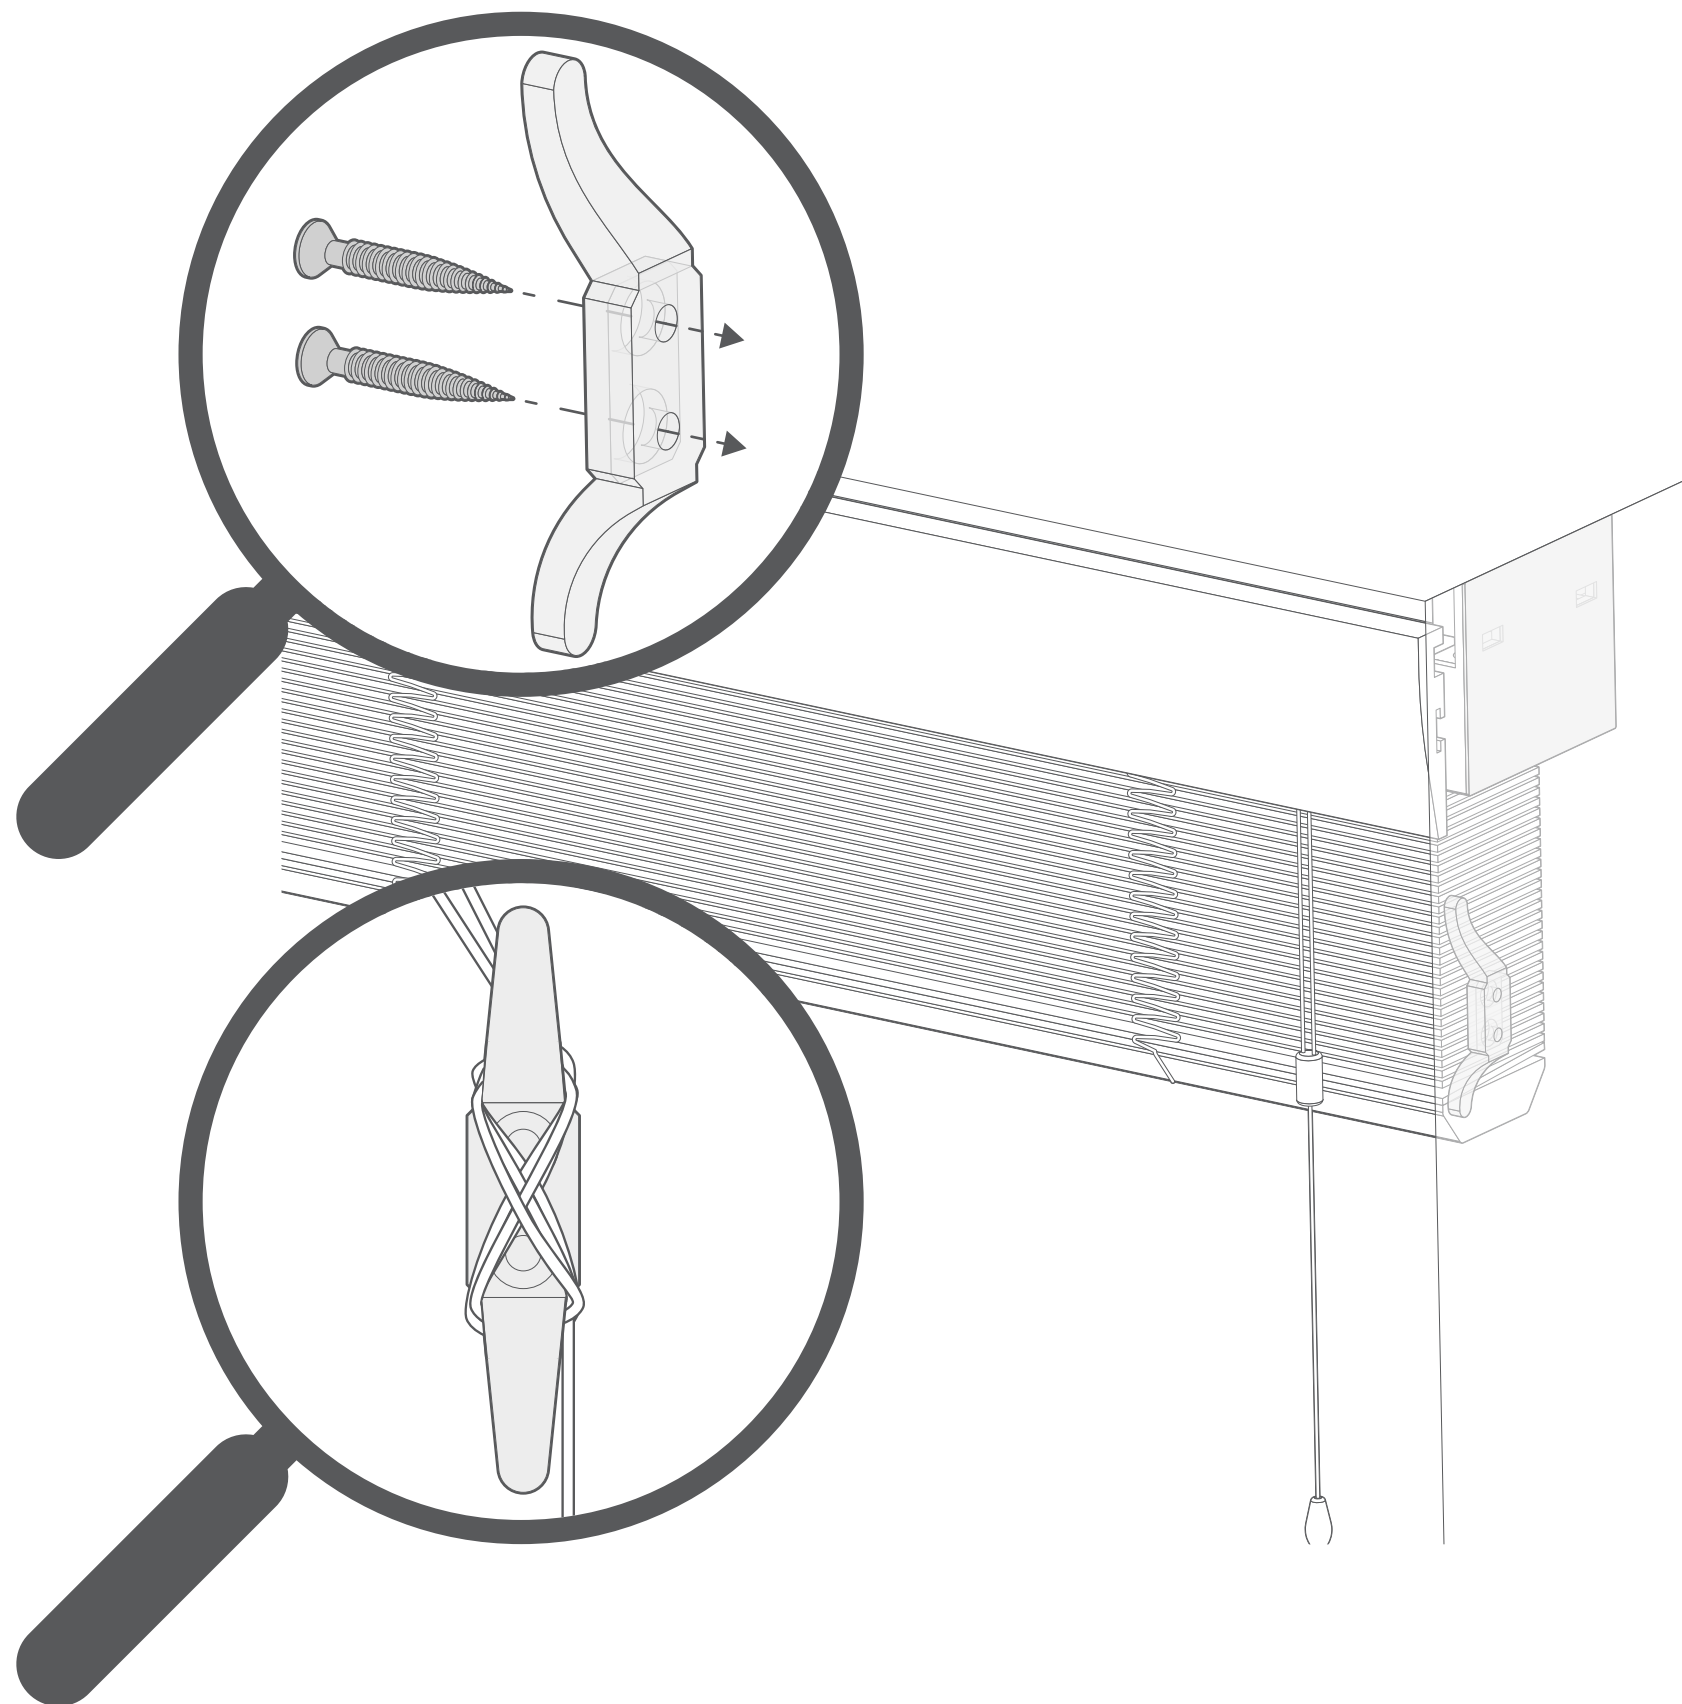

Cord safety cleat

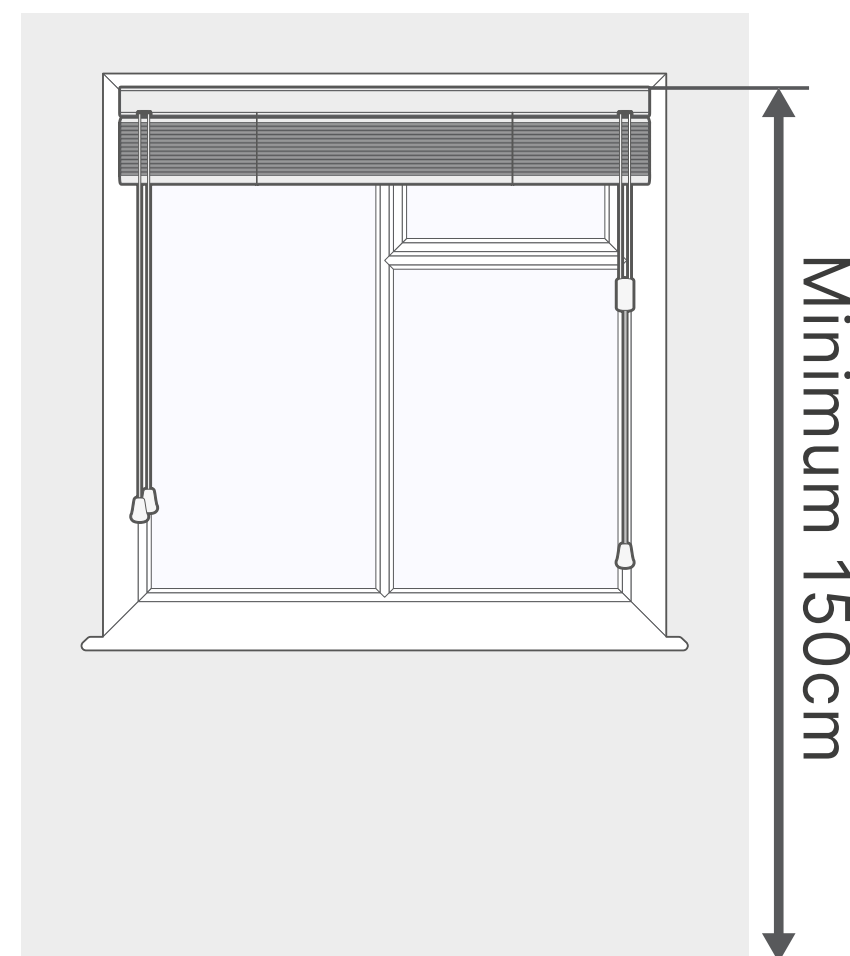

The blind is provided with a safety cleat, to wrap the lift cord around when the blind is not in use, especially when the blind is raised.

For safety reasons, always ensure that the top of the blind is installed at least 150cm (1500mm) from the floor. the safety cleat should be installed on the wall next to the blind, as close to the blind's headrail as possible.

Cord condenser

A breakaway cord condenser is pre-fitted to the lift cords so that when a horizontal force is applied to the cords above the condenser, it safely breaks away, eliminating any hazardous loops.

If the cord condenser is pulled apart:

- Untwist the cords so that they're nice and straight.
- Slot the cords into the channel in the centre of one half of the condenser. If your condenser differs slightly from the diagram, don't worry, just slot any cords that aren't already tied into place inside in the same way.
- Click the two halves back together, ensuring there is no loose thread trapped at the edges of the condenser.

